 



BATTERY DC ELECTRIC AIR PUMP

BATTERY DC ELECTRIC AIR PUMP

MODEL:8209A

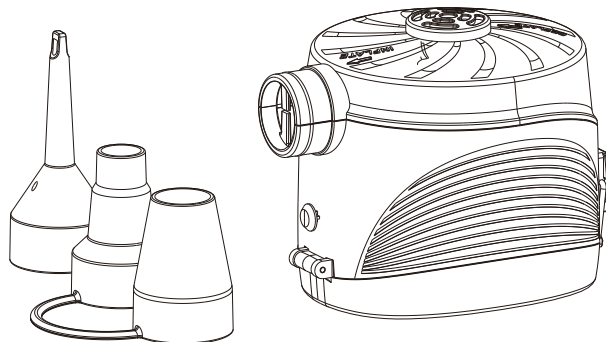

 **READ FOLLOWING INSTRUCTIONS
AND WARNINGS BEFORE USE**

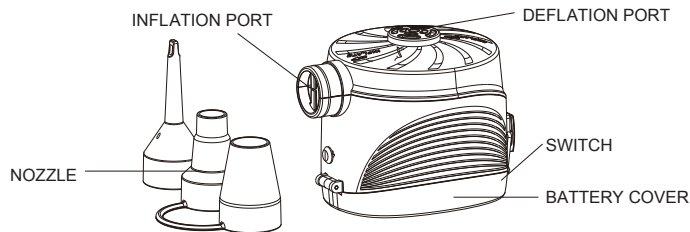

1.WARNING

- The air pump must be powered by DC 6V (4 D-cell batteries) .
- This pump is intended to inflate/deflate items,such as inflatabe,boat, air mattress, etc. It is not designed for continuous use.
- This product can deflate for compressed bags and various vacuum bags,etc.
- Keep the air pump out of the reach of children.
- Do not obstruct the inflation/deflation port and keep them ventilated all the time.
- For fast inflation and shorten the motor's working time, always use the suitable adapter according to size of valve of inflatable item.
- In order to protect the safety of users, please ask a professional to repair the air pump.
- When using the air pump, be sure to watch on the spot and cannot leave.
- Follow the inflation instructions when inflating, do not exceed the recommended pressure, otherwise the inflatable product will be filled and exploded.
- When using the air pump, please do not let hard small particles such as sand and stones near the air intake.
- When using the air pump, do not point the air inlet at the person's eyes or other parts of the body.
- Do not place the air pump in a humid place, it must be placed in a dry place.
- Never attempt to put hand of fingers into the inflation/deflation port at any time.
- When using the air pump, please rest for 5 minutes when inflate very 10 minutes.

 
2.OPERATION:

A.Inflating:


1. To begin inflating,open external topper of valve and pull it to extend out
2. Attach one of adapter nozzle to inflation end of the pump.
3. Inserting pump and forward the switch on the position " - " ,turn the switch off by pushing backward on the position " 0 " .
4. When fully inflated,seal valve by pushing in with pump nozzle to maintain seal.
5. Remove pump and close external stopper.

B.Deflating:

Remove adapter nozzle from inflation end and attach to deflation end of pump.Repeat same steps as inflation.

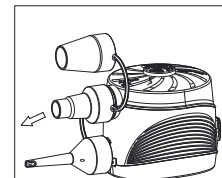

A.Inflate

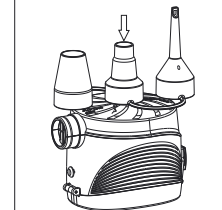 


B.Deflate

3.REPLACEMENT BATTERY

- 1.When the battery power is low, the battery needs to be replaced.
- 2.Open the battery button to open the battery cover
- 3.Take out the old battery and put in the new battery (4 D-cell batteries).

Warning:Pay attention to the "+" and "-" of the battery

 - 4.Lock the battery cover as it is.

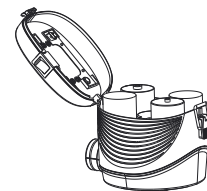

⚠ WARNING:INSTALL BATTERIES TO CORRECT POLARTY.DO NOT MIX DIFFERENT TYPES OF NEW OR USED BATTERIES .INSTALLATION BY ADULT REQUIRED DISPOSE OF BATTERIES RESPONSIBLY.DO NOT DISPOSE OF IN FIRE.KEEP OUT OF REACH OF CHILDREN.