

Instruction Manual

Technical Data

Voltage: 3.7V 300mAh, 1.11Wh
 Battery type: Lithium-ion polymer
 rechargeable battery
 Lumens: 200 Lm

Intended Use

The Flex Mag Light™ is designed for indoor lighting applications only.

Do not use in wet conditions or near flammable liquids or gases.
 Keep out of reach of children.

Supervision is required when used by inexperienced individuals.

This product should not be used by young children, the infirm, or anyone with diminished physical, sensory, or mental abilities, without supervision.

Children should never be left unsupervised with this product.

Charging

IMPORTANT: The battery is not fully charged when you receive the light. Please read all safety instructions before charging.

Separate the magnetic base to reveal the USB-C charging ports.

Insert the charging cable into the charging ports on the inside of the magnetic bases.

Plug the charging cable into a USB-A wall outlet or a charging device (such as a laptop).

Red light indicates product is charging. Green light indicates product is fully charged.

Warnings

Always read and follow all safety warnings and instructions to avoid electric shock, fire, or serious injury.

DO NOT modify or repair the light. Charge the battery only at temperatures between 39.2° F and 104° F. Charging outside this range can damage the battery and increase the risk of fire.

Keep magnets away from the ON/OFF switch as they can accidentally turn the light on and may interfere with pacemakers.

To avoid electric shock, do not immerse the charging base in water or other liquids.

This device is not a toy. Keep it out of reach of children and supervise its use near them. Use only as described in the manual with manufacturer-recommended attachments.

DO NOT use the light if it's damaged or not functioning properly. Return it to a service center if needed.

DO NOT incinerate the light, even if damaged, as the batteries can explode.

Handle the charging cord carefully: **DO NOT** pull, twist, or wrap it around sharp edges, and keep it away from hot surfaces.

Unplug the charger by holding the plug, not the cord, and do not handle it with wet hands.




Only use the provided charge lead and a suitable Class 2 power supply.

Unplug the charger before cleaning or maintenance.

Battery leaks can occur under extreme conditions.

Parts

- 1 LED lights
- 2 Flexible cable
- 3 Magnetic base
- 4 Magnet connectors
- 5 Charging port
- 6 Charging cord
- 7 Power button
- 8 Charge indicator lights

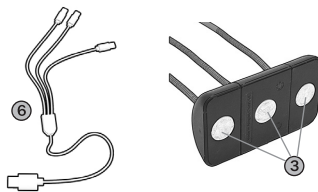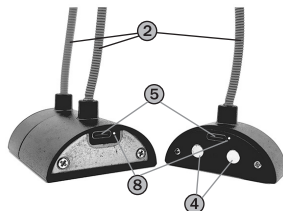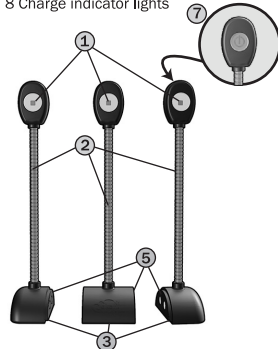

INVENTIONLAND™
 Innovation delivered®



Do you have a new product idea? Call Daison:
 1-800-54ideas

©MMXXIV Jokari/US, Inc.
 1220 Champion Cir
 Carrollton, TX 75006 USA
 800-669-1718

www.jokari.com