

 
SHARKCROC SPEEDBOAT

Item# 17017-B

Recommended for ages 5+
Please read and follow this instruction manual.
Do not give this vehicle to a child under 5 years of age.
Adult supervision Required.

Battery information:

Charge the 3.7V battery using the USB chord (included) and a USB outlet (not included). Please charge for 90 minutes. A red light on the chord will be lit while charging. When the light turns off, the battery will be fully charged. Play time of a fully charged battery is 20 mins. Open the hatch of the boat by turning the lever lock to the left, and lifting th hatch open. Insert and plug charged 3.7V battery into vehicle. Once battery is plugged in, Insert the hatch of the boat into the top of the base at 45 degrees, push it in and foward. Lock the hatch. Open the battery compartment on the side of the remote control. Insert 2 x AA batteries (not included) Close the battery compartment. Once the vehicle and the remote have working batteries, turn the ON/OFF button on the side of the remote control to ON. Put the boat on water, and it will turn on. Please note that boat wont work until it is in the water.

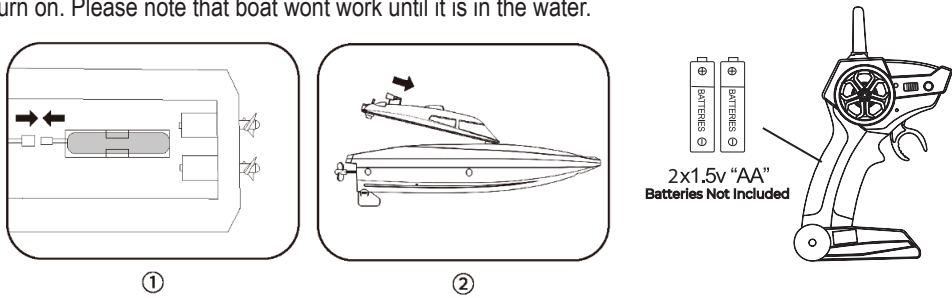


Battery Safety Information:

Only adults should install and replace batteries.
Switch toy and remote to OFF before opening battery compartments.
Insert batteries correctly. Match positive+ and negative- signs.
Alkaline batteries are recommended for best performance.
Rechargeable batteries are not recommended.
If rechargeableare used, they are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the product before they are charged.
Do not recharge non-rechargeable batteries.
Only use batteries specified.
Only use batteries of the same or equivalent type that are recommended for use.
Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (nickel-cadium).
Do not mix old and new batteries.
Remove the batteries during long periods of non-use.
Always remove exhausted batteries from toy, and dispose responsibly.
Battery leakage and corrosion can damage this product.
Dispose of batteries safely. Recycle where available.
Do not dispose of batteries in a fire or attempt to open the outer casing.
Never short-circuit the battery terminals.
Do not immerse remote control in water.


WARNING:
Never allow young children to play in or around water without adult supervision.

How to play:


Turn the switch on the remote control from OFF to ON.
When the boat is in the water, the boat and remote will automatically sync and connect. The trigger on the remote controls your speed and your “forward and reverse” drive. press the trigger towards you to forward and pull the trigger backwards to go on reverse. The speed will depend on how hard you push or pull the trigger. Use the round dial to turn left or right. If the vehicle cannot run in a straight line, please use the trimmer dial under the vehicle for adjustment. Always keep the boat within 150 feet to avoid control loss. A fully charged battery will run for up to 20 minutes. Avoid hitting obstacles to prevent strikes or capsize. Please avoid objects such as weeds to avoid being trapped. When you are finish driving, please remember to turn off both the remote and vehicle. If you are planning to not use the vehicle for a long time, please remove the batteries from remote and vehicle. Do not put the remote on water to avoid damaging the electronics components. Do not expose the vehicle to high temperatures or direct sunlight.

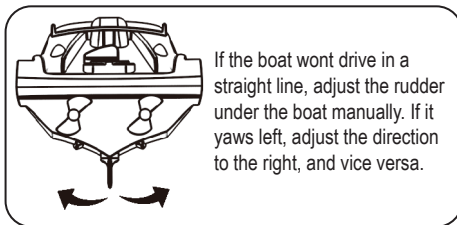

Shark mode:

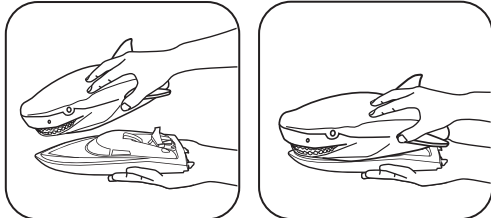


Croc mode:

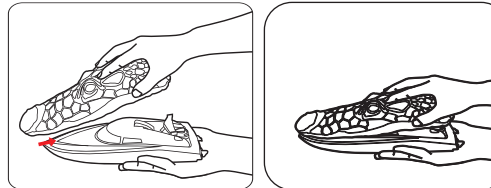

Put the Shark or Croc head over and around the head of the boat.

Press the back of the Shark or Croc head down and let it buckle with the tail of the boat. To remove, pull the back of the shark head upward and separate it form the tail of the boat

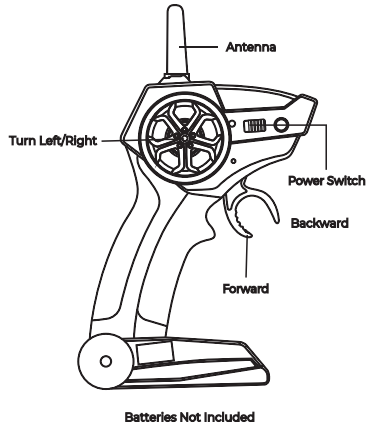

Jupiter Creations

© 2024 Jupiter Creations, Inc. All rights reserved
www.jupitercreations.com

2.4
GHZ

RC

