 




Prospera Panther™ Massager
Model: DL001

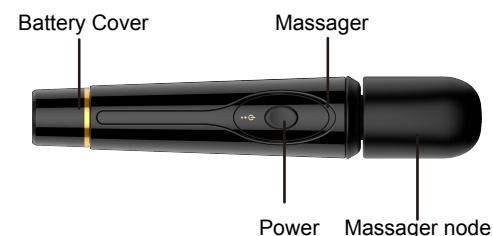

【 User Manual 】



※ Read this manual thoroughly before first use, even you are familiar with this product.

Thank you for buying our products.
Please always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:
A massage session shall not exceed 15min.
3 times maximum per day in the same area.

PRODUCT DETAILS

Brand Name:	Prospera	Place of Origin:	China
Model Number:	DL001	Product size:	W44*D25*H230mm
Model Panther™ Massager		Product weight:	About 200g
		Power:	2AA batteries (not included)

Website: www.prosperacorp.com

Operation Steps see next page.
Please be aware the illustrating product drawing and images are from a similar massager.
The same principles shall be applied to DL001 Panther Massager.

PLEASE CHECK THE FOLLOWING IN THE EVENT OF A MALFUNCTION:

The following will result in the massager not working even the power button is switched on.

1. Be sure to insert batteries correctly +/- polarity correctly. Incorrect installation of the battery may damage the device.
2. The battery cover is not tight.

WARNING:

1. If the device is not to be used for a long time, remove the batteries to prevent damage due to battery leakage.
2. Replace the batteries if massage intensity is weak.
3. Do not replace the batteries while the machine is working.

RATING LABEL:


DL001
DC 3.0V IPX7
2AA (not included)
UPC: 185277000585
Serial: (pls assign your production #)
Made in China



The following product drawing and images are from a similar massager.
The same principles shall be applied to DL001 Panther Massager.

BATTERY INSTALLATION/REPLACEMENT

 1. Turn the battery cover off in a clockwise direction.
2. Install 2AA batteries into the unit as the picture shows.

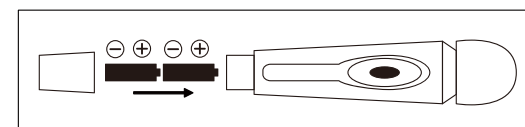

3. Screw the cover tightly.



● The product cannot be started normally when the battery cover is not tightened.



USING YOUR MASSAGER

1. Press the POWER button to turn the Massager on. The device will start massaging at a lower intensity vibration.
2. Press the POWER button at a second time in order to switch on to the high intensity mode.
3. Press the POWER button at a third time to stop operation.



※ Do not deliberately turn the massage nodes around, it may damage the machine.



● Do not massage the same position for more than 3 minutes. The stimulation of overload might be counter-productive.

WASHING INSTRUCTIONS

- Try to use dry cloth to clean the product.
- If you can not clean dirt off massager, try diluted detergent and wipe it again.
- Do not use any strong detergents or corrosive chemicals for cleaning, as they may damage the surface of the unit.



ABOUT WATERPROOF

 
Be sure to tighten the battery cover before use.
This product has an IPX7 waterproof grade.



● Failure to tighten the battery cover may cause a product failure due to internal water inflow.

USING DEMONSTRATION

Use Panther massager on face, scalp, below and other delicate areas.

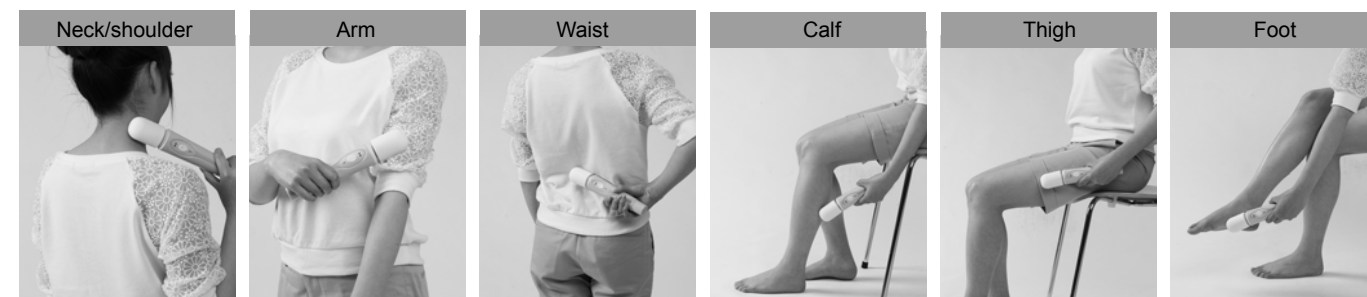

● Do not massage the same position for more than 3 minutes. The stimulation of overload might have a side effect.