

Thank you for purchasing this product! In order to use this product correctly, please read this manual before use; in order to read the manual at any time when you need it, please keep this manual in a safe place. About this manual:

The product pictures and related product features shown in this manual, as well as some nouns, can only be used as a reference. The user will use the actual product as the standard, and the referenced data comes from the company's laboratory.

Safety Precautions

Be sure to read the safety precautions before use. Please use this product correctly according to the contents

and recommendations of the manual. The product should be cleaned in time after use to avoid

accumulation of grease and its residues.



Caution result in personal safety or property damage O Danger

- Please use the charging cable supplied with this product and the charger that meets the product requirements to charge, and properly connect the charger plug to the household socket to avoid malfunctionor fire caused by heat
- Since this product has a built-in rechargeable battery do not put it in a fire or use it in a high temperature environment. which may cause malfunctionor fire due to heat.
 - If the product is deformed, damaged, or smelly, do not use it to avoid the risk of electric shock and fire.

⚠ Caution

- To prevent the occurrence of danger, do not use it with
- It is strictly forbidden to use a person who has undergone cardiac surgery or a medical electronic device such as a pacemaker or an embedded defibrillator placed inside the
- Do not use this product if you are allergic to metal.

this product yourself. . If the machine is damaged, in order to avoid danger, it must

To avoid malfunction, please do not disassemble or modify

- be repaired by the manufacturer, its maintenance departmen or a specialist in a similar department.
- Do not use this product (such as alcohol, benzine, spray, etc.). near flammable or explosive materials, which may result in
- Supervise children to make sure they don't play with the
- Place packaging materials such as plastic bags where children can't reach them.
- . Please turn off the power before cleaning and maintenance. . In the event of a malfunction in use, please shut down and contact the factory after sale.
- Please avoid falling and hitting the product to avoid
- To avoid malfunction or fire due to heat, please do not use this product for purposes other than those specified in this
- When using, if the product is abnormally hot, please stop using it immediately and shut it down to avoid burns.
- Do not use the machine if it is faulty. Using this product in a faulty state may have adverse effects on the body or other
- Please do not use it on skin parts with wounds. This product is not intended for use by persons with physical
- sensory or mental problems or for lack of experience and knowledge (including children) unless supervised by a guardian and guided by the use of the product and is
- responsible for the safety of the user. Do not immerse the appliance in water.
- If you feel any discomfort in your skin or body, stop using it
- Please do not store this product in a humid environment. Do not use this product in the following situations: -During pregnancy, lactating or menstruating women. People with allergies have skin diseases, skin nflammation
- skin irritation or other skin diseases, and severe sunburn - People with skin damage, wetness, swelling, etc. - The group that is just recovering after surgery.
- When you are unwell or have a fever. - When drinking or taking drugs.

Introduction

This is a comprehensive personal skin care beauty instrume that combines skin cleansing nutrient introduction

When used, it can be combined with skin care products such as cream or essence to achieve a scientific and efficient skin-beautifying effect.

The product is exquisite and beautiful in design, easy to opera and easy to carry, making it ideal for home skin care. Part Identification



How to Use

- or the first time, please fully charge the machine before using it . Connect the machine to the charging cable and charger, and plug in the household power socket;
- . During charging, the charging indicator lights up red; When fully charged, the charging indicator is off;
- Charging time takes about 3 hours: Fully charged for about 15 days (10 minutes a day);
- The number of days used will vary somewhat depending on usage.



[Preparation before Use]

· Prepare skin care products such as essential essences and cleanser Remove makeup according to the daily makeup removal procedure

Clean the shovel with a moist cotton pad.

[Cleansing] 1 Apply cleanser or water to the skin (Figure 1).

> this time, the work indicator light is on, the shovel piece emits vibration sound, and the *For deep cleansing skin, press lead out key(the red indicating light will on), it is in deep cleansing mode

2. Press the switch to turn on the power. At



- etc. on the skin are cleaned out to the skin with water. 4. Press and hold the key for two seconds to shut down.
- 5. Wipe the water or cleanseron the skin with a cotton pad of a clean cloth.

[Nutritional skin care]

- Take a proper amount of beauty lotion or beauty gel and apply it on the face, neck and other areas to be treated. (Figure 3)
- Choose the right skin care mode according to nutrition lead-in mode: Press the switch to turn on the power. At this time, the work
- ribration sound, and the cleansing function unction starts. on nutrition lead-in mode: Press the lead in key after turn on the device, the indicating light will on.
- Reverse the shovel (the shovel's fold down, as shown in Figure 4), and hold the machine to apply the shovel to the ski

- *When using the shovel should be used at an angle of about 45 degrees to the skin surface.
- *Please do not use this product in the larynx, eyeball, mucous membranes, etc. ※ (Face) Care should be taken on both the left and right sides;
- the back neck and other parts can also be used. *Do not stop at somewhere on the face when using it, it should move slowly.







From the chin, consciously lift the skin.

Key Points





Carefully lift the skin from bottom to top for maintenance.

ead to the hairline.



----Key Points face gently to the areas that

Press switch button twice again to turn off.

After the nursing, if there is residual nutrients on the face.

it can be wiped or cleaned.

Fault Resolution

Situation	Possible Reason	Measure		
Sudden shutdown during use		Please contact after-sales department for replacement or repair		
	The battery is not fully charged	Fully charge and use it again		
, the charging	host and plug are not connected.	Reconnect the host and charger		
	The battery goes into standby.	It is normal for the battery to be recharg for 6-30 minutes. It needs to be fully charged before use.		
Shovel without vibration	Loose internal lines	Please contact after-sales departme for replacement or repair		
	Shovel deformation damage	Please contact after-sales departmen for repair		
machine does not start	Low battery	Fully charge the host and use it again		

DL022 Panther Ultrasonic Facial Massager

— Operation Manual —

Maintenance

- Please turn off the power before cleaning.
- Protect the appliance from moisture and do not place the materials. appliance in a dishwasher or microwave oven.
- The machine should not be rinsed with water. It can be cleaned with a soft damp cloth and wined with a soft dry cloth
- Do not use sharp or corrosive, volatile thinner cleaners.
- Do not shake the stainless steel shovel or check it by hand when cleaning.

After-sales

- This appliance is intended for personal use only and is not suitable for commercial use. We offer a one-year warranty on the product, which is
- calculated from the date of purchase. During the warranty period, we will replace parts or the entire product due to the material or the production process.

To apply for a warranty, the product must be shipped to an authorized Kskin repair station or factory along with a certificate (purchase invoice) that proves the date of purchase

- The company does not guarantee the following conditions: --Damage caused by improper use, such as using the wrong power supply, inserting the product into an improper socket, man-made damage, etc.
- --The product caused by normal use is aging and wear, but it has little effect on the function of the product.
- or non-professional repairs or the use of accessories other than the company.
- --Consumables or bonus accessories -- Damage caused by force majeure factors (such as lightning,
- · After-sales service does not include damage caused by the above reasons.

The marking on this product or packaging material or accessory indicates that the material is made from a recyclable material. Separate waste into different recycling levels to facilitate the recycling of useful

-The hattery should be disposed of safely. --Users cannot replace the battery by themselves

-- Pull out the battery leads and remove the battery.

Environmental Protection

The symbol on this product or in the instruction waste at the end of its useful life.

according to the classification of waste. --Product problems caused by other uses, or improper handling Specification

Product Name: Ultrasonic Skin Scrubber Model:ML022 Voltage:3.7V == Rated Power: 3.0W Net Weight: 84g

the product specifications, the actual goods are subject to

earthquakes, fires, floods, etc.). Charging Power Supply: 5V==1A Product Dimensions: 174x46x19mm Packing List: 1 main unit, 1 charging cable, 1 manual.

Waste Treatment

There is a lithium battery inside the appliance, therefore:

--The battery must be removed from the appliance before it: --When removing the battery, the appliance must be turned off;

Steps to remove the battery: -Use the tool to pry the front cover of the product;

manual or on the packaging indicates that this product cannot be disposed of as general household

Please consult your local government for recycling

Prospera develops high quality, innovative, and affordable massage products, ranging anywherefrom electronic pulse massagers to jade massagers. Prospera's products are available through leading department stores, consumer electronics stores, and major online retailers. Learn more about Prospera at www prosperacorn com

For warranty service, please call 925-292-5978, M-F.

service request to this address:

Prospera Corporation

392 West Larch Road # 31

Warranty Service

Tracv. CA 95304

About Prospera

8:00am to 4:00pm. Pacific Standard Time. Or send email.

to sales@prosperacorp.com.Consumer.may.also.mail

Prospera Corporation Note: In view of the consistent policy of continuous improve 392 West Larch Road # 31 ment of products, the company reserves the right to change

Tracy CA 95304 Tel: (925) 292 5978 Email:sales@prosperacorp.com

prospera

Warranty Registration Form

Product Model: _____ Purchase Price: _____

,			

Signature and date: ____

392 West Larch Road # 31 Email:sales@prosperacorp.com

Warranty card

Product Name: _____

Date of Purchase: ______ Retailer: _____

Prospera Corporation Tel: (925) 292 5978

Tracy, CA 95304