
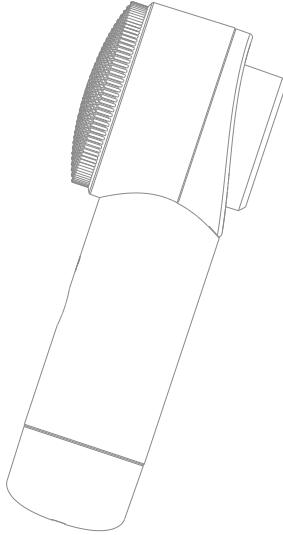 
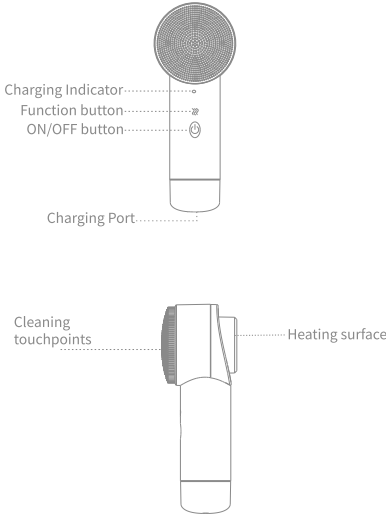 
 




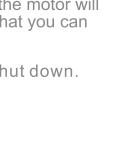 


<div><div></div><div>DL033 2 in 1 Warm Facial Cleansing Brush</div><div>Operation Manual</div></div> <div></div> <div><div>Introduction</div><p>Prospera` s 2 in 1 Warm Facial Cleansing Brush, is an elegant and quick tool for you to wash away dirt, oil, and makeup residue from the deep pores. It uses high micro-frequency vibration, to reduce blockage and lays a solid absorption foundation for subsequent skin care. Use a warm compress on the back side to help improve blood circulation and promote essence absorption. The facial brush is waterproof and is safe for use in the bathroom.</p></div>	<div><div>Content</div><div><div>CONTENTS</div><div><div>Part Identification 2</div><div>Operation 3</div><div>Maintenance 5</div><div>Specification 6</div><div>Consumer Warranty 6</div><div>Warranty Card 7</div></div></div></div> <div>1</div>	<div><div>Part Identification</div><div></div><div><div>Button Operation</div><ul style="list-style-type: none">Short press the On/Off button for 1 second to start the device, and then long press the button for 2 seconds to turn off the device.Short press the On/Off button after startup to adjust different vibration intensity, 5 levels in total (default for startup is level 3).After the device is turned on, short press the function button to turn on/off the thermal massage function.</div></div> <div>2</div>	<div><div>Operation</div><div><div>Charging and usage times</div><p>When using it for the first time (for the first time or not used for a long time), please make sure to charge it first. And confirm that it has been fully charged (Charging indicator green light .) before use.</p><ul style="list-style-type: none">Insert the one socket of the charging line into the charging port of the device and the other socket into the USB port of the charger.During charging, the charging indicator white light flashes, when fully charged, the charging indicator green light .Charging time takes about 3 hours;It can be used for 20 days after being fully charged (5 minutes per day);The usage time will vary depending on usage.</div><div></div><div><div>Preparation before use</div><ul style="list-style-type: none">Prepare a common facial cleanser.Rinse the cleanser with water.Remove makeup according to the daily makeup removal procedure.</div></div> <div>3</div>
---	---	---	---

<div><div><div><div><div>【01 Apply cleanser】</div><p>After moisturizing the face, apply cleanser and turn on the cleansing device, and choose the right working mode and vibration intensity.</p></div><div></div></div><div><div><div>【02 Cleansing】</div><p>15 seconds each on the cheek -- from the bottom up; Forehead 15 seconds -- Swipe from the middle to both sides; 15 seconds around the nose & eyes -- The sides of the nose are swung up and down; the eyes around the eyes need to be lowered to move outwards.</p></div><div></div></div><div><div><div>【03 Power of】</div><p>After the cleansing is finished, press the switch to turn off the machine.</p></div><div></div></div><div><div><div>【04 Flushing】</div><p>Flush with water and dry your face, apply a toner or essence.</p></div><div></div></div><div><div><div>【05 Hot massage】</div><p>Press the function key to turn on the thermal massage function, and apply the heating surface on your face for massage.</p><p>※Can apply toner or essence</p></div><div></div></div></div><div><div>♥ Tips</div><ul style="list-style-type: none">The internal setting of the device is that the motor will pause every 15 seconds to remind you that you can change to the next part for care.The machine is set to 10 minutes to shut down.</div></div>	<div><div>Maintenance</div><ul style="list-style-type: none">Please turn off the machine before cleaning.Protect the appliance from moisture and do not place the appliance in a dishwasher or microwave oven.Do not use sharp or corrosive, volatile thinner cleaners.Rinse directly with clean water, dry it naturally or wipe it off with a soft, dry cloth. Note that the charging port should not be exposed to water.Do not force the massage head to avoid causing the silicone massage head to break.Do not use water above 40° or sharp or corrosive, volatile thinner.Do not use for a long time (about 3 months) Please take out the machine and store it fully.</div> <div>5</div>	<div><div>Specification</div><p>Product Name: 2 in 1 Warm Facial Cleansing Brush Model: DL033 Rated Voltage: 3.7V --- Charging Voltage: 5.0V --- Rated Power: 5W Charging Current: 1A Weight: 140g Product Dimensions: 140mm*55mm*52mm Packing List: 1 main unit, 1 charging cable, 1 operation manual, ♥ Due to the improvement of the products, some specifications may be changed without prior notice.</p></div> <div><div>Consumer Warranty</div><p>Prospera offers a 90-day standard warranty on massage products. Labor and parts are included during the warranty period. Please provide the model number and dated proof of purchase (sales receipt) when contacting Prospera for warranty service.</p><p>Non-warranty service is provided on a “per incident” basis. The consumer will verify that the product has failed and provide information for servicing the unit. All applicable repairs, parts, shipping, handling, local tax and “per incident” fees will be charged for non-warranty repairs and support calls.</p></div> <div>6</div>	<div><div>Warranty Card</div><div><div>prospera</div><div>Warranty Registration Form</div><p>Product Name: _____</p><p>Product Model: _____</p><p>Purchase Price: _____</p><p>Date of Purchase: _____</p><p>Retailer: _____</p><p>First Name: _____</p><p>Last Name: _____</p><p>Address: _____</p><p>City: _____ State: _____ Zip: _____</p><p>Phone: _____ Email: _____</p><p>Signature and date: _____</p><p>Please mail to: Prospera Corporation 392 West Larch Rd Suite 31 Tracy, CA 95304-1644 Tel: (925) 292-5978 Email: sales@prosperacorp.com</p></div></div> <div>7</div>
--	--	--	--