



ML003 Hair Straightener — Operation Manual —

Thank you for purchasing this product! In order to use this product correctly, please read this manual before use; in order to read the manual at any time when you need it, please keep this manual in a safe place.

About this manual:
The product pictures and related product features shown in this manual, as well as some nouns, can only be used as a reference. The user will use the actual product as the standard, and the referenced data comes from the company's laboratory.

Safety Precautions

Be sure to read the safety precautions before use.
Please use this product correctly according to the contents and recommendations of the manual.
The product should be cleaned in time after use to avoid accumulation of grease and its residues.

	Related content: Incorrect actions can lead to personal injury
	Related content: Incorrect operation can result in personal safety or property damage

- Danger**
 - Please use it under the rated voltage of this appliance to ensure that the plug is fully inserted, otherwise it may cause personal injury such as electric shock.
 - Do not use if you feel dull about heat, otherwise it may cause burns.
 - In the following cases, please unplug the power cord first:
 - When not using this appliance;
 - The appliance is working abnormally;
 - When cleaning and maintenance;
 - After each use;
 - Do not use the appliance when your hands are wet.
 - When the appliance is connected to a power source, it cannot be placed in an environment close to the water anyway.
- Caution**
 - Do not use this appliance near a bathtub, shower, washbasin or other utensils.


This symbol means "Do not use in bathing".

1

- If the product is deformed or damaged, do not use it again to avoid the risk of electric shock or fire.
- If the power cord is damaged, it must be replaced by a professional from the manufacturer, its service department, or similar professional to avoid hazards.
- Do not use this appliance (alcohol, benzene, nail remover, spray, etc.) near flammable or explosive materials, as this may result in fire or explosion.
- Do not drop or hit the appliance. If the appliance is damaged due to a fall or collision, do not use it.
- When pulling the plug, do not pull the power cord directly. Do not carry the appliance by pulling the power cord.
- Do not store this product in a humid environment.
- Shut down and allow the machine to cool down after use or if it is suspended for a considerable period of time.
- Do not cover the appliance with any substance when using it.
- When the appliance is in use, the temperature of the surface of the splint may reach 200°C, so it is forbidden to place the appliance on a soft mat or blanket when it is still hot.
- When in use, the comb teeth become very hot. When the appliance is energized, it can't grasp or touch the comb teeth. Avoid contact between any hot parts and your skin and eyes.
- Do not use any flammable substances on your hair, such as hair styling, mousses, etc. before using this appliance. These materials may ignite when in contact with hot hair combs.
- This appliance can only be used on dry natural hair and not on artificial hair.
- This device is not intended for use by persons with physical, sensory or mental problems or those who lack experience and common sense (including children) unless supervised by a guardian and instructed in the use of the product and responsible for the safety of the user.
- Supervise the child to make sure they don't play with the appliance.
- Place packaging materials such as plastic bags where children can't reach them.
- This device is not suitable for pet hair.
- If the temperature chosen is too high, there is a danger of burning your hair.
- Depending on your hair style, the wrong choice of temperature or the improper use of hair straighteners will make your hair dry and burn in severe cases.

2

Part Identification

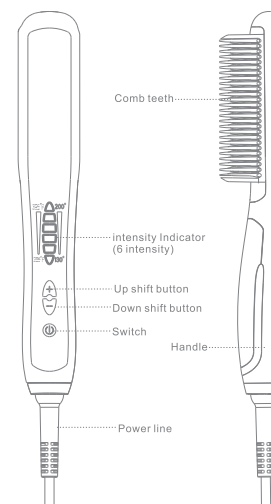

3

【 Tips 】

When using this hair comb, you must ensure that the hair is dry, otherwise you will not achieve the desired shape or effect.

How to Use

When the comb is used, there may be a slight burnt smell. This is a smell that plastic meets high temperature. It is a normal phenomenon. Please feel free to use it. As the number of uses increases, the taste will become lighter and lighter.

【 Straight hair operation 】

- Wash your hair and dry it, and comb your hair thoroughly. Then put a towel around your neck to prevent possible skin burns.
- Plug the plug into the power socket, press the power button to turn it on, the machine defaults to low intensity work.
- According to different hair quality, press the upshift or downshift button to select the appropriate gear.
- When heating, the corresponding gear LED flashes, and after heating to the set temperature, the LED light is always on.
- After the gear indicator to be set is always on, hold the handle of the comb and pay attention to the safe distance between the comb and the skin and eyes.
- Evenly split the hair, hold and tighten the hair root and place the prepared hair in the comb.
- Pull down slowly from the root to the tip of the hair, repeat the above action until make it wanted straight hair.
- After finishing the straight hair, press the power button to shut down. After the hair is cold, it is finished with a normal comb.

4

【 Curly hair operation 】



After completing steps 1 to 5 of straight hair, hold the hair in the teeth of the comb around the comb, and then slowly pull down, and stay at the end of the hair for 3-5 seconds. (Can be repeated multiple times according to the effect of the curling)



Power off
After completing the styling, press the power button to turn it off. After the hair is well-formed, it is finished with a normal comb.



After the product is turned on for 20 minutes, it will automatically shut down and enter the standby state. If you want to use it again, you need to restart it.

【 Temperature setting 】

The default working state of the machine is the fourth gear. Press the up or down button on the machine panel to adjust the gear temperature. Each time a temperature gear is set, the corresponding gear indicator will flash. When the temperature rises to the setting gear value, the gear indicator will turn from flashing to steady.



1st gear, approx. 256°F, suitable for the first time using this straight hair comb, or soft and thin hair.



2nd gear, approx. 293°F, reference hair: blonde, bleached or dyed hair.



3rd/4th gear, approx. 320°F/347°F, reference hair: normal and slightly curled hair.



5th/6th gear, approx. 374°F/395°F, reference hair: very thick, curly and coarse hair.

5

If the temperature chosen is too high, there is a danger of burning your hair. Depending on your hair style, the wrong choice of temperature or the improper use of hair straighteners will make your hair dry and burn in severe cases.

Cleaning and maintenance

- Before cleaning, please shut down and pull out the power plug.
- This product is not waterproof. Do not soak the appliance in water or flush it directly with faucet.
- Do not use steel wire brush, abrasive cleaner or corrosive liquid (such as gasoline or acetone) or chemical to clean the product.
- You can clean with a soft wet cloth or medical alcohol and wipe with a soft dry cloth.

Storage

- The product can be stored in a travel bag.
- Please keep it out of the children's reach.
- Please keep it in a place with little moisture and dust.
- Please avoid storing the product in a place with high temperature or direct sunlight.



Do not place products that have not been completely cooled in bags.

After-sales

- This appliance is intended for personal use only and is not suitable for commercial use.
- We offer a 90 days warranty on the product, which is calculated from the date of purchase.
- During the warranty period, we will replace parts or the entire product due to the material or the production process.
- To apply for a warranty, the product must be shipped to an authorized Kskin repair station or factory along with a certificate (purchase invoice) that proves the date of purchase.

6

5. The company does not guarantee the following conditions:

- Damage caused by improper use, such as using the wrong power supply, inserting the product into an improper socket, man-made damage, etc.
- The product caused by normal use is aging and wear, but it has little effect on the function of the product.
- Product problems caused by other uses, or improper handling or non-professional repairs or the use of accessories other than the company.
- Consumables or bonus accessories.
- Damage caused by force majeure factors (such as lightning, earthquakes, fires, floods, etc.). After-sales service does not include damage caused by the above reasons.

Waste Treatment

The marking on this product or packaging material or accessory indicates that the material is made from a recyclable material. Separate waste into different recycling levels to facilitate the recycling of useful materials.



Specification

Product Name: Hair Straightener Model: ML003
Voltage: AC 120V Rated Frequency: 60Hz
Power: 36W Heating method: PTC
Net Weight: 349g
Heating temperature: about 256°F-395°F
Product Dimensions: 255x38x45mm
Packing list: 1 main unit, 1 operation manual.

Note: In view of the consistent policy of continuous improvement of products, the company reserves the right to change the product specifications, the actual goods are subject to shipment.

7



For warranty service, please call 925-292-5978, M-F, 8:00am to 4:00pm, Pacific Standard Time. Or send email to sales@prosperacorp.com. Consumer may also mail service request to this address:

Prospera Corporation
Warranty Service
392 West Larch Road # 31
Tracy, CA 95304

About Prospera

Prospera develops high quality, innovative, and affordable massage products, ranging anywhere from electronic pulse massagers to jade massagers. Prospera's products are available through leading department stores, consumer electronics stores, and major online retailers. Learn more about Prospera at www.prosperacorp.com

Prospera Corporation
392 West Larch Road # 31
Tracy, CA 95304
Tel: (925) 292 5978
Email: sales@prosperacorp.com

8

Warranty card



Warranty Registration Form

Product Name: _____

Product Model: _____ Purchase Price: _____

Date of Purchase: _____ Retailer: _____

First Name: _____ Last Name: _____

Address: _____

City: _____ State: _____ Zip: _____

Phone: _____ Email: _____

Signature and date: _____

Please mail to:
Prospera Corporation Tel: (925) 292 5978
392 West Larch Road # 31 Email: sales@prosperacorp.com
Tracy, CA 95304