TER BOWESER DRAF


Item#17010-B Recommended for ages 5+ Adult supervision required.

Please read and follow this instruction manual.

Battery information:

Charge the 3.7V battery using the USB chord (included) and a USB outlet (not included). A red light on the chord will be lit while charging. When the light turns off, the battery will be fully charged. Open the battery compartment under the vehicle. Insert and plug charged 3.7V battery into vehicle. Once battery is plugged in, close the battery compartment.

Open the battery compartment under the remote control. Insert 2 x AA batteries (not included) Close the battery compartment. Once the vehicle and the remote have working batteries, turn the ON/OFF button under vehicle to ON and you are all set to drive and play.

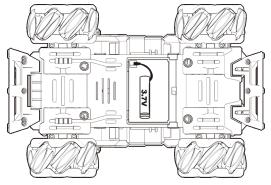

3.7V Rechargeable Battery (Included) USB Charging chord (Included)



2 x AA Batteries (Not included)

Battery Safety Information:

Only adults should install and replace batteries.

Switch toy and remote to OFF before opening battery compartments.

Insert batteries correctly. Match positive+ and negative- signs.

Alkaline batteries are recommended for best performance.

Rechargeable batteries are not recommended.

If rechargeableare used, they are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the product before they are charged.

Do not recharge non-rechargeable batteries.

Only use batteries specified.

Only use batteries of the same or equivalent type that are recommended for use.

Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (nickel-cadium).

Do not mix old and new batteries.

Remove the batteries during long periods of non-use.

Always remove exhausted batteries from toy, and dispose responisibly.

Battery leakage and corrosion can damage this product.

Dispose of batteries safely. Recycle where available.

Do not dispose of batteries in a fire or attempt to open the outer casing.

Never short-circuit the battery terminals.

Do not immerse battery-operated toys in water.

Water Bullets instructions: Water Bullet Pack: Water Bullets after 4 hours in water:

CAUTION:


Do not ingest water bullets. Do not insert water bullets into ears or nose.

Do not Freeze the water bullets as this will cause damage to them.

To create the water bullets, open the pack and pour the amount of beads you want to use into a bowl or glass and add room temperature water. Make sure there is plenty of water as the beads will abosorb it to grow. Leave the beads soaking in water for 4 hours. After 4 hours, the beads transform into water gel bullets.

Open the cap on top of the cannon on the vehicle. Load 10-15 water bullets into that opening. Close the cap. Once the cannon is loaded and the vehicle is ON, it should be ready to fire water bullets.

Remote control:

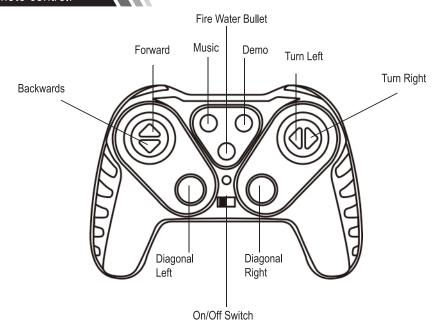

This device contains licence-exempt transmitter(s)/receiver(s) that comply with innovation, science and economic development canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1). This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device



© 2024 Jupiter Creations, Inc. All rights reserved www.iupitercreations.com









