

YARDCADDY WOODEN CORNHOLE

CORNHOLE TOSS WOODEN GAME SET INSTRUCTION MANUAL



Includes:
2 x Game boards
8 x Beanbags

For Ages 6+

HOW to PLAY and SCORE in POP-UP CORNHOLE

YOUR SET INCLUDES

- 2 Cornhole Target Frames • 8 Throwing Bags (4 per color)

CORNHOLE COURT LAYOUT

DIMENSIONS - The official dimensions of a cornhole court consist of a flat, rectangular area 8-10 feet wide and a minimum of 40-45 feet long. The court should consist of two cornhole targets, designated pitcher's boxes, and foul lines.

PITCHER'S BOX - The pitcher's box is the rectangle 4 feet by 3 feet at each end of the court, parallel with, and on both sides of the boards. Each player must remain in the pitcher's box while pitching a cornhole bag.

HOW to PLAY

Each match is broken down into "innings" of play. During an inning, each player must pitch all four of their bags. An inning is never completed until all players pitch all four bags.

SINGLES CORNHOLE

Two single players compete against one another until a single winner is determined.

- Both players stay in their designated lane for the whole game.
- Players start the game at the headboard and will alternate pitching bags until each player has pitched all four of their bags.
- Players then walk to the end of their lane to the other court, take score, and resume pitching back to the other board.
- The top of an inning is completed when the first player pitches all four bags; the bottom of the inning is completed when the remaining player pitches all four bags.

DOUBLES MATCHES

Two teams of two players each, compete against one another until a winning team is determined.

- Each team will stay in their designated lane for the whole game.
- Players at the headboard will alternate pitching bags until each player has pitched all four of his/her bags.
- Players at the footboard will take score and resume pitching back to the other board.
- The top of an inning is completed when both players pitching from the headboard pitch all four bags; the bottom of the inning is completed when the remaining players pitching from the footboard pitch all four bags.

HOW to PLAY and SCORE in POP-UP CORNHOLE

SCORING

The approved method of scoring for the sport of cornhole is “cancellation” scoring. In cancellation scoring, the points of one player cancel out the points of their opponent. Using this method, only one player/team can score in each inning.

- Woody (Bag In-The-Count): Any bag which comes to rest anywhere on top of the board. Each is worth one (1) point.
- Cornhole (Bag In-The-Hole): Any bag which is thrown into the hole or knocked into the hole by another bag. Each is worth three (3) points.

PLAYER ROTATION

The player/team who scored in the previous inning pitches first in the next inning. If neither player or team scores, the player or team who pitched first in the preceding frame keeps the first pitch in the next frame.

POSITION OF PLAYERS

- The pitcher should be within the pitcher’s box or behind the foul line at the time of release.
- A player must pitch all four bags from their designated pitcher’s box.
- Players must pitch the bag with an under-hand release.

DETERMINING WINNERS

The game is traditionally played to twenty-one points, but you can adjust the total for your home game. The first player/team to reach that amount at the conclusion of an inning is the winner.

LIMITED 30-DAY WARRANTY

B&D Group, LLC, warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 30 days from the date of purchase. If any such defect is discovered within the warranty period, B&D Group, LLC, will repair or replace the unit free of charge upon receipt of the unit, shipping postage prepaid and insured to the factory address received from Customer Service. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of any panels voids all warranties. This warranty does not cover cost of repairs made or attempted outside the factory. Any applicable implied warranties, including warranties of merchantability and fitness are hereby limited to 90 days from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States would be expressly communicated from Customer Service. Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter detailing the complaint or issue, along with your daytime telephone number, name and address inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to Service@BandDGroup.com, specifying the model number and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT.

CARE & HANDLING

DO NOT use your Wooden Cornhole set in the rain, snow, high winds, or other poor weather conditions.

When not in use, keep the Wooden Cornhole set indoors and dry. For best results, wipe clean and dry after each use.

MANUFACTURED BY B&D GROUP, LLC.

8500 NW 17th Street
Miami, Florida 33126 • Tel. 305.964.7295

www.PoolCandy.net
[@PoolCandy](https://www.instagram.com/PoolCandy)