 



Thank you for buying this product, designed to keep your watches in top condition and always wound up, ensuring many years of use. Please take a few moments to read through these instructions to ensure proper operation, and keep a copy for future reference.

Parts of Winder

■ Body(Front)

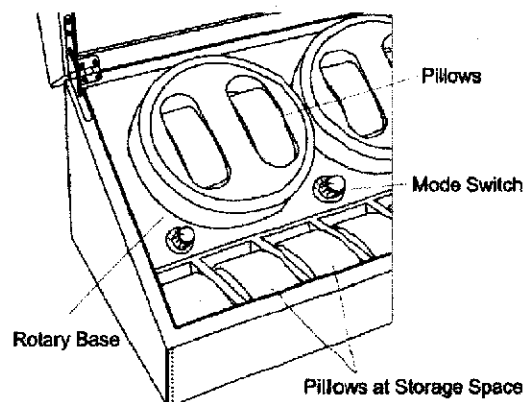

 ■ Body(Back)

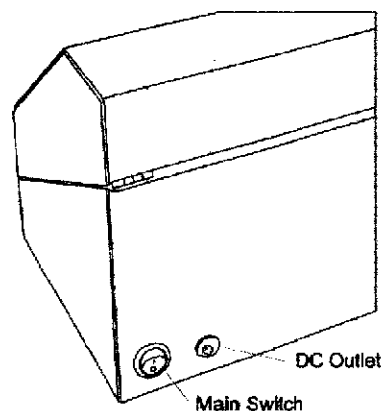


■ Pillows/Pillows at Storage Space



Exterior removable ring for fitting watches.

■ Power Supply

 ● Adaptor

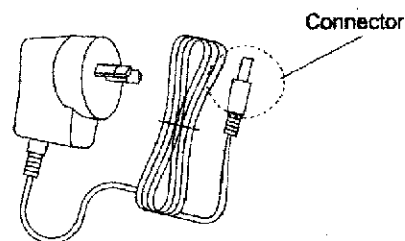

Input: AC100V 50/60Hz 0.2A

Output: 3V/0.5A

Operation

- Insert the adaptor into the socket located on the product and plug it into an electrical outlet.
- Select rotation mode that suitable for your watch.

Rotation Mode

	OFF
	Gear1. The turning plates will rotate clockwise for 6 minutes and then pause for 30 minutes.(repeat).
	Gear2. The turning plates will rotate counter-clockwise for 6 minutes and then pause for 30 minutes.(repeat).
	Gear3. Turn clockwise for 20 minutes and stop for 10 minutes. Turn counterclockwise 20 minutes, stop for 10 minutes. This cycle is repeated.
	Gear4. The turning plates will rotate clockwise for 10 minutes and then counter-clockwise for 10 minutes, this mode will be repeated for 3 hours and then pause 9 hours.(repeat).

ATTENTION

- When inserting and removing a wrist watch, please ensure the electrical power is off as it may cause malfunction.
- Please remove the A/C adaptor and batteries when the watch winder is not in use.
- Do not place or remove a watch on the watch holder while it is moving.