 


SHOWCASE HOLOGRAMS

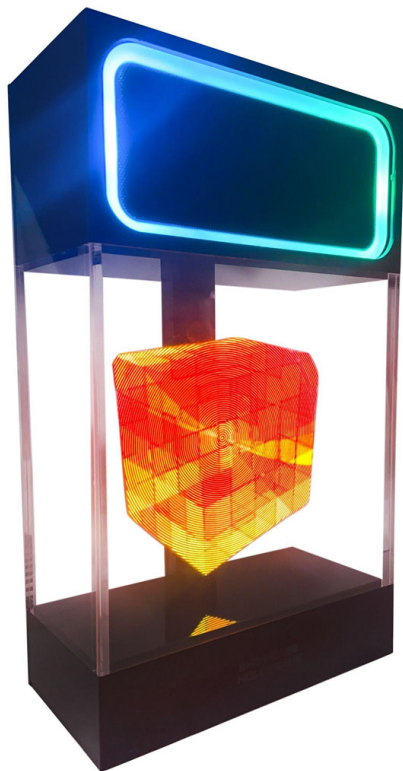

Hologram Wireless Speaker



Instruction Manual

Using the Hologram Speaker

- ❑ Power on the hologram fan using the button on the **back** of the device.
- ❑ Power on the hologram speaker using the buttons on the **top** of the device
- ❑ After the speaker is powered on, look for the device A8 in your Bluetooth settings
- ❑ Pair the hologram speaker to begin playing music from your paired device
- ❑ Volume can be adjusted using the buttons on the top of the hologram speaker, or by using the volume setting on your paired device
- ❑ When battery is low, turn off the speaker and fan, plug device into a wall outlet using the USB-C port on back to charge..
- ❑ The hologram fan will continuously loop the holograms in the playlist
- ❑ The 4 lights on the bottom of the device indicate how much charge is left
- ❑ The fan lubricating oil may harden after prolonged periods of inactivity. If the fan lights up but does not spin, rock the device side to side to get it moving.

Speaker Buttons:


1. Power On/Off
2. Volume Down / Previous Track
3. Play / Pause
4. Volume Up / Next Track
5. Adjust LED mode

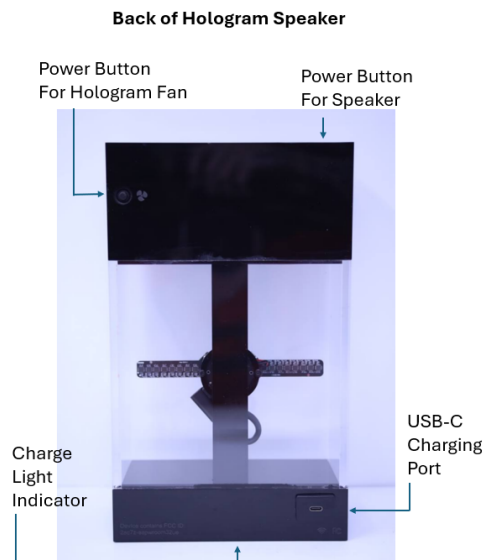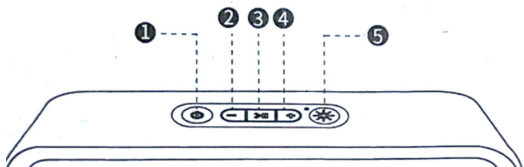

Using the Hologram Fan

- ▣ The hologram fan can be powered on/off independently, using the button on the back of the device
- ▣ The Hologram Fan will continuously loop the preloaded holograms in the playlist
- ▣ We recommend turning the hologram fan off occasionally to improve its working lifespan
- ▣ The fan lubricating oil may harden after prolonged periods of inactivity. If the fan lights up but does not spin, rock the device side to side to get it moving.
- ▣ The hologram fan LEDs will not work well in direct sunlight. Recommended settings are indoors, nighttime or heavily shaded environments

**Button on back of
hologram speaker that
toggles the hologram
fan on/off**

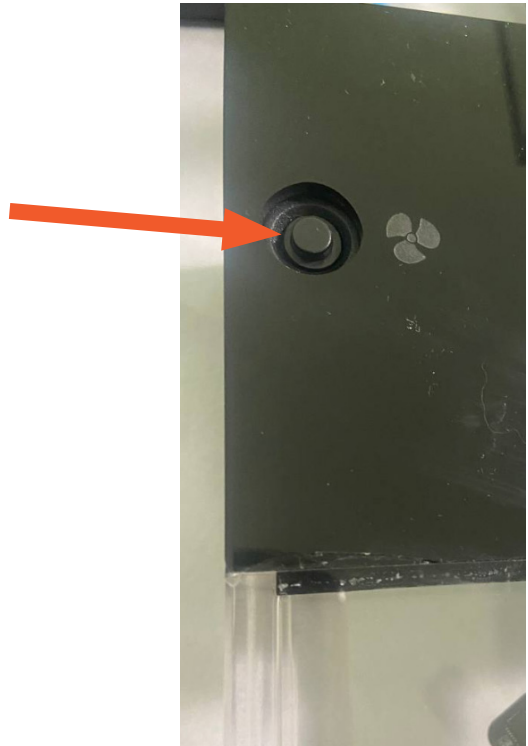

Charging the Hologram Speaker

- ▣ The 4 lights on the bottom of the device indicate how much charge is left
- ▣ The hologram speaker can run wirelessly for several hours.
- ▣ The speaker may play for a few hours longer than the hologram fan
- ▣ If the Bluetooth speaker or the hologram fan runs out of power, charge the device using the USB-C port in the back of the device
- ▣ For the best charging, turn both the speaker and the hologram fan off

Tips & Contact Information:

- ☒ The fan lubricating oil may harden after prolonged periods of inactivity. If the fan lights up but does not spin, rock the device side to side to get it moving.
- ☒ The hologram fan LEDs will not work well in direct sunlight. Recommended settings are indoors, nighttime or heavily shaded environments.
- ☒ We recommend turning the hologram fan off occasionally to improve its working lifespan.
- ☒ Be careful not to drop this device or get it wet, it is an electronic device and not waterproof.
- ☒ If the hologram fan or bluetooth speaker run out of power, we recommend turning both the fan and speaker off, then charging the device for several hours.
- ☒ If the hologram speaker is not showing up on your bluetooth settings, try turning the hologram speaker on/off, then try toggling the bluetooth settings on your pairable device on/off.

Contact us for support or if you have any questions

We love talking to our customers!

You can email us anytime at contact@showcaseholograms.com

