



ITEM#17033 CRAZY CROC R/C
Recommended for ages 4+.
Adult supervision required.
Please read and follow this instruction manual.

Battery information:

Crazy Croc comes with a rechargeable 3.7V Battery for the croc, and requires 3 x AAA batteries (Not Included). To charge the battery, plug the battery to the USB chord (included) and use a USB outlet (not included) to charge. The chord will light up red while being charged, and turn off when charge is complete. To install the charged battery, open the compartment under the croc. Insert and plug the charged battery to the croc. Close compartment. Make sure to screw the compartment closed.


Next, install the Remote Control's batteries by opening the battery compartment on the back of the remote. Insert 3 x AAA batteries (Not Included). Make sure the batteries match the polarity. Close the compartment. Once the Croc and Control have batteries, turn the button under the croc to ON, and press the remote's forward button to sync. You are now ready to control your Crazy Croc.

Lithium battery

USB charging adapter that meets safety standards




3.7V Rechargeable Battery (Included)
USB Charging Chord (Included)

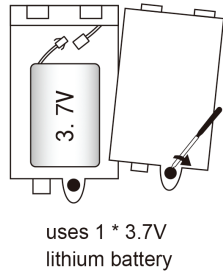

uses 1 * 3.7V
lithium battery

Remote control

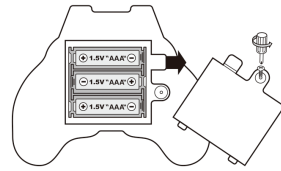


Open the battery cover as shown in the figure and use 3x 1.5V "AAA" batteries according to the electrode instructions. (Not included in the battery)


3.7V Rechargeable Battery (Included)

Battery Safety Information:

 Only adults should install and replace batteries.
Switch toy and remote to OFF before opening battery compartments.
Insert batteries correctly. Match positive+ and negative- signs.
Alkaline batteries are recommended for best performance.
Rechargeable batteries are not recommended.
If rechargeable are used, they are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the product before they are charged.
Do not recharge non-rechargeable batteries.
Only use batteries specified.
Only use batteries of the same or equivalent type that are recommended for use.
Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (nickel-cadium).
Do not mix old and new batteries.
Remove the batteries during long periods of non-use.
Always remove exhausted batteries from toy, and dispose responsibly.
Battery leakage and corrosion can damage this product.
Dispose of batteries safely. Recycle where available.
Do not dispose of batteries in a fire or attempt to open the outer casing.
Never short-circuit the battery terminals.
Do not immerse battery-operated toys in water.

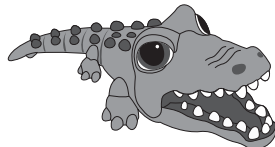


Remote control:

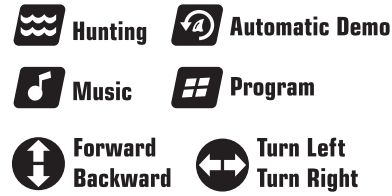 


Turn the Crazy Croc on by flipping the button under the croc. Press the up button on the remote control to sync. You should hear a sound and the croc will then be under your control.

Installation

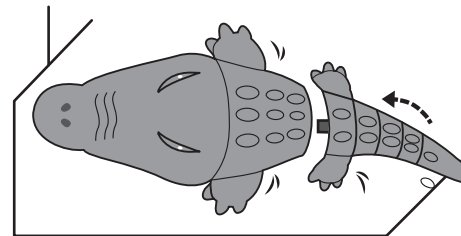


Crazy Croc has legs and a tail that can be easily installed or removed. Push the button on the back of the croc and pull the tail/legs for release. Press the button and snap the tail/legs back into the slot to install.

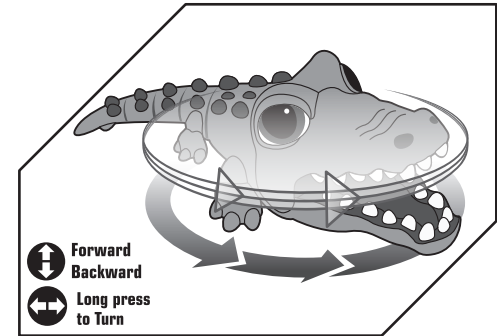

Crazy Croc is easy to control. Press the up and down arrows to go forward and backwards. Press the side arrow buttons to rotate right or left. Hold the side arrow buttons for high speed spinning action.

Hunting

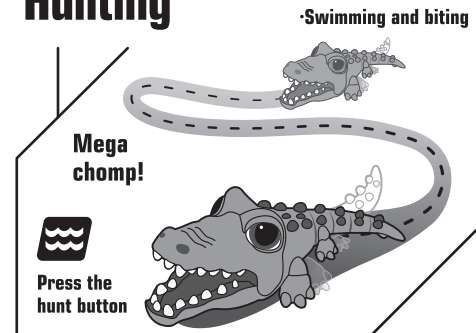


Press the "Hunting" button and Crazy Croc will move in pattern while chomping its jaw.

Program

Press the Program button once to begin. Press up to 5 directions, and actions. Press the Program button again, Crazy Croc will perform the sequence of direction and actions you programmed.

Automatic Demo

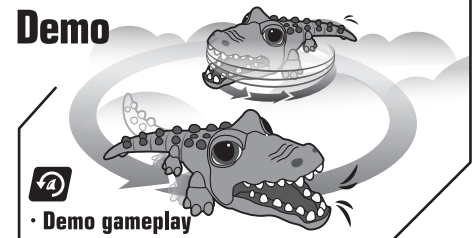

Press the Demo button and Crazy Croc will perform a preprogrammed dance routine that includes moving, spinning and chomping to music.