



ITEM#17026 CRAZY SHARK R/C

Recommended for ages 4+.

 
Adult supervision required.

Please read and follow this instruction manual.

## Battery information:

Crazy Shark comes with a rechargeable 3.7V Battery for the shark, and requires 3 x AAA batteries (Not Included) for the remote control. To charge the battery, plug the battery to the USB chord (included) and use a USB outlet (not included) to charge. The chord will light up red while being charged, and turn off when charge is complete. To install the charged battery, open the compartment under the shark. Insert and plug the charged battery to the shark. Close compartment. Make sure to screw the compartment closed.

Next, install the Remote Control's batteries by opening the battery compartment on the back of the remote. Insert 3 x AAA batteries (Not Included). Make sure the batteries match the polarity. Close the compartment. Once the Shark and Control have batteries, turn the button under the shark to ON, and press the remote's forward button to sync. You are now ready to control your Crazy Shark.

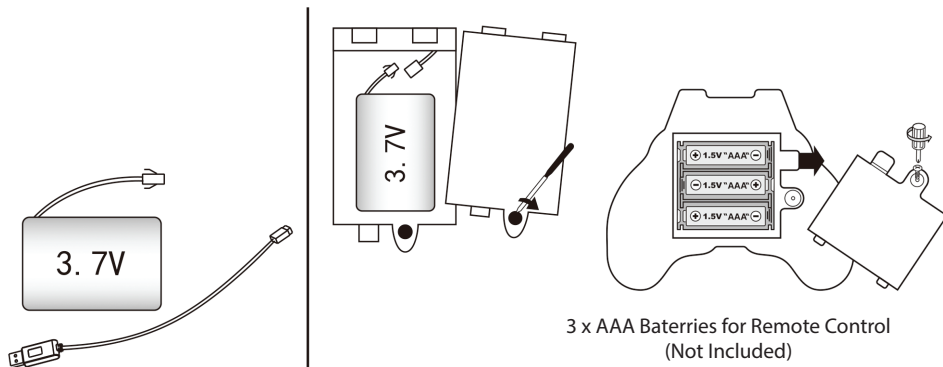

3.7V Rechargeable Battery (Included)  
USB Charging Chord (Included)

3 x AAA Batteries for Remote Control  
(Not Included)

## Battery Safety Information:

Only adults should install and replace batteries.

Switch toy and remote to OFF before opening battery compartments.

Insert batteries correctly. Match positive+ and negative- signs.

Alkaline batteries are recommended for best performance.

Rechargeable batteries are not recommended.

If rechargeable are used, they are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the product before they are charged.

Do not recharge non-rechargeable batteries.

Only use batteries specified.

Only use batteries of the same or equivalent type that are recommended for use.

Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium).

Do not mix old and new batteries.

Remove the batteries during long periods of non-use.

Always remove exhausted batteries from toy, and dispose responsibly.

 
Battery leakage and corrosion can damage this product.

Dispose of batteries safely. Recycle where available.

Do not dispose of batteries in a fire or attempt to open the outer casing.

Never short-circuit the battery terminals.

Do not immerse battery-operated toys in water.

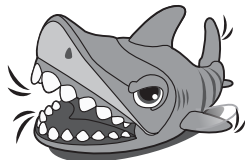

## Remote control:



Hunting



Automatic Demo



Music



Program



Forward  
Backward

 


Turn Left  
Turn Right




Turn the shark on by flipping the button under the shark. Press the forward button on the remote-control to sync. You should hear a sound and the shark will then be under your control.

## Installation

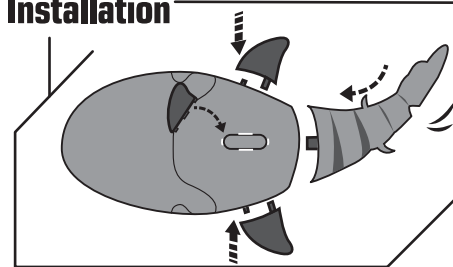


 Crazy Shark has fins and a tail that can be easily installed or removed. Push the button on the back of the shark and pull the tail/fins for release. Press the button and snap the tail/fins back into the slot to install.

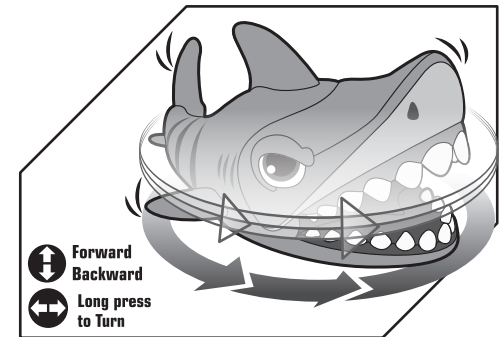

Crazy Shark is easy to control. Press the up and down arrows to go forward and backwards. Press the side arrow buttons to rotate right or left. Hold the side arrow buttons for high speed spinning action.

## Hunting

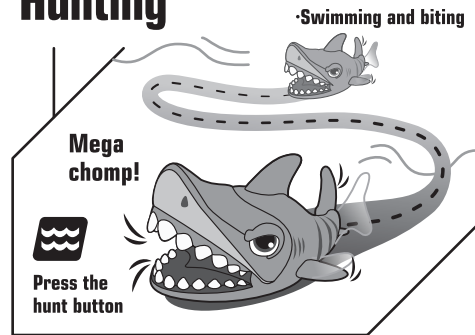 


Press the "Hunting" button and Crazy Shark will move in pattern while chomping its jaw.

## Program

 Press the Program button once to begin. Press up to 5 directions, and actions. Press the Program button again, Crazy Shark will perform the sequence of direction and actions you programmed.

## Automatic Demo

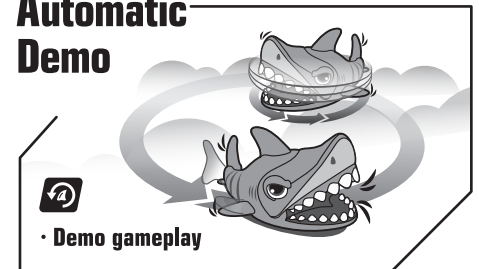

Press the Demo button and Crazy Shark will perform a preprogrammed dance routine that includes moving, spinning and chomping to music.

**Be careful not to get bitten**

©2025 Jupiter Creations, Inc. All rights reserved  
www.jupitercreations.com

2.4  
GHZ **RC**

