

ROBODRAGON

 
Item# 17001

WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.


Safety warning:

- Parents: To ensure safety please review this manual with your child before play.
- Keep the instructions for future reference.
- Use this product strictly in accordance with the instructions.
- In an electrostatic environment, the product may malfunction. The user has to reset the product.

Package content

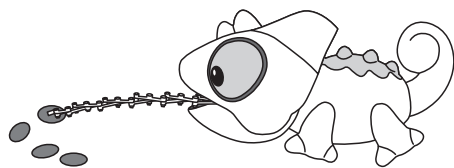

Robodragon

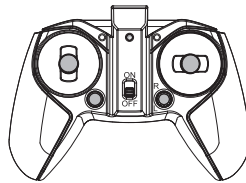 

Remote control



4 bug tokens



Instruction manual

Product introduction

Product number: 17001

Product name: Robodragon

Product specifications: 9.8" x 4.3" x 5.1"

 
Playing time: more than 40 minutes

Remote control distance: 30 meters or more


Weight: 1.09 lbs

Frequency: 2.4G


Color: white

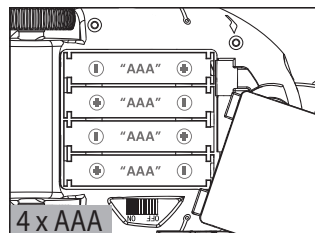

Robosaur working battery: 4 x AAA

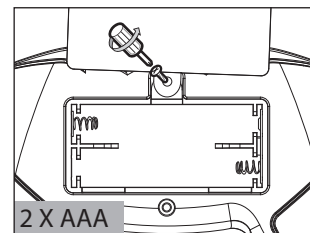 

Remote control working battery: 2 x AAA

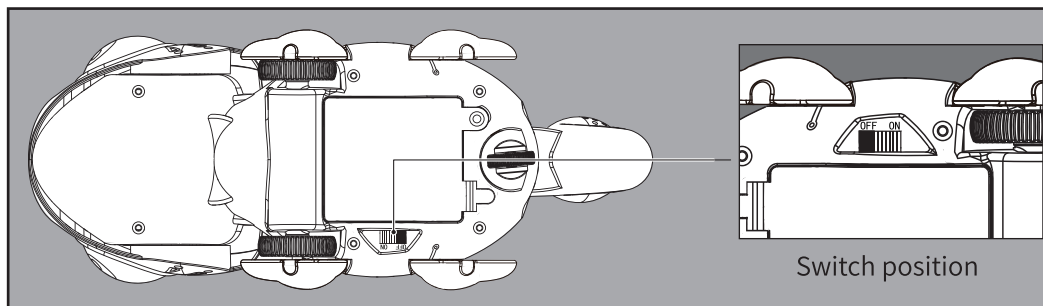 

Turn on the Robodragon switch.
Turn on the switch on the remote.
They will sync together to start up.

BATTERY SAFETY INFORMATION

 
 
Only adults should install and replace batteries.
Switch toy off before opening battery compartment.
Insert batteries correctly. Match positive+ and negative- signs.
Alkaline batteries are recommended for best performance.
Rechargeable batteries are not recommended.
If rechargeable batteries are used, they are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the product before they are charged.
Do not recharge non-rechargeable batteries.
Only use batteries specified.
Only use batteries of the same or equivalent type that are recommended for use.
Do not mix different types of batteries: alkaline, standard(carbon-zinc), or rechargeable(nickel- cadmium).
Do not mix old and new batteries.
Remove dead or exhausted batteries.
Remove the batteries during long periods of non-use.
Always remove exhausted batteries from the toy.

Maintenance:


- If you don't use this product for a long time, remove the battery.
- Clean the product with soft cloth.
- Avoid exposing product to the sun.
- Do not immerse product in water as it may damage the electronic components

Battery leakage and corrosion can damage this product.
Dispose of batteries safely. Recycle where available.
Do not dispose of batteries in a fire or attempt to open the outer casing.
Never short-circuit the battery terminals.
Do not immerse battery-operated toys in water. Wipe clean only.


Remote control introduction

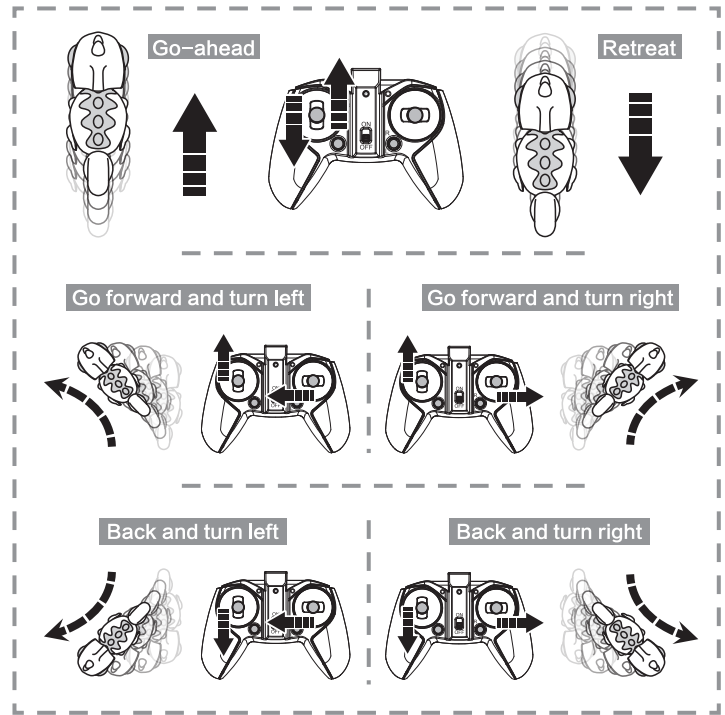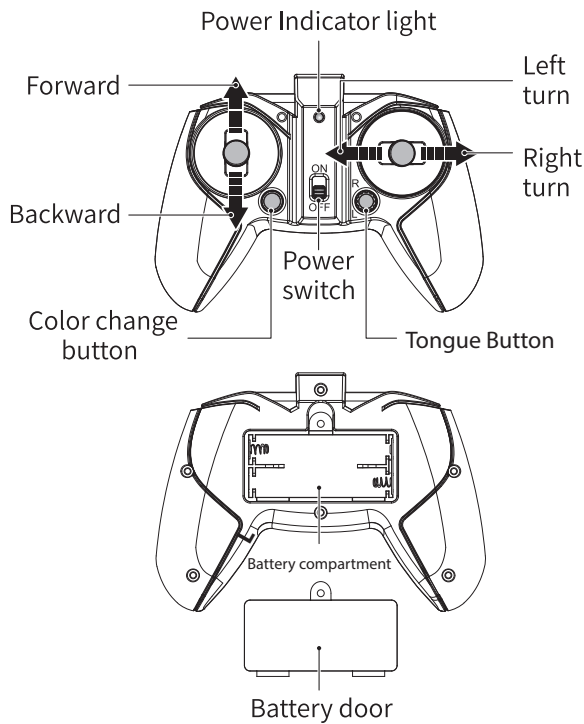

Function introduction

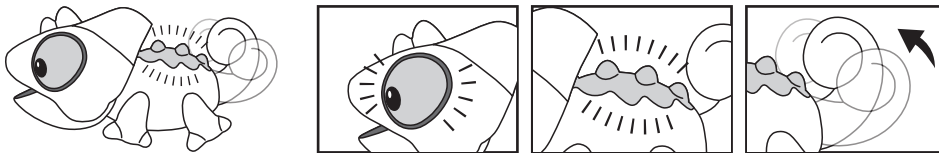 

1. This product is a 2.4G Remote control dragon with color changing lights and sounds.
2. Turn on the switch under Robodragon. The lights will start flashing red. Turn on the switch on the remote. Once the remotes syncs, Robodragon will light up green and it's tail will swing. When not in use, Robodragon will change colors and wag its tail.
3. Everytime you press the color change button, Robodragon will light up a different color and wag his tail. (12 different color variations)
4. Press left lever to move Robodragon foward or backwards. Press the right lever to move Robodragon left and right.
5. Place the food tokens at a proper distance from Robodragon. Press the tongue button on the remote control. Robodragon will open it's mouth and his tongue will extend to pick up the food token. Robodragon will also make one of 5 different sounds.
6. When the batteries in Robodragon are running low, the lights will flash and it's tongue will not activate. When this happens, replace the batteries.
7. When the batteries in the remote are running low, the light on the remote will flash. When this happens, replace the batteries.
8. Robodragon will automatically turn off if you stop using it for 5 minutes.

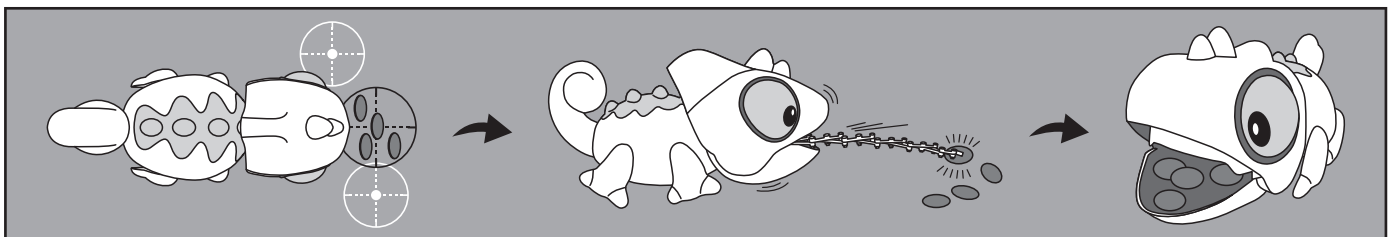 

Troubleshooting

Problem	Reason	Correction
Robodragon lost function or it is walking slowly.	- The battery is not connected well. - Battery is running low. - The power switch is not in the "ON" position. - The remote control and Robodragon are not synced.	- Check battery connection - Replace batteries with new ones. - Push the power switch to the "ON" position - Turn both the remote and Robodragon off, then back on. - Sync the remote with Robodragon again.

This device contains license-exempt transmitter / receiver that comply with Innovation, Science and Economic Development Canada's licence exempt RSS (s). Operation is subject to the following two conditions:

1. Device may not cause interference.
2. Device must accept any interference, including interference that may cause undesired operation of the device.

© 2023 Jupiter Creations, Inc.
www.jupitercreations.com

