
## Alloy lightsaber instructions

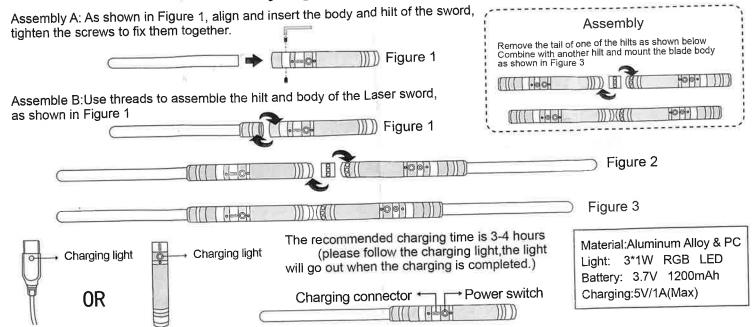

Switch: press the switch to turn on, long press the switch for 2 seconds to turn off the sound, long press the switch for 4 seconds to turn off.

Mode:Different modes have different lighting effects, with the sound of laser wsord electric current, there will be a sword strike sound when there is an action.

Press the switch twice continuously to enter the flash mode, and then press the switch twice continuously to exit the flash mode;