

ELECTRIC BBQ GRILL BRUSH

MODEL #YSN-RGB2

The quick and
convenient way
to clean your grill!



The propane product specialists™

Revolving stainless
steel brush

Safety push
button control

Comfortable
ergonomic handle

RECHARGEABLE

Manual instruction



Safety information



Congratulations on the purchase of your new cordless rechargeable grill brush brought to you by Flame King!

This tool complies with the relevant safety regulations for electrical appliances. Before using your grill brush, read this manual carefully and follow all the safety instructions.

Improper usage can cause personal injury or damage to property. People who have not read the manual must not be allowed to use the tool. Keep the user manual in a safe place. Children and young people are not permitted to use the tool.

Proper usage

The tool is designed exclusively to clean barbecue grill grates once they have cooled down.

Safety instructions

The word "tool" used in the following refers to battery-powered electric tools (cordless).

Keep the working area clean and well lit to prevent accidents.

Do not use the tool in the vicinity of inflammable liquids or gases or in a wet or damp environment. If you fail to observe the above, there is a risk of fire or explosion.

Do not leave the tool running without supervision.

Do not use the tool if you are tired, lack concentration or if your reactions have been dimmed by the consumption of alcohol or medication.

A lack of attention can result in serious injuries. Keep the tool clean and in working order so that it is better and safer to use.

Do not wear loose-fitting clothing or jewelry.

Ensure that you have a safe standing area and wear non-slip shoes. Cover your hair if you have long hair. Loose-fitting clothing, jewelry and long hair may become caught in moving parts.

Do not put your hand or any body part near the grill brushes. This can cause serious harm or injury especially if the grill brush is turned on.

Do not let distracted people using the tool. This may result in their losing control of the tool.

Do not use a tool if its ON/OFF switch is defective. An electric tool that cannot be switched on or off is dangerous and must be repaired.

Do not overload the machine. If the speed fails, remove the load from the machine or switch it off. If you use the correct tool you will work more safely and better within the specified performance range.

Keep the electric tool out of the reach of children.

Use only accessories that are recommended by the manufacturer.

Only charge the batteries using the charger supplied or recommended by the manufacturer.

Only dispose of exhausted batteries at approved collection points.

Always ensure that you use the correct brushes and parts. If the brushes or parts do not fit correctly they may slip off and cause injuries.

Before using the tool for the first time

Charge the battery before using the cordless grill brush for the first time.

Protect the tool and charger from heat and fire.

Do not store the tool and charger near heat sources or expose them to bright sunshine. Protect them from temperatures in excess of 50°C. Allow a hot battery to cool before you charge it.

Charger



Never use the charger if you find any signs of damage.

Before connecting the unit to the mains supply, check the main cable and plug for signs of damage.

Only have the charger opened by an authorized contractor and only use genuine spare parts to repair it.

Keep the charger dry and clean.

Ensure that you do not damage the charge contact pin.

Keep the charger and tool away from moisture and rain. If it becomes wet there is a risk that it will short circuit and cause an electric shock.

Since the charger becomes warm during the charging process, ensure that there are no inflammable objects below or in the vicinity of the charger.

Charge the battery

Plug the supply connection into the tool's body. The red indicator lights up as soon as the charger is connected.

The indicator shows RED when the battery is charging. After battery fully charged, the indicator RED will be off. Then keep the charger disconnected.

Using the tool

To switch the tool ON and OFF

The tool is equipped with a large black button that when compressed the grill brush turns on and the brushes will rotate.

The tool is also equipped with a safety button on the side that needs to be compressed first before it allows the larger power on button to be compressed.


Changing brushes

The brushes can be replaced by using an allen key wrench (4mm) and to remove the old one and replace with new one.

Only manufacture approved brushes may be used as replacement parts.

Always ensure that the brushes are replaced safely and securely. Loose brushes may result in serious harm or injury.

Picture:

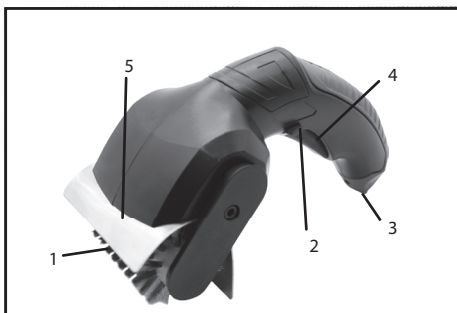

- 1.Stainless steel brush
- 2.Safe lock
- 3.Charging connect point
- 4.ON/OFF switch
- 5.Protective guard

Technical specification

Voltage: 7.2V
Lithium battery 2000mAh
No-load speed: 4500r/min
Brushes: 50mm
Charger: 120V-60Hz 9.5V DC 500mA
Charging time: 2-3 hours

Repairs

Use only accessories and spare parts that have been recommended by the manufacturer. If the tool suffers a failure despite our quality controls and your care, have it repaired only by an authorized electrician.

Environment protection

Do not simply dispose of the tool, accessories and packaging in the dustbin. Instead deposit it where it will undergo proper recycling or reuse.

This will protect our environment.

WWW.FLAMEKING.COM

FlameKing
Riverside, CA 92507



MODEL #YSN-RGB2 MADE IN CHINA