



Instruction manual
LEXIBOOK®
D850EN

Collins English Dictionary © HarperCollins Publishers 2018
Collins® is registered trademark of HarperCollins Publishers Limited

ENGLISH

LCD CONTRAST

Adjust the brightness of the screen:

1. Press the Menu key .
2. Select "LCD contrast".
3. Press **ENTER** to confirm.
4. Use the arrows  or  to decrease or increase the contrast.
5. Press **ENTER** to confirm.

Note : If the screen contrast decreases sharply even after having it set at the loudest, we advise you to change the pile right away.

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the product before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. The supply terminals are not to be short circuited. Do not throw batteries into a fire. Remove the batteries if you are not going to use the product for a long period of time. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.


WARNING: Mal-function or loss of memory may be caused by strong frequency interference or electrostatic discharge. Should any abnormal function occur, reset the unit or remove and replace the battery.

WARNING: All packaging materials, such as tape, plastic sheets, strings and labels are not part of the product and must be discarded.

WARNING: This product contains a coin battery. A coin battery can cause serious internal chemical burns if swallowed.

WARNING: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

PRESENTATION

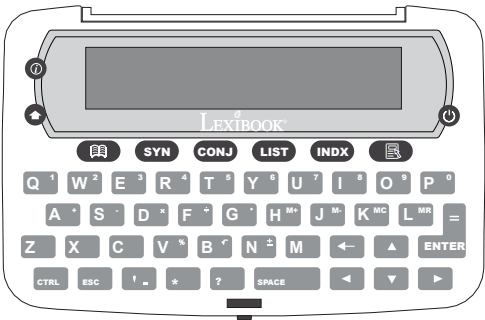

-  On / Off button.
-  Access to dictionary.
- SYN** Access to synonyms.
- CONJ** Access to conjugation.
- LIST** Access to memo-list.
- INDX** Access to alphabetical index.
-  Menu: display format, games, LCD contrast, calculator, currency converter, unit converter.
-  Help.
-  Correction: the last character typed.
- =** Confirm a choice.
-  SHIFT key to type capitalize letters.

- CTRL** Keyboard shortcuts.
- ' -** Apostrophe / Dash.
- Q ' - M** QWERTY keyboard.
- Q ' - P** Numerical keys in calculator mode and in conversion mode.
- A + - L MR** Operating keys in calculator mode.
- V ~ - N ^** Other operating keys in calculator mode.

-     Directional arrows.

- ESC** Return to the previous screen.

GETTING STARTED

On / off

When using the dictionary for the first time, be sure to remove the plastic battery protection on the back of the device.

1. Press  to switch on.
2. Press  again to turn it off.

Note : The device switches off automatically after 5 minutes of inactivity.

Note : If the device does not turn on, if it does not respond correctly or if the screen display is not smooth, you can reset the device. Locate the RESET button on the back of the device and use a paperclip or other sharp object to press gently.


WARNING ! All data and parameters saved will be permanently deleted.

BATTERY INFORMATION

The Collins English dictionary D850EN operates with a battery CR2032, 3V.  (included).

1. To replace the battery, unscrew the screw that holds the battery compartment located on the back of the device.
2. Remove the old battery and insert the new battery inside ensuring that the polarity is correct.
3. Close the compartment and screw it back on.
Press  and adjust the screen contrast if necessary.

Note : Once the battery is removed, all stored data and settings will be permanently deleted.

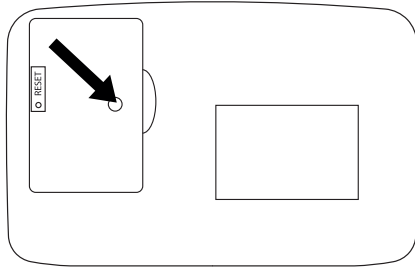

DISPLAY FORMAT

The Dictionary offers you two display formats: **normal view** and **zoom view**.

1. Press the Menu key .
2. Select "Display format".
3. Press **ENTER** to confirm.
3. Press  or  to select the mode and press **ENTER**. The display format is updated immediately
 - Normal view: 4-lines screen.
 - Zoom view: 3-lines screen.

DICTIONARY

Enter a word

1. To access the dictionary mode, press the dictionary key . The screen displays "**Enter a word.**"
2. Type the word you want and press **ENTER** to get its definition.
3. To correct a typo during typing, press  to delete the last character typed or on the keys  or  to position the cursor where you want to insert a new character. To erase everything press the key **ESC** .
4. Before displaying the definition, the dictionary checks the spelling of the typed word. If the word is correct, the dictionary directly displays its definition.
5. If the word is misspelled, the dictionary will display a correction list. Use  or  to scroll the list and press **ENTER**.
6. Once definition is displayed, press  or  to scroll among the various definitions. Press  or  to navigate through related words.
7. To find another definition, press **ESC**  to return to the previous screen or press the dictionary menu button.

Crossword solving

To look for crossword solutions or for letter matching, type in the letters you know and ? for the unknown letters, then press **ENTER**. A list of possible words will be displayed.

Wild card

To look for words starting or ending with common letters you can use the * key to replace the other letters. Ex: to find the list of words ending with "tion", type ""tion" and press **ENTER** to start the search and display the results.

HYPERTEXT

The hypertext function allows you to find the definition of a word contained in the definition of another word.

1. Once the definition is displayed, press **ENTER** to select the first word of the definition.
2. Use the  and  to highlight the desired word.
3. Press **ENTER** to display its definition.
4. To return to the original definition, press **ESC**  touch.

SYNONYMS

1. To access to the synonym mode, press the . The screen will display "**Enter a word.**"
2. Type the word you want and press **SYN**  to get it synonyms.
3. Use the arrows  or  to scroll through the list.

CONJUGATION

1. To access to the conjugation mode, press the . The screen will display "**Enter a word.**"
2. Type the word you want and press **CONJ** . Different proposals might be displayed if available, press **ENTER** to select
3. Use the arrows to display all tenses.

USER LIST

You can save a word to your user list:

1. Once a definition is displayed, press **LIST** .
2. Confirm by pressing Y.
3. To display your user list, return to the dictionary mode  and press **LIST** .
4. To delete a word from user list, highlight it in the user list and press **ENTER**. Then, press **CTRL**  and X keys.
5. To delete the full list, press  and select "Clear user list". Press **ENTER** and Y to confirm.

INDEX

You can flip through the dictionary alphabetically, starting wherever you want.

1. Return to the dictionary mode. The screen displays "**Enter a word.**"
2. Type the first letter or letters of a word and press the key **INDX**  to display the alphabetical list of Dictionary entries.
3. Use the arrows  or  to scroll through the list.
4. To see a definition, highlight the word and press **ENTER**. To return to the alphabetical list, press **ECH** .

ANAGRAM SOLVER

This functions allows you to type letters and get all the list of all possible words with these letters.

1. Press  and select "**Anagram Solver.**"
2. Type the letters you want and press ENTER.
3. Use the  and  to scroll through the list.

GAMES

The dictionary contains 2 games: Hangman and Jumble.

Hangman: try to find the word by guessing the missing letters.

1. Press the menu key  and select "**GAMES.**"
 2. Press **ENTER** to select "**Hangman.**"
 3. The screen asks you to indicate the length of the word. Press  or  to increase or decrease the number of letters.
 4. Press **ENTER** to confirm.
 5. The screen displays a series of question marks representing the letters of the word to guess. The number indicates the number of guesses you can make.
 6. Submit letters by pressing their key. If the letter is correct it will be inserted on the right slot in the word. If the letter is not in the word, the screen will warn **There is no ...** and the number of remaining guesses will decrease. If you type a letter already given, the screen will display ... **already used** without reducing the number of guesses.
 7. If you guess the word before you use all of your chances, you win. Otherwise, you lose and the device will display the correct word.
 8. At the end of each game, the spellchecker will ask you **Another Game?** . Press **Y** to replay or **N** to cancel and exit the game.
- Note: during the game, press  to reveal the answer.

Jumble: put the letters in the right order to find the word.

1. Press the menu  and select "**GAMES.**"
2. Press the key  and then **ENTER** to select "**Jumble.**"
3. The screen asks you to indicate the length of the word to find, press  or  to increase or decrease the number of letters.
4. Press **ENTER** to confirm.
5. The screen displays a series of letters in a random order which are then replaced by question marks. The number indicates the number of guesses you have.
6. You have to put the letters in the right order to create a word. Type the word you think matches with the letters and press **ENTER** to find out if this is correct.
7. If the proposed word is not the correct one, you lose a guess and you need to try again. Press  to change the letter.
8. If you guess the word before you use all of your chances, you win. Otherwise, you lose and the dictionary will display the correct word .
9. At the end of each game, the Spellchecker will ask you **Another Game ?** . Press **Y** to replay or **N** to cancel and exit the game.

Note: during the game, press  to reveal the answer.

CALCULATOR

1. Press the key menu  and select "**Calculator.**"
2. The screen asks you to select the mode: simple mode or paperless mode (paperless mode allows you to keep a history of your previous calculations).
3. The keys with numbers and functions are all accessible to perform your operations. Press **ENTER** to have the answer. The key **ESC**  allows you to erase the screen content and start another operation.

Note : To enter a negative number, first type the amount, then press the key **N**  to type the sign "-".

CURRENCY CONVERTER

This function allows the conversion of two currencies.

1. Press  and select "**Currency converter.**"
2. To input the conversion rate, press  until the rate is flashing. Then, input the conversion rate you need and press **ENTER**.
3. To convert currency A into currency B, highlight the currency A (the arrow icon will be shown on the left) and input the sum you need to convert. The conversion will be displayed instantly for currency B.
4. To convert currency B into currency A, highlight the currency B and input the sum you need to convert. The conversion will be displayed instantly for currency A.

UNIT CONVERTER

These conversions are available:

- | | |
|--|---|
| Distance <ul style="list-style-type: none">• Inch - Centimeter (in - cm)• Foot - Meter (ft - m)• Yard - Meter (yard - m)• Mile - Kilometer (mile - km) | Weight <ul style="list-style-type: none">• Once - Gram (oz - gm)• Pound - Kilogram (lb - kg) |
| Temperature <ul style="list-style-type: none">• Celsius - Fahrenheit (° C - ° F) | Volume <ul style="list-style-type: none">• American gallon – Liter (US Gal - l)• Imperial gallon – Liter (UK Gal - l) |

1. To change of units, press **ENTER**. Once the unit is highlighted, pressing the ,  will change the units. Press **ENTER** to confirm.
2. Pressing **ENTER** twice will display the conversion rate. Press **ESC**  to return to unit converter.
3. Once the units of you choice are displayed, use  and  to select the unit for which you want to input the value. Type your number and the conversion will be shown immediately.

HELP MENU

To get help at any time, press the button . The device will The device will display an explanation to help you use the menu / game / solver selected.

1. Press  and  to scroll through the list of topics.
2. To return to the previous screen and exit help menu, press **ESC** .

MAINTENANCE

Do not expose the device to direct sunlight, extreme temperatures, humidity and dust. Do not drop the device. Do not use detergents, cleaning agents or solvents to clean the device. Simply wipe the device with a soft, dry, clean cloth. Do not twist the device. Do not attempt to open the casing.

WARRANTY

This product is covered by our 2-years warranty (Europe only - 3 months outside Europe).
Note: the warranty does not cover breakage of the LCD screen.

For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposition to heat and humidity, etc.). It is recommended to keep the packaging for any further reference.
In a bid to keep improving our services, we could implement modification on the colours and the details of the product shown on the packaging.

NOTE : Please keep this instruction manual, it contains important information.

Reference: D850EN
© Lexibook®
Designed in Europe - Made in China
Lexibook UK
PO Box 423
UMBERLEIGH
EX32 2JW
United Kingdom
France

 This product is not a toy.

For after-sales service, please contact us at
savcomfr@lexibook.com

www.lexibook.com

Environmental Protection :

Unwanted electrical appliance can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).

 **Correct disposal of batteries in this product**
(Applicable in countries with separate collection systems) This symbol means that the product contains a battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health. Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. For more detailed information about disposal of your old batteries, please contact your city office or waste disposal service center.