

Remote Controlled UMBRELLA LIGHT

ASSEMBLY AND INSTRUCTION GUIDE

Model# 49950 (Oak Finish), 49951(Dark Wood Finish)

ABOUT THE PRODUCT


Thank you for purchasing our umbrella light. We've designed this great light for your outdoor umbrellas to provide additional lighting you may need at night. You can set the brightness level and the number of hours the light stays on with the included remote control. The light is battery powered and comes with a pre-installed rechargeable (non-replaceable) battery. You can also add additional AA batteries as well. Please read this manual thoroughly before using the product and keep it for future reference.

WHAT'S IN THE BOX

EACH LIGHT INCLUDES:


- Umbrella Light Unit
- Remote Control (with Pre-installed Battery)
- Edison LED Bulbs – 4 attached to the light and 1 extra
- Hook Handle
- Type-C Charging Cable
- Quick Start Guide (this manual)

NOTE: AA BATTERIES NOT INCLUDED.

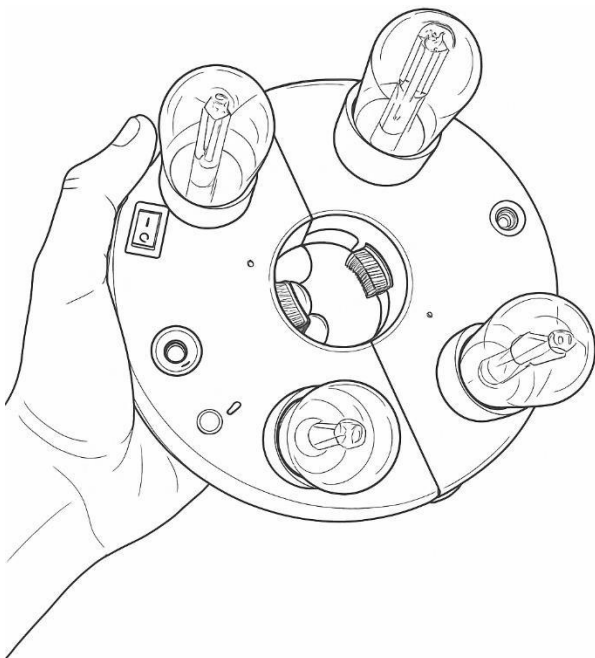

SETTING UP THE LIGHT

1. **Assembling the Edison Bulbs.** The bulbs are pre-inserted. An extra bulb is provided for future use.

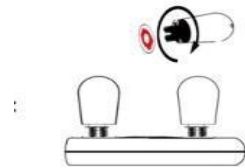

Push in Edison Bulb and Turn Clockwise to Lock.


2. **Charging the Product:** The Umbrella Light can be powered by either the included rechargeable batteries or use 2 AA's (not included).

Type-C Charging:

- Connect the included Type-C cable to the port on the light.
- Plug the other end into a USB power source (e.g., wall adapter, power bank).
- While charging, the indicator light glows red. Once fully charged, it turns green.
- For the best first-time experience, fully charge the light before initial use.

3. AA Battery Operation:

- Open the battery compartment.
- Insert AA batteries as indicated by the polarity symbols.
- Close the compartment securely.

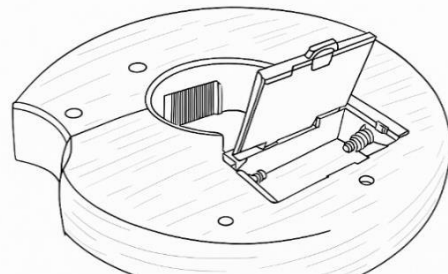


NOTE: The Umbrella Light is water resistant but not waterproof and must be mounted in a dry location.

INSTALLATION

ATTACHING TO UMBRELLA:


1. The light can be attached to umbrella center poles with diameters up to 2" (inches).
2. Open the light by holding the device firmly with one hand and then press the rounded "unlock" button (which protrudes out the side) with the other hand to release the clamp lock.
3. Open up the Umbrella Light and clasp around the mid pole or light adapter.

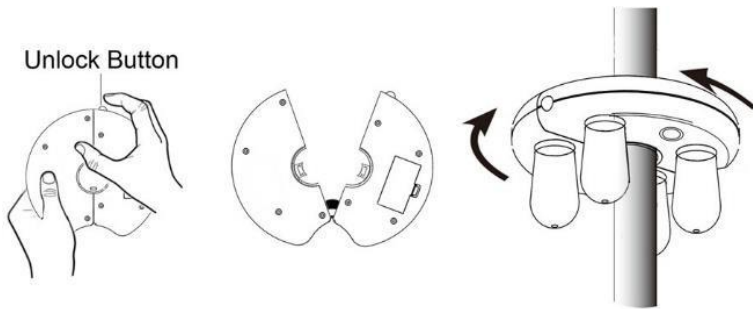

4. Snap to close.
5. Make sure the Umbrella Light is secure before using.

INSTALLATION (HANGING)

Hanging: If you prefer, the MAXSA Umbrella Light is equipped with a hook handle which allows you to hang it from the umbrella or an overhanging roof. Put the U-shaped piece over the area to be hung and thread through the center of the light. Push the ends into the round base, which will be at the bottom of the light and mount.

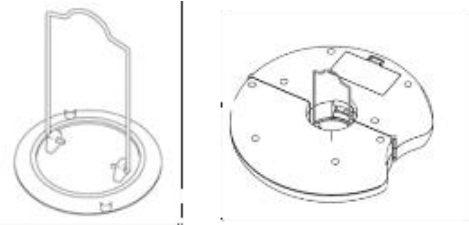


(Equipped with the hanging hook)

REMOTE CONTROL FUNCTIONS

1. Pull tab to allow the battery to start powering the remote.
2. **ON/OFF**
 - Green: Power On
 - Red: Power Off
3. **TIMER**

Choose Auto-Shutdown:

- 1H = After 1 Hour
- 2H = After 2 Hours
- 3H = After 3 Hours
- 4H = After 4 Hours

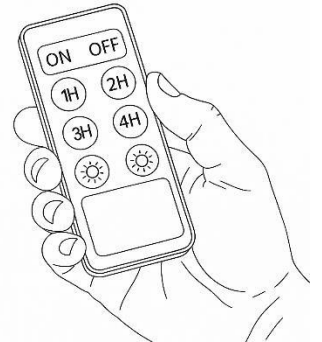

4. **DIM**

Choose Light Mode (10 Brightness Levels)

- (-) = Lower brightness
- (+) = Higher brightness

Tips for Remote Use:

- Point the remote toward the light unit, ensuring a clear line of sight.
- Operate within a few yards for best responsiveness.
- If the remote becomes unresponsive, replacing its battery or move closer to the light.

NOTE: Before Using the Remote, you must have the three-position toggle switch turned on with 1 line. Move this switch to the "I" (first) position. If the switch is in another position, the remote will not operate the light.

CARE & MAINTENANCE

- **Cleaning:**

Wipe with a soft, dry cloth. Do not use harsh chemicals or immerse in water.

- **Storage:**

Store in a cool, dry place when not in use for long periods. **DO NOT LEAVE OUTSIDE IN RAIN.**

- **Battery Care:**

Remove AA batteries if not using the unit for an extended time.

Recharge the built-in battery as needed to maintain performance.

- **Changing an Edison bulb.**

To remove the bulb push in and twist counter clockwise. To insert new bulb: line up slots, push in new bulb and turn clockwise.

SAFETY PRECAUTIONS

Intended Use:

Designed for outdoor use under an umbrella. Avoid exposing it to rain, snow, or extreme conditions.

- **Handling & Care:**

Do not disassemble, puncture, or modify. Keep away from small children —this is not a toy.

- **Batteries & Charging:**

Use only recommended batteries and charge in a safe, dry area. Disconnect from power when fully charged.

- **Fire Safety:**

Keep away from open flames and flammable materials.

⚠ WARNING

INGESTION HAZARD:

This product contains a button cell or coin battery.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Light Won't Turn On	1. Light is not charged or batteries have gone bad. 2. Power Button is not turned to the 2 or 1 position. 3. The remote control battery is dead if using remote.	1. Recharge the light via the USB-C cable. 2. Ensure AA batteries are installed correctly or replace. 3. Replace the battery in the remote.
DIM Light	1. Low battery. 2. Incorrect brightness mode.	1. Replace/Recharge batteries. 2. Increase brightness mode.
Unresponsive Remote	1. Dead remote battery. 2. Remote is too far from light. 3. Object is obscuring the light.	1. Replace coin battery in remote. 2. Move closer to the light. 3. Have a direct line of sight with light.

90 DAY WARRANTY

90 DAY LIMITED WARRANTY MAXSA Innovations, LLC warrants to the original consumer/purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for a period of ninety (90) days from the date of original purchase for use. When the original consumer/purchaser returns the product pre-paid (consumer pays return shipping) to MAXSA Innovations, LLC, 8412 Cathedral Forest Drive, Fairfax Station, VA 22039; USA within the warranty period, and if the product is defective, MAXSA Innovations, LLC will at its option repair or replace such. This warranty shall constitute the sole liability of MAXSA Innovations, LLC concerning the product MAXSA Innovations, LLC expressly disclaims all other warranties INCLUDING, WITHOUT LIMITATION, THE WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO PERSON, FIRM, OR CORPORATION IS AUTHORIZED TO ASSUME FOR MAXSA Innovations, LLC ANY OTHER LIABILITY IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. MAXSA Innovations, LLC and agents and distributors will bear no liability whatsoever for incidental or consequential damages or charges of any kind. Some states do not allow the reclusion or limitation of incidental or consequential damages, so the above disclaimer regarding incidental or consequential damages may not apply to you. This warranty is void if the product has been damaged or tampered with or if the product or any such parts have been opened. In all cases of damage during shipment, a claim must be filed with the shipping carrier and not with MAXSA Innovations, LLC. This warranty gives you specific legal rights; you may also have other rights which vary from state to state.

SPECIFICATIONS

Batteries: AA Battery-2 (optional)

Included Rechargeable Lithium-ion

Battery #18650 – 1500mAh 3.2V

Light Color: 3000K

Light Duration:

- Full Power – 5 Hours
- Low Power – 15 Hours

Battery (Remote Control): 3vCR2025



MAXSA Innovations
8412 Cathedral Forest Drive
Fairfax Station, VA, 22039

MADE IN CHINA

V.25.4

©2025 MAXSA Innovations, LLC

Tel: 703-495-0661
www.maxsainnovations.com
info@maxsainnovations.com