

SHARPER IMAGE®

ELECTRIC SPIN AND STEAM POWER GRILL BRUSH

Item No. 212183

User Guide



Thank you for purchasing the Electric Spin and Steam Power Grill Brush. Please take a moment to read this guide and store it for future reference.

HEAVY DUTY STEAM CLEANING POWER



RECHARGEABLE LI-ION BATTERY

- **Model:** IMR18650-2000mAh
- **Voltage:** 3.7V
- **Capacity:** 2000mAh
- **Energy:** 5.55 Wh
- **Charging voltage:** 4.2V

- **Charging time:** 5 hours
- **Sustainable use time:** 2 hours
- USB Type-C charging port
- This product does not include a charging cable.

Indicator Light	Status
Red light	Charging
Green light	Charging completed

WARNING


Examine brush before each use. Discontinue use if bristles are loose, damaged, missing, or show excessive wear.

Carefully examine cooking surface for loose bristles before cooking. Stop using if any bristles are found on the grill. Bristles can get into the food and cause serious injury. Replacement after one year of use is recommended.

- The unit has sharp edges. Be cautious when using and keep away from children.
- Do not place the unit in a barbecue or oven, or on an open fire.
- Discontinue use if the unit's handle becomes hot.
- Ensure the rotating brushes are securely in place prior to use.
- The unit is not weather-resistant. Appropriate care should be taken when using and storing the unit.


PARTS IDENTIFICATION

1. Power Button
2. Handle
3. Battery Compartment
4. Water Spray Button/Water Reservoir Access Tab
5. Scrapers [2]
6. Rotating Brushes [2]
7. Spray Nozzle

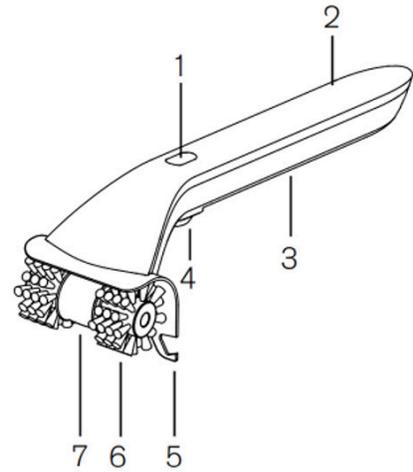

FILLING THE RESERVOIR

1. Pull open the water reservoir access tab.
2. Fill with clean tap water.
3. Press the water reservoir access tab securely back into place.

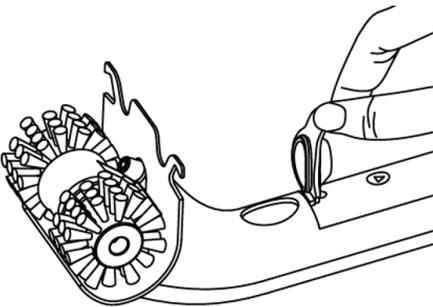

USING THE GRILL BRUSH


IMPORTANT: Refer to your grill's user manual for cleaning instructions before using the grill brush.

1. After your grill has been used or heated up, turn your grill off and open its lid.
2. Press the power button on the grill brush to turn the rotating brushes on.
3. Press the water spray button and spray water on the hot grill grate. This creates steam to loosen tough grease and grime. **NOTE: You may need to push the water spray button several times to prime the sprayer.**
4. Clean the grill grate by moving the rotating brushes back and forth.
5. Use the scrapers to remove tough buildup.
6. Press the power button to turn the rotating brushes off.

CARE AND MAINTENANCE

CLEANING THE ROTATING BRUSHES

1. Insert a small screwdriver between the brush heads and the housing.

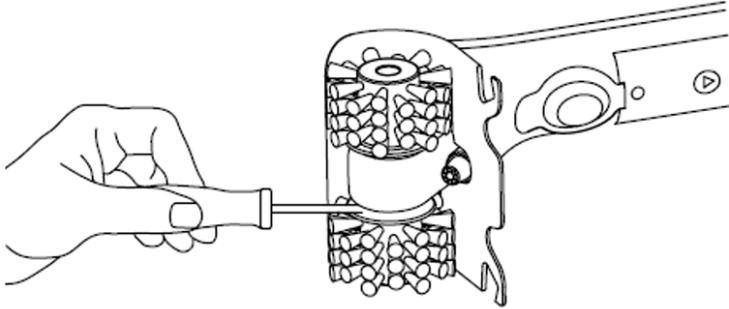

2. Lift the screwdriver up to remove each rotating brush.

3. Hold the rotating brush under warm running water.

4. Allow the rotating brush to air dry completely.

5. When the rotating brushes are dry, slide and snap them back in place.

IMPORTANT: *Do not put the ROTATING BRUSHES in the dishwasher.*

CLEANING THE HANDLE

Wipe the handle with a soft, slightly damp cloth. Do not submerge the handle.

CLEANING THE SCRAPERS

Wash the scrapers in warm soapy water. Dry thoroughly before the next use. Do not submerge the handle.

WARRANTY AND CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty.

If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.