 


HYPER BIKE RC *Stunt*

ITEM#17023 HYPER BIKE R/C
Recommended for ages 4+.
Adult supervision required.
Please read and follow this instruction manual.

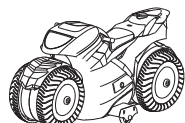

Motorcycle x1



Remote control x1



Bottle x1




Rechargeable battery pack x1





USB charging line x1

Battery information:

Hyper Bike R/C comes with a rechargeable 3.7V Battery for the bike, and requires 2 x AA batteries for the remote control (Not Included). To charge the battery, plug the battery to the USB chord (included) and use a USB outlet (not included) to charge. The chord will light up red while being charged, and turn off when charge is complete. To install the charged battery, open the compartment under the car. Insert and plug the charged battery to the bike. Close compartment. Make sure to screw the compartment closed. Next, install the Remote Control's batteries by opening the battery compartment on the back of the remote. Insert 2 x AA batteries (Not Included). Make sure the batteries match the polarity. Close the compartment. Once the bike and control have batteries, turn the button on the bike to ON, and press the remote's up button to sync. You are now ready to control your Hyper Bike RC.

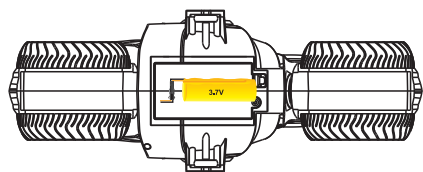


3.7V Rechargeable Battery (Included)
USB Charging Chord (Included)

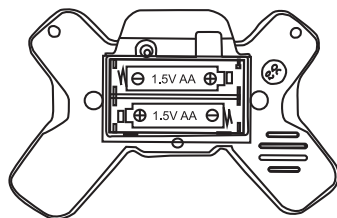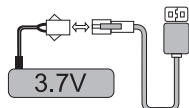

2 x AA Batteries for Remote Control
(Not Included)


Remote control:

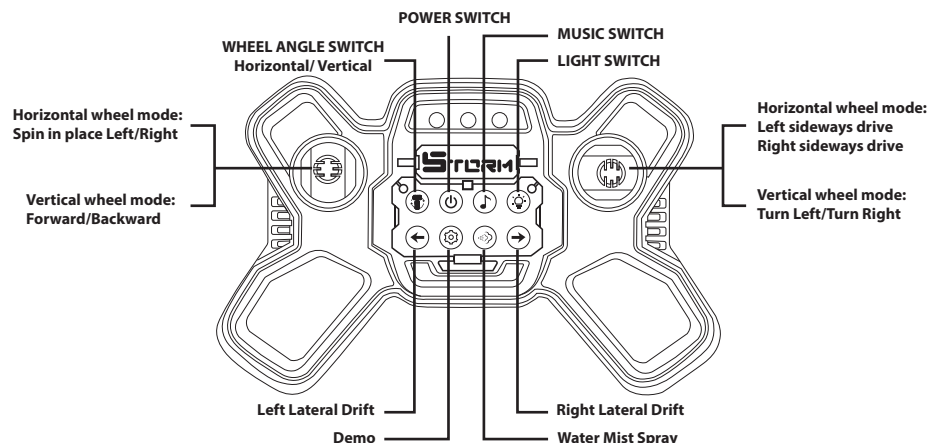


How to drive/control Hyper Bike

Pair the Bike with your Remote control: Press the on button on the bike, the bike's lights will flash, and make a sound. Hyper Bike will enter "frequency match" mode. Press the switch on the remote control, when the remote control light stops flashing, the bike and remote control are now paired.
Multiple Hyper Bikes can be raced at once. Pair each bike with each remote control to do so.
Switch Button: Use to turn remote control on and off.
Music Button: Short press to switch between sound or music. Press again to turn off. Press again to turn music on.
Light Button: Press to turn lights on / off.
Wheel Angle Switch: Press and hold the button to switch wheels from vertical to horizontal mode.
Lateral Drift Right/Left: Press and hold the button to switch wheels from vertical to horizontal mode and drift in that direction. Release button to return the wheels back to vertical position.
Water Mist Spray: Press button for Hyper Bike to spray mist from exhaust.
Demo: Press button and Hyper Bike will perform a automatic demonstration.


WHEEL ANGLE SWITCH

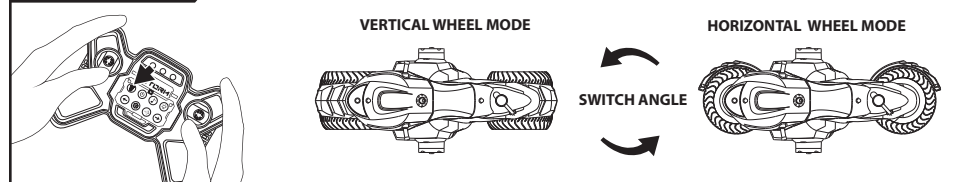


FORWARD / BACKWARDS SPIN IN PLACE Left / Right

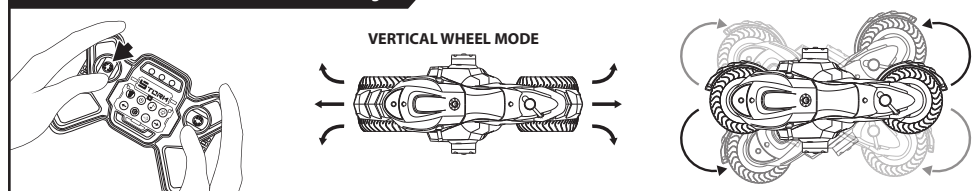

TURN LEFT / RIGHT SIDEWAYS DRIVE

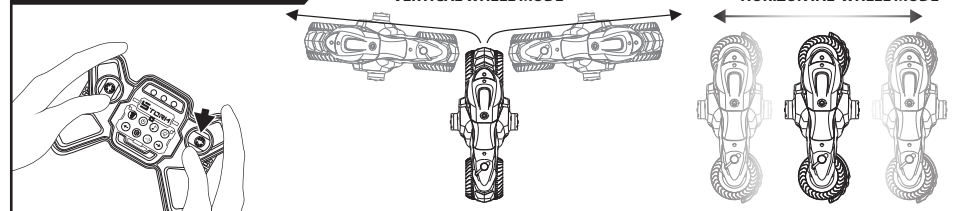

WATER MIST SPRAY

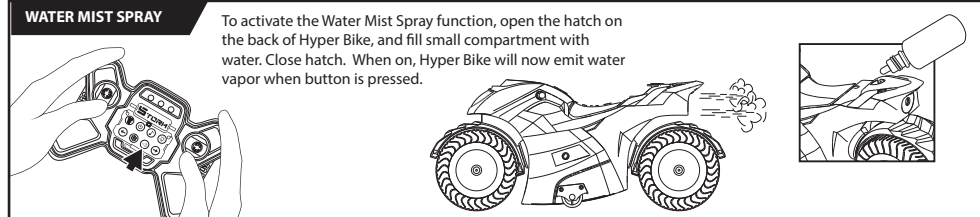

Note:

When the remote control cannot control the remote control car, first remove the battery of the remote control and re-install the battery, then turn off the power of the remote control car, then turn on the power, and then the remote control resets the frequency.