

THE HANDS-FREE FOOT SMOOTHER



SALONSTEP™

PEDI POLISHER

Hands Free Exfoliator






INSTRUCTIONS MANUAL

Patent Pending.


COMPONENTS

- A** On/Off button
- B** Roller lock button
- C** Main body
- D** Polish roller
- E** Roller Pressure Bar
- F** Textured footpad
- G** Suction cups
- H** Battery housing screw
- I** Battery housing
- J** Bottom holes

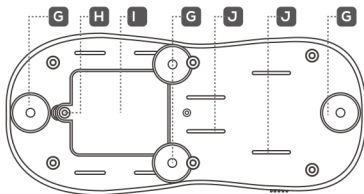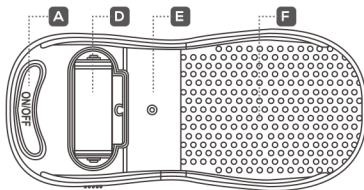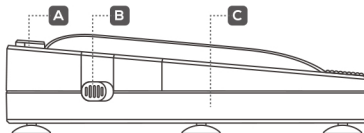


USING

FOR SAFETY PURPOSES BEST USED WHILE SEATED

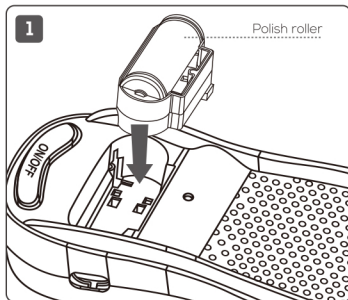

Step 1

Load the polish roller in the right position, and push down until it clicks in securely: **1**

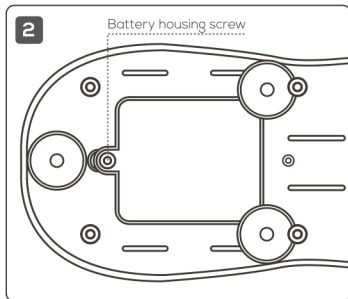

Step 2

Unscrew the battery housing screw, and put the 3 AA batteries in the right position. Put the battery housing cover back on and screw in tightly: **2**




SALON STEP™

PEDI POLISHER


CHECK AMAZON FOR
THE SALON STEP PEDICURE STAND

Patent Pending.

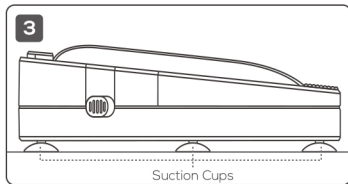


Step 3

Put the unit on the ground and push down until the suction cups grab tightly: **3**

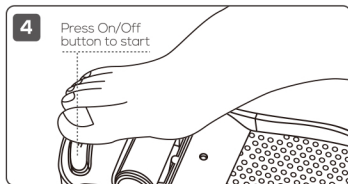

Step 4

With your toe push down on the On/Off button until the roller is activated: **4**

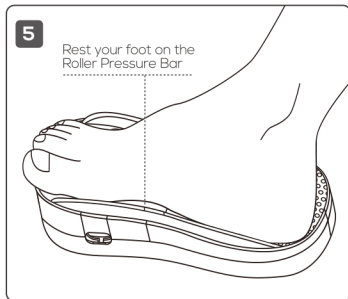

Step 5

Rest your foot on the Roller Pressure Bar and ease your foot on to the spinning roller: **5**

TRY NOT TO REST ALL OF YOUR WEIGHT ON THE ROLLER SINCE THAT WILL CAUSE THE ROLLER TO SLOW DOWN AND AFFECT THE PERFORMANCE.

CHANGING

Step 1

Unscrew the battery cover

Step 2

Take off the cover

Step 3

Take out the old batteries and replace with 3 new AA batteries and screw the cover back on



Please note that the batteries "+/-" position has to be the same as the marking on the housing.

CLEANING

Washing the roller directly **④**, the dirty water will outflow from the bottom holes: **⑤**

