

CucinaPro™

cook to inspire



DELUXE CHEESE RACLETTE & TABLE GRILL
With Eight Cheese Melting Trays

460

DELUXE CHEESE RACLETTE & TABLE GRILL

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions.
2. Do not use this for more than an hour at a time as it is very hot.
3. Do not touch hot inner surfaces; use the handles and oven mitts.
4. To protect against electric shock, do not immerse power cord, plug or appliance in water.
5. Do not use outdoors.
6. Close supervision is necessary when any appliance is being used by or near children.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Unplug from outlet when not in use and before cleaning.
9. Allow appliance to cool completely before putting on or taking off parts.
10. Do not operate any appliance with a damaged power cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to manufacturer or its service agent for examination, repair or electrical or mechanical adjustment.
11. Do not let the power cord hang over the edge of a table or counter or touch any hot surface.
12. Do not use the appliance for other than intended use.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. Do not clean the appliance with metal scouring pads.
15. Do not operate this appliance on or near hot surface. (Hot plate, electric stoves, etc.)
16. In order to prevent accidents, do not operate this grill near water sources or flammable liquids within 40cm.
17. Do not put the power cord near fire, heat sources or under carpet.
18. Never try to touch the hot surface of this grill before it has cooled down.
19. Do not use an the extension power cord. Always operate this appliance on the socket with at least 13A fuse.
20. Never try to repair the cable or plug by yourself. Please take the damaged set to the service center.
21. Before you plug or unplug the appliance, please ensure the power switch to "OFF" position.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it does not fit, contact a qualified electrician. Do not modify the plug in any way.

THIS DEVICE IS FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

Longer extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of the appliance. Arrange the longer cord so that it will not drape over the counter top or tabletop where it can be pulled on by children.

USING YOUR DELUXE 8-PAN CHEESE RACLETTE & GRILL

- Connect the appliance to the power supply. Turn the switch from "OFF" to "MAX" position and the indicator light will turn on.
- After pre-heating the appliance for 5 minutes, place food on grill.
- You can adjust the heat by turning the knob between "OFF" and "MAX".
- During heating process, the indicator light will turn both on and off automatically. This is because the appliance has automatic thermostatic control.
- Grill your favorite meat, veggies and more on the non-stick grill plate and granite cooking stone. You can simultaneously melt cheese on the Raclette pans below, or wait until your meat and veggies are done, then transfer them to the Raclette pans and put cheese on top to melt over them.

CLEANING AND CARE

- After the appliance is completely cooled down, clean it with the mild cleaner by using soft cloth. Please do not clean this appliance when it is still hot.
- Except for the removable pans, do not immerse the main body in water to clean.
- Do not use hard brushes, scratchy materials, alcohol or any organic cleaner for cleaning.

**DO NOT IMMERSE IN WATER OR ANY LIQUID.
DO NOT PLACE IN DISHWASHER**

RECIPES AND TIPS

Traditional Raclette & Grill Recipe - Serves 8

Small New Potatoes

Swiss Cheese, cut into slices (You can use Colby, Pepper Jack, Cheddar, or other cheese preference)

Include a selection of meats/poultry of preference, cut into bite size pieces. (Suggestions: Prosciutto, Chicken, Sausage, Beef, Fish, Shrimp, Scallops)*

Include a variety of cut up vegetable of preference (Peppers, Mushrooms, Garlic, Eggplant, Onions, Zucchini, Red Potatoes)

- Place a slice of cheese into the Raclette pan for each person.
- Position the Raclette pans under the grill to melt while the meats poultry/vegetables simultaneously cook above.

Appetizer/Side Dish Recipe

Sliced bread of your choice (suggestion: French bread)

Thin, small slices of pre-cooked meat and veggies (Suggestions: bacon, ham, sliced mushrooms, diced tomatoes, chopped onions, or any other preferences)

- Toast the bread on top of the grill plate.
- Put the cheese slices with desired pre-cooked toppings in the Raclette pans below.
- Once toasted, pour the melted cheese with cooked toppings on top of the bread.

ONE YEAR LIMITED WARRANTY

CucinaPro™ warrants to the original purchaser that this product will be free from defects in material and workmanship under normal home use for one year from the date of purchase with valid proof of purchase. During this period, CucinaPro™ will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be guaranteed for only the unexpired portion of the original warranty or six months, whichever is greater.

This limited warranty does not apply to any defects resulting from accident, misuse, improper maintenance, or normal wear and tear. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances. If for any reason you're not completely satisfied with your purchase, you may return your selection with original proof of purchase for an immediate exchange or refund (less shipping and processing) within 30 days of receipt with valid proof of purchase.

This warranty only applies to CucinaPro™ products operated in the United States. CucinaPro™ products operated outside the United States, the original purchaser will be responsible for shipping costs. If you believe your product is defective, please contact CucinaPro™ Customer Service.

CucinaPro™
www.cucinapro.com
customerservice@cucinapro.com



© SCS DIRECT INC
Trumbull, CT USA 06611