

CucinaPro™

cook to inspire



DOUBLE COFFEE BREW STATION

Brew 2 Pots of Coffee at the Same Time

9910R

DOUBLE COFFEE BREW STATION

IMPORTANT SAFEGUARDS

When using electrical appliances, to reduce the risk of fire, electric shock, and/or injury to person basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place cord, plug or coffee maker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near hot gas or electric burner, or in a heated oven.
11. Always plug cord into the wall outlet before turning on any controls. To disconnect turn power control to OFF, then remove plug from wall outlet.
12. Always use cold water to make coffee. Warm water or other liquids could cause damage to the coffee maker.
13. Scalding may occur if the cover is lifted or removed during the brewing cycle.
14. Do not use this appliance for other than intended use.
15. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it does not fit, contact a qualified electrician. Do not modify the plug in any way.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it does not drape over the counter or table-top where it can be pulled on by children or tripped over accidentally. The electrical rating of the coffee maker is listed on the bottom panel of the unit.

COFFEE MAKER SAFETY FEATURES

Pause & Serve: Allows you to interrupt the brewing cycle and pour a cup of coffee before the entire carafe is finished brewing. To restart the brewing process, return carafe to warming plate and coffee will automatically begin flowing through filter basket. Make sure carafe is placed all the way onto the warming plate.

CAUTION: DO NOT REMOVE CARAFE FOR LONGER THAN 30 SECONDS OR FILTER BASKET MAY OVER FLOW.

- **Water Window:** Large easy to read numbers indicate how many cups of water have been poured into the coffee reservoirs.
- **On Light:** On Light lets you know when the coffee maker is on for safe operation.
- **Flavor Seal:** Carafe lip and lid seal to help preserve the coffee's natural flavor and temperature by preventing excessive evaporation.
- **Non-Stick Warming Plate.**

MAKES CLEAN-UP EASY

- **Cord Storage:** Hidden cord storage allows you to hide excess cord.
- **Swing Away Basket:** Filter door swings for convenient filling.
- **Black Lined Cone Filter Basket:** Cone shaped filter basket enriches flavor and prevents bitter taste. Black lining helps to hide stains. A standard #4 cone-shaped filter may be used.

THIS DEVICE IS FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

To avoid breakage of, or injury from glass carafe follow these precautions:

- Do not set a hot carafe on a wet or cold surface.
- Do not place hot carafe on or near paper, cloth, or other flammable material.
- The container is designed for use with this appliance. It must never be used on a range top.
- Do not allow liquid to evaporate from carafe. Do not heat carafe when empty.
- Do not move carafe during brewing until liquid finishes dripping.
- Use the lid on the glass carafe while brewing and pouring coffee.
- Discard carafe if damaged in any manner, or a carafe having a loose or weakened handle. A chip or crack could result in breakage or contaminate liquid contents with glass particles.
- Do not clean carafe with cleansers, scouring powders, steel wool pads or other abrasive materials.
- This carafe is designed for use with this coffee maker only.

CLEANING AND CARE

CAUTION: Always make sure coffee maker is unplugged and warming plate is cool before attempting to clean. To protect against electric shock, do not immerse cord, plug or unit in water or other liquid.

- The outside of your coffee maker can be cleaned by wiping the surface with a damp, soft cloth.
- **IMPORTANT:** Never immerse the coffee maker in water or other liquid.
- Glass carafe, carafe lid and removable filter basket may be washed with warm, soapy water or placed in the top rack of the dishwasher. Do not place any other parts of the coffee maker in the dishwasher.
- To clean the permanent filter, empty the grounds and rinse thoroughly.
- Do not clean the inside of the water reservoir with a cloth as the cloth may have a lint residue that could clog the coffee maker.
- For stubborn stains, use a nylon or plastic pad with a non-abrasive cleaner. Do not use metal scouring pads or abrasive cleansers.

- Calcium deposits may build up in the coffee maker as a result of minerals commonly found in drinking water. The build-up is normal and may result in a slowdown of the coffee maker's brewing time. The slowdown can be eliminated by periodically decalcifying the coffee maker.
- To decalcify, fill the carafe with cold water and two tablespoons of white vinegar. Pour the solution into the water reservoir, and then close the lid. Place the carafe on the warming plate and allow the coffee maker to brew the vinegar solution. While decalcifying, do not use a filter in the filter basket. When the vinegar solution has finished brewing, empty the carafe and rinse it out with cold water. Refill the water reservoir with cold water only and run another brew cycle to remove any remaining vinegar solution. Repeat if necessary.

THIS COFFEE POT IS MADE FROM THE FINEST MATERIALS POSSIBLE, BUT IS NOT A COMMERCIAL UNIT.

PLEASE DO NOT LEAVE THE COFFEE MAKER ON FOR MORE THAN 12 HOURS AT A TIME.

**THE COFFEE MAKER WILL NOT TURN OFF AUTOMATICALLY
PLEASE TURN OFF WHEN YOU ARE DONE USING IT.**

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

CAUTION: DO NOT IMMERSE BODY OF UNIT IN ANY LIQUID.

HOW TO USE YOUR COFFEE BREWER

PREPARING YOUR COFFEE MAKER FOR USE

- Carefully unpack the coffee maker and remove all packaging materials.
- Before making coffee in your coffee maker, thoroughly clean the carafe, carafe lid and filter basket with warm, soapy water. Rinse and dry. Do not use harsh or abrasive cleaners.
- You may wipe the warming place with a clean, damp cloth. However, do not immerse the coffee maker in water or other liquid.
- Prior to brewing your first pot of coffee, operate coffee maker once or twice with water but without ground coffee or a paper filter. This will remove any dust that may have settled inside the coffee maker which might affect the flavor of coffee.
- Use cold water for best results.

PREPARING COFFEE MAKER FOR BREWING COFFEE

- Place your coffee maker on a flat, level surface away from any edge.
- Plug the unit into a 120 Volt - 60 Hz AC only outlet.
- The lid of the glass carafe must be placed properly on the carafe during the brewing process and the carafe must be set on the warming plate.
- The filter basket door must be placed properly closed during brewing process.

CAUTION: If the filter basket door is not completely closed, the Pause & Serve feature will not function properly. It could cause hot water or hot coffee to overflow.

FILLING THE WATER RESERVOIR

Open the hinged water reservoir cover located at the top of the coffee maker. Fill the glass carafe with the desired amount of cold water. Empty the water from the carafe into the water reservoir. The water window indicates how much water is in the container. Close the hinged lid. Place the glass carafe with the lid in place on the warming plate.

NOTE: The amount of brewed coffee after the brewing process will always be slightly less than the amount of water placed into the coffee maker, since some water is absorbed by the coffee grounds and filter. Add a little extra water at the beginning so that you have the exact number of cups desired.

PREPARING AND FILLING BREWER

- Swing the filter basket door outward to your right. Lift out removable filter basket. Insert a #4 cone-shaped filter into the filter basket. The permanent filter may be used instead of the paper filter. Fill the filter with the required amount of coffee. After brewing cycle, empty the grounds and rinse thoroughly with water.
- Place the desired amount of ground coffee into the filter. According to coffee industry standards, use one standard coffee measure (2 level tablespoons) of grounds for each six ounces of water. After using your coffee maker several times, the amount of coffee may be adjusted to suit your particular taste of decreasing or increasing the amount of coffee used.
- Return the filter basket with the filled filter to the door. Be sure the filter basket is seated properly in the door. Swing the door closed and snap into place.

CAUTION: Do not operate your coffee maker if the door does not close completely. If the door does not close completely, check to see that the filter basket is properly sealed and then snap the door into place.

- Press the Power Select Button. The On Light will go on indicating that the coffee maker has begun the brewing cycle. In a few minutes the coffee maker will complete the brewing cycle and switch over to the warming mode which will keep the coffee hot.
- Press the Power Select Button to OFF when the carafe is empty or when the coffee maker is not in use.

HINTS FOR GREAT TASTING COFFEE

A clean coffee maker is essential for making great tasting coffee. Regular cleaning, as specified in "Cleaning your Coffee Maker" is highly recommended. Always use fresh, cold water in your coffee maker. For optimum coffee, buy whole beans and grind them just before brewing. Re-using coffee grounds is not recommended. Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing. Small oil droplets on the surface of brewed black coffee are due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Over extraction may also cause oiliness, indicating a need to clean your coffee maker.

ONE YEAR LIMITED WARRANTY

CucinaPro warrants to the original purchaser that this product will be free from defects in material and workmanship under normal home use for one year from the date of purchase with valid proof of purchase. During this period, CucinaPro will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be guaranteed for only the unexpired portion of the original warranty or six months, whichever is greater.

This limited warranty does not apply to any defects resulting from accident, misuse, improper maintenance, or normal wear and tear. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances. If for any reason you're not completely satisfied with your purchase, you may return your selection with original proof of purchase for an immediate exchange or refund (less shipping and processing) within 30 days of receipt with valid proof of purchase.

This warranty only applies to CucinaPro products operated in the United States. CucinaPro products operated outside the United States, the original purchaser will be responsible for shipping costs. If you believe your product is defective, please contact CucinaPro Customer Service.

CucinaPro™
www.cucinapro.com

customerservice@cucinapro.com



© SCS DIRECT INC
Trumbull, CT USA 06611

