 




Electronic ATM Bank



Item #D100
INSTRUCTIONS

5+

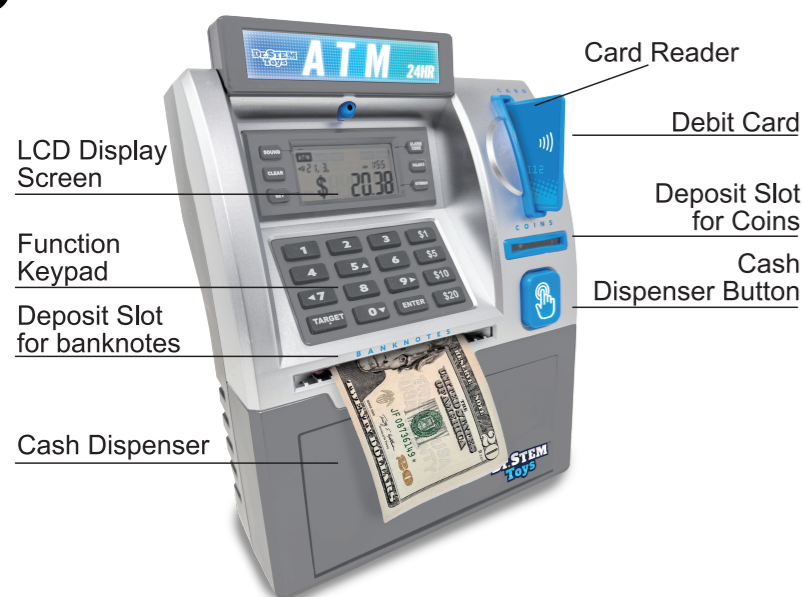

1. How to Install Batteries

- 1) Install 3 AA batteries, aligning them with the positive and negative terminal directions. The time, date, and alarm will be displayed on the LCD display screen.
- 2) Replacing batteries will reset the previous balance and the saved PIN number.

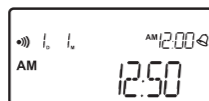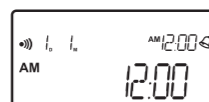

2. How to Set the Time

- 1) To set the time and date, please press and hold the [SET] button until [2017] flashes, you can press ▲ or ▼ to set the year, then press [ENTER] to confirm the year setting, and then confirm the settings of month, day, hour, and minute.

Note: All settings need to be confirmed before proceeding to the next steps.

- 2) To set the hour, press the arrow keys, the time setting will start to switch from AM12:00 to PM12:00. If you continue to press the arrow key, it will jump to 24-hour format. So you can choose either 12-hour or 24-hour format.

3. How to Set the Alarm





- 1) Press the [ALARM] button, the current alarm will be displayed on the LCD (the initial alarm is 12:00AM). Press the [ALARM] button again until you see the alarm icon, set the time for the alarm. If the alarm icon is already shown, you can press the button to disable the alarm.
- 2) Press the [SET] button, the hour digits will flash, press ▲ or ▼ to adjust the hour digits and confirm by pressing the [ENTER] button. When the hour setting is completed, the minute digits will flash, press ▲ or ▼ to adjust the minute digits, then confirm the minute setting by pressing the [ENTER] button. When the alarm sounds, which will last for 60 seconds, you can press any button to disable the alarm.

4. Sound Effects

- 1) If the sound effect icon is displayed in the lower left corner of the LCD, it means the sound effect is enabled; If the icon disappears when you press the [SOUND] button, it means that the sound effect is turned off and the system is completely muted. You can press the button again if you want to turn on the sound effect.
- 2) Long press the Sound button for 3 seconds until the sound icon flashes, press [▲] or [▼] to adjust the sound volume, and then confirm by pressing [ENTER]. The default system sound volume is 75%.

5. Operations for ATM BANK Mode with an ATM Card

- 1) Insert your ATM card, there will be a sound playing, and the [CODE] or the PIN icon will be displayed on the screen.
(The default PIN is 0000)
- 2) After entering the correct PIN, a success prompt tone will be played, ATM operation mode starts, you will see the [ATM] icon on the screen, which means that the ATM operation mode is in progress.
- 3) If an incorrect PIN is entered, the [CODE/WRONG] icon will flash. At the same time, an error tone will be played. So you will need to re-enter the correct PIN.
- 4) Deposit and withdrawal can be processed after inserting the card and entering the PIN.

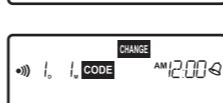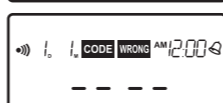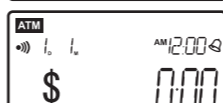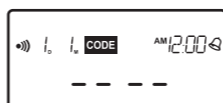

6. How to Change Your PIN

In [ATM] mode, after pressing the [ALARM/CODE] key, the [CHANGE/CODE] icon will flash and a prompt tone will be played. You can change your PIN by entering four digits and confirm by pressing [ENTER].


7. How to Deposit Coins

- 1) After inserting the coins, there will be a coin deposit prompt tone. Meanwhile, the value of the coins deposited and the [BALANCE] icon will be displayed on the screen. Your total balance will be shown automatically.
- 2) When inserting coins, your deposit amount will be displayed for 1.5 seconds, and then switched to the total balance for 3 seconds. In ATM mode, if no button is pressed, the clock will be shown.
- 3) The US coins that can be deposited include: dimes (\$0.10), pennies (\$0.01), nickels (\$0.05), quarters (\$0.25), and dollar(\$1).




8. How to Deposit Banknotes

- 1) Press the \$ button corresponding to the amount of your bill.
- 2) You will hear the motor turn on — feed your bill into the slot and your deposit amount will display on the screen.
- 3) Only the following banknotes can be deposited on the keypad interface: \$1, \$5, \$10, and \$20 notes.



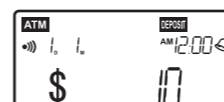


- 4) OR, in ATM mode, press the number (i.e. 1, 5, 10) on the keypad, and then press ENTER, the deposit mode will be displayed on the LCD, and the motor will rotate. This input method is only valid for 1,2,5,10,20, and 50, and it's invalid for other numbers. There will be an error if an invalid number was entered, and the motor will not rotate.
Note: The maximum balance is \$9,999.99

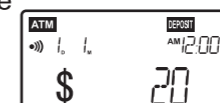

9. How to Withdraw Money

- 1) Press the [Withdrawal] button - the dispenser light will turn on. You can also open the dispenser by pressing the fingerprint key, and the light goes out, the dispenser opens, and the [WITHDRAW] icon will flash.
- 2) Input the withdrawal amount on the keypad and press [ENTER], remove the corresponding amount of money. When complete close the dispenser.
- 3) Limited withdrawal amount: the withdrawal amount cannot be larger than the account balance.

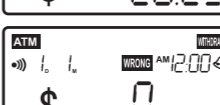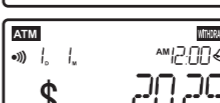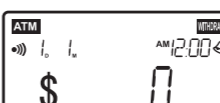

※Please note that the deposit and target setting can not be done when the dispenser is open. Also, after the dispenser is open for 20 seconds and not closed, the reminder sound will be played every 20 seconds until it is closed.


10. How to Check the Balance

In [ATM] mode, press the [BALANCE] key, the balance icon flashes on the LCD and displays the current total balance.



11. How to Set the Deposit Target

- 1) Press the [TARGET] key, and then press [SET], you can start the setting of your deposit target when you see the [TARGET] icon flashing.
- 2) Press the number keys and then press [ENTER], the setting will be completed and the sound effect will be played.
- 3) When the target setting is completed, the total deposit amount will be displayed and a prompt sound will be played.

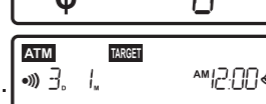


12. Function of the CLEAR Key


- 1) If the withdrawal amount entered is wrong, simply press the [CLEAR] Key.
- 2) While entering the PIN, only the first three digits can be cleared.

13. Reset Key (Found near battery door)

Press the restart button to restart ATM and restore the original settings.

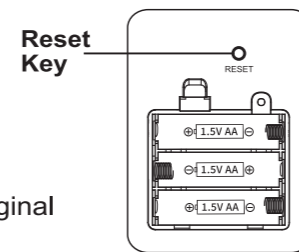

Description of Function Keys

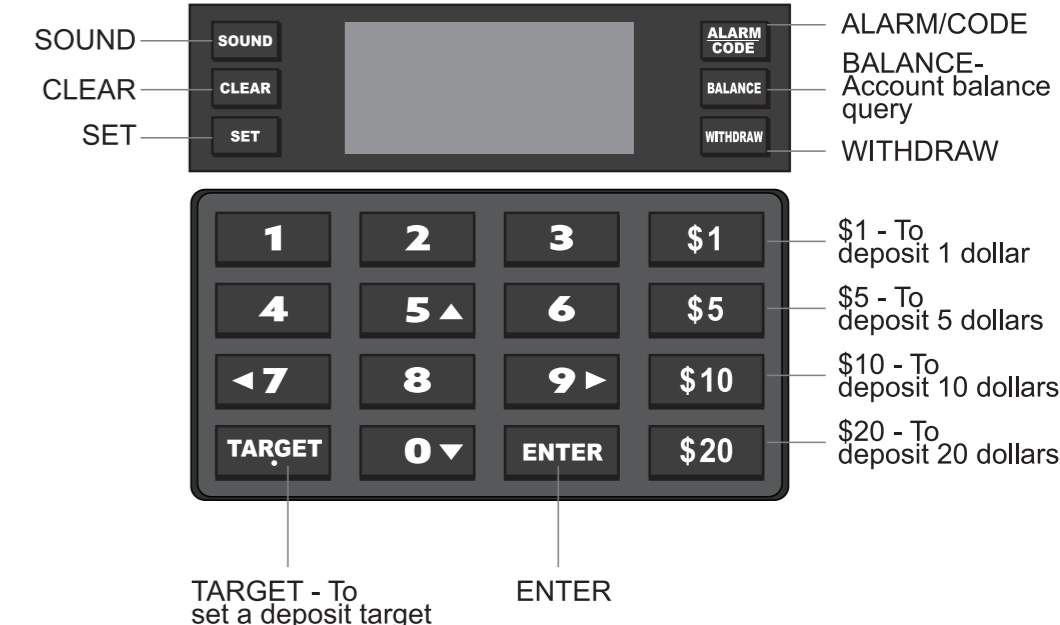

Battery Warnings:

- 1.This product uses 3* 1.5V "AA" batteries.
- 2.How to remove and insert the battery: Loosen the screw with a screwdriver, open the battery cover, and insert or remove the battery according to the correct polarity.
- 3.Non-rechargeable battery, cannot be charged
- 4.Rechargeable batteries can only be charged under adult supervision.
- 5.Rechargeable batteries should be removed from the toy before charging.
- 6.Do not mix different types of batteries or old and new batteries.
- 7.The battery should be inserted correctly.
- 8.Exhausted batteries should be removed from the toy.
- 9.The power terminals must not be short-circuited.

Product Maintenance:

- 1.If the product constantly restarts, or cannot turn on, this may be caused by insufficient power. Please replace with new batteries and try again.
- 2.Maintenance: This product contains electronic components, which must not be used in water or humid environment. Please wipe down the the surface area with a dry rag.

We're here to help!
If you need assistance with your Thin Air Brands product at any time, please contact us.
customerservice@thinairbrands.com

Manufactured by:
THIN AIR BRANDS

Thin Air Brands, LLC
Parker, CO 80134
©2024 Thin Air Brands, LLC

Designed in U.S.A
MADE IN CHINA

