

User Manual of Mug warmer with Lamp

Style # SL3729-21&SL3729-22

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. The warmer surface could be very hot while in use. Do not touch hot surfaces while use or right after cup is removed. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. This appliance is not a toy. Keep away from Children. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. Be sure to power off and cool down the warmer before cleansing. Use clean dry cloth to wipe clean only.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors. This appliance is for household use only.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use the appliance for other than intended use.
14. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Never use with an extension cord unless plug can be fully inserted.
15. Clean and dry your cup bottom before placing it on the warmer. No any liquid is allowed to touch the warmer surface directly.
16. Do not disassemble this lamp by yourself. Any defects, please contact specialist to handle only.
17. Weather, temperature of the environment, cup material & cup size could affect the warming effect of liquid inside the cup.
18. Safety Feature: This smart cup warmer will shut off automatically after 1 hour of inactivity.

SAVE THESE INSTRUCTIONS


Three types of touch switch on base:

Do not turn on your warmer before placing your cup onto it.

1. On/Off to turn the warmer on and off.
2. Low to turn the temperature of warmer surface be up to 90 degrees Celsius.
3. High to turn the temperature of warmer surface be up to 110 degrees Celsius.

Recommended cup type:

1. Ceramic, glass, and metal cups.
2. Approximate size: 3.25" d x 4"H as the picture shown.
3. Recommended liquid capacity: 75%.
4. Do not use paper cups, styrofoam cups and plastic cups.

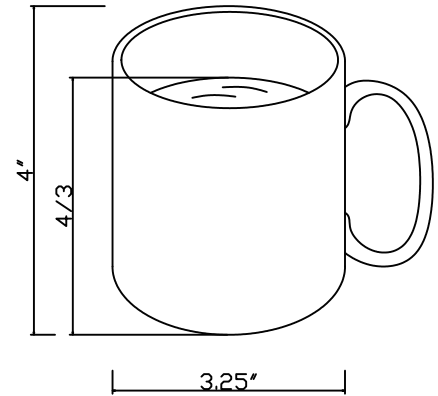

MAINTENANCE AND REPLACING LAMP:

CAUTION: RISK OF FIRE – USE MAX 40 W(ATT), TYPE A STANDARD INCANDESCENT LAMP or MAX 9 W(ATT) LISTED SELF-BALLASTED LED LAMP.

BULB INFORMATION: This lamp requires the use of a 9-watt maximum LED bulb or a 40-watt maximum standard incandescent bulb (bulbs not included). Wattages listed are maximums – lower wattages may be used.

Do not use halogen bulbs in this lamp. Halogen bulbs reach higher temperatures and failure of bulb(s) may cause smoke or fire damage to the lamp and/or surroundings.

