 


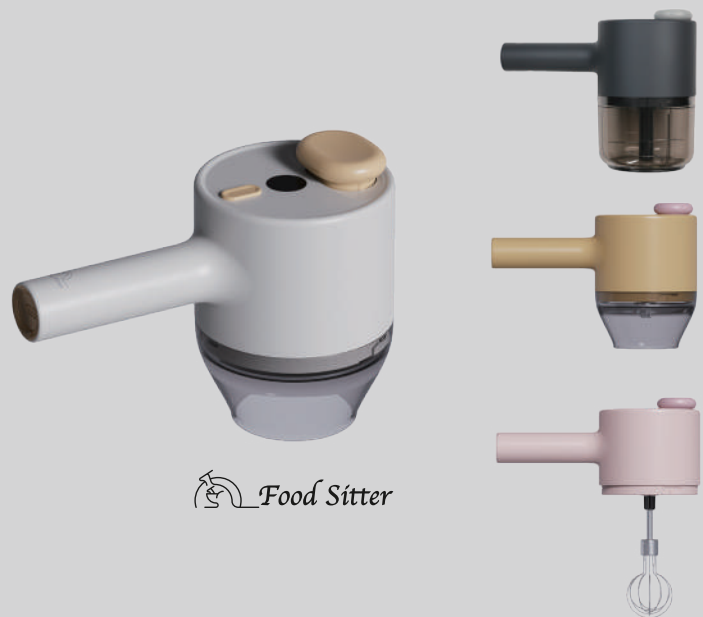

product4u

Food Sitter

Wireless Multi-Purpose
Slicer and Dicer



 Food Sitter

Battery Safety
Certification Number
XU100632-23012
Electromagnetic Compatibility
Certification Number



: R-R-MRJ-HFS-SMB-K-W

User Manual

Please make sure to read the user manual thoroughly before use and follow the instructions carefully. Keep the user manual in a place where it can be easily accessed at any time. We are not responsible for any damages caused by user negligence.

- BRAND STORY -

Food Sitter

"Lead the culture"

Food Sitter is a brand born from listening to, contemplating, and researching the various inconveniences experienced during cooking.

It aims to help everyone become a "culinary expert" with ease and convenience.

Thank you for choosing the Food Sitter Wireless Multi-Purpose Slicer.
*For accident prevention and safe use, please be sure to thoroughly read the user manual before use!
This manual has been prepared to ensure the safe and proper use of the product, as well as its maintenance and care.

Safety Precautions

This product is intended for home use only!
The user manual contains important safety information that must be followed.
Please ensure that the product is operated according to the instructions in the manual.
We are not responsible for any accidents, fires, or malfunctions caused by failure to comply with these guidelines.

1. The rated voltage is DC 7.4V / 60Hz. The charging voltage is DC 5V, and the USB is Type-C.

Warning: Please use the dedicated USB charging cable included with the product.

(Using third-party products may cause fire due to voltage and current issues.)

2. Do not store or use the product in high-temperature, high-humidity environments, or in places exposed to direct sunlight.

Warning: This may cause a battery fire.

3. Keep the product out of reach of children and the elderly without supervision.

Ensure that children do not use or play with the device.

Warning: Body parts may be injured by the blades.

4. If the product is not assembled correctly, accidents may occur. Please ensure you thoroughly review the assembly instructions in the user manual and assemble the product in the correct order.

Caution: Malfunctions, damage, or breakage of the product may cause injury.

5. During use and operation of the product, never insert your fingers into the food inlet

(refer to the product assembly diagram).

Warning and Caution: Fingers may be cut or body parts may be injured by the blades.

6. When disassembling the product, ensure the power is turned off before removing the 'dicing container, slicer cap, slicer blade plate, dicing blade, and whisk.' Never disassemble while the product is in operation.

Warning and Caution: If the product is disassembled while the power is on, sharp blades may cause injury to body parts.

7. Do not use parts from other manufacturers, nor attempt to disassemble or reassemble the product.

▲ Warning: This may cause product malfunction or fire, and any issues resulting from this will not be covered by A/S (after-sales service).

8. Do not use the device for any purposes other than those specified in this user manual.

▲ Caution: This may cause product malfunction or fire, and any issues resulting from this will not be covered by warranty (after-sales service).

▲ 9. Do not use the device for hard foods (such as rice or frozen meat). Ensure rice is sufficiently soaked in water for at least 3 hours before use, and use frozen meat only after it has been fully thawed.

▲ Caution: There is a risk of product malfunction and breakage. If the blades are damaged and consumed with food, it may cause injury to the body.

▲ 10. Do not use the whisk in small bowls, such as rice bowls. Additionally, do not hold the whisk or play with it near your face or other body parts while it is in operation.

▲ Caution: Due to the strong rotational force, food may splatter or get into your eyes, and playing with the device may result in bodily injury.

▲ 11. Do not operate the product continuously for more than 1 minute and 30 seconds.

Warning and Caution: Operating the product for more than 1 minute and 30 seconds may cause overheating and result in a fire hazard. If the product has been running for over 1 minute and 30 seconds, turn off the power and allow it to cool for about 30 seconds before using it again.

▲ 12. If food becomes stuck in the blades during normal operation and the device stops, turn off the power and disassemble the product. Remove the obstructing food, then reassemble and use the product again.

Caution: If the product is disassembled without turning off the power, it may malfunction and operate unexpectedly, which could cause bodily injury.

13. Do not submerge or clean the USB charging port with water or any other liquids.

▲ Warning and Caution: Exposure to liquids can cause fire or short circuits, leading to malfunction.

If any liquid comes into contact with or enters the product, wipe the area with a dry towel or cloth and allow it to dry for at least 24 hours before using it again.

▲ 14. The dicing blade, slicer blade, whisk, dicing container, and slicer cap, which are included with the product, can all be sterilized with boiling water at 100°C.

▲ 15. When cleaning the surface of the product, do not use steel wool or abrasive tools.

Caution: This may cause product damage, corrosion, and rust formation.

16. Do not use a dishwasher when cleaning the product.

Warning and Caution: As this product contains a battery, if water or other liquids enter the device, it may cause a fire, as well as product malfunction or operational failure.

▲ 17. The blades, whisk, and containers are dishwasher-safe, except for the main body of the product.

▲ Please keep this user manual for future reference.

Contents

Brand Story, Safety Precautions	01
Safety Precautions	02
Contents	03
Component Names and Descriptions	04
Precautions Before Use and Operating Instructions	05
Operating Instructions	
1. Slicer	06
2. Dicer	07
3. Whisk	08
Cleaning and Maintenance	09
Troubleshooting and Solutions	09
Warranty	10
Customer Service Center	10

Component Names and Descriptions



- **Pusher:** Used to safely push food all the way into the device when inserting ingredients.
- **Food Inlet:** The opening where food is inserted.
- **LCD Display:** Shows the ON/OFF power status, battery level, and operating speed for levels 1 and 2.
- **Power Button:** Used to turn the device on or off.
- **Handle:** Hold the handle while using the product.
- **Rotating Shaft:** Used to connect with the blades and whisk, enabling the motor to rotate.
- **Charging Port:** Used to connect the dedicated charging cable (USB Type-C) for charging the product.
- **Dicing Container and Dicing Blade:** Insert the dicing blade into the dicing container according to the indicated direction, then attach it to the main body for use.
- **Slicer Cap and Slicer Blade:** Check the "UP" direction indicated on the slicer blade, then attach it to the slicer cap with the "UP" marking. After that, connect it to the main body for use.
- **Non-Slip Pad:** Prevents vibration and movement of the product during use.
- **Whisk:** Attach and secure it by twisting it onto the rotating shaft before use.
- **Dedicated Charging Cable (USB Type-C):** Connect it to the charging port for charging the product.
- **User Manual:** Provides instructions on safe and proper product use, as well as precautions and warnings to prevent accidents.



Please read before use!

1. Before using the product, ensure it is fully charged with the dedicated charging cable (USB Type-C).
2. When using the slicer, check the blade direction and ensure the "UP" mark is facing upward.
3. When attaching the slicer and dicing blades, handle them carefully to avoid injury.
4. The product cannot be used while the charging cable is connected.
5. Prepare the ingredients in advance to match the size of the food inlet.
6. When using the slicer or dicer, always use the pusher to safely guide the ingredients all the way in.

<Operating Instructions>

※ Before using the product, ensure that all parts in contact with food are thoroughly cleaned.

1. Press and hold the "Power Button" for more than 1 second to turn on the device.
2. Press the "Power Button" briefly to cycle through the modes: 1st speed > 2nd speed > off.
3. To turn off the device while using the 1st or 2nd speed, press and hold the "Power Button" for more than 1 second.

Power	1st speed	2nd speed	off
			
Press and hold to turn on the power	Press briefly once	Press briefly once	Press and hold for 1 second

If you press and hold the power button during use, the device will turn off.

※ Whisk Mode

1. Press and hold the "Power Button" for 3 seconds to activate the dedicated whisk mode.
2. You can stop the operation by pressing the "Power Button" briefly.

Assembly and Usage Instructions


- Slicer -



1. Place the slicer blade on top of the slicer cap.
(Assembly direction: Ensure the "UP" mark is visible and facing upward.)



2. Attach the slicer cap to the main body and rotate it clockwise to secure it in place.

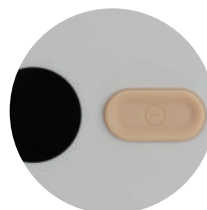

3. Press and hold the power button for 1 second to turn on the device.



4. Press the "Power Button" briefly to select either the 1st or 2nd speed, depending on the ingredients.



5. Insert the desired ingredients into the inlet and proceed with operation.

Assembly and Usage Instructions


- Dicer -



1. Attach the 4-blade dicing blade to the dicing container.



2. Attach the dicing container to the main body and rotate it clockwise to secure it in place.

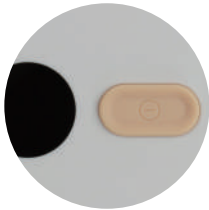

3. Press and hold the power button on the main body for 2 seconds to turn on the device.



4. Press the button to select either the 1st or 2nd speed, depending on the ingredients.




5. Insert the desired ingredients into the inlet and proceed with operation.

Assembly and Usage Instructions

- Whisk -



1. Attach the whisk to the bottom of the main body by twisting it to the left.

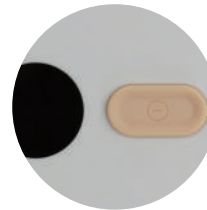

2. Press and hold the "Power Button" for 3 seconds to start operation immediately.



3. Do not use in small bowls, such as rice bowls. Press the "Power Button" briefly once to turn off the device.

Cleaning and Maintenance

1. Ensure the power is turned off before separating or cleaning the container.
2. Detach the container, blades, and other parts.
3. Wash the separated parts with detergent, rinse thoroughly, and allow them to dry.
※ Be cautious when cleaning the sharp blades to avoid injury.
4. Clean the parts of the main body that come into contact with food using a soft sponge and allow them to air dry.
5. Make sure all parts and the main body are completely dry before use or storage.

Troubleshooting and Solutions

Issue Occurred	Cause of the Issue	Solution
The operation stops, and the red light on the LCD display blinks.	-When the ingredients get stuck in the blade during slicing or dicing, preventing it from rotating -When too many ingredients are added during dicing	If the product stops due to food getting stuck, press and hold the power button to turn it off, then turn it back on. If it doesn't start, connect the USB charging cable to unlock it.
Operation stops or shuts off during use.	To prevent motor overheating, the device is programmed to stop or shut off after 1 minute of continuous use.	Allow the motor to cool for about 15 to 20 minutes before using it again.
There is a smell coming from the motor.	This is a normal occurrence with new motors.	If the smell continues to worsen, please contact customer service.
The device is not charging.	If the protection circuit has been activated, charging may be blocked.	

Product Specifications

Electromagnetic Compatibility Certification Number	R-R-MRJ-HFS-SMB-K-W	Product Name	Multi-Purpose Slicer and Dicer
Material	PCTG (Tritan), Food-grade ABS, Food-grade POM, Stainless Steel (SUS304, 420)	Size	21cm*11cm*14cm (Width, Length, Height)
Weight	Weight with Slicer Cap: 1 lbs Weight with Dicing Container: 1 lbs	Rated Voltage	8.4V
Rated Output	10W	Charging Voltage	5V
Charging Current	1A-2A	Battery Voltage	D.C 7.4V
Battery Capacity	2500 mAh / 5C (Dual Battery)	Continuous Discharge Current	12.5A
Maximum Instantaneous Discharge Current	30A	Standard Charging Current	500 mA
Charging Time	5H	Country of Origin	South Korea
Distributor	Hitrans Solutions Inc. 165 Carver Ave. Westwood, NJ 07675	Customer Service	Email: Info@hitronsinc.com Phone: 1-866-760-3003 (Mon~Fri 8:30 AM - 5:00 PM EST)

Warranty

1 Year Warranty Period

Non-Warranty Regulations

If the warranty period has expired.
If damage occurs due to repairs by unauthorized service centers or unauthorized disassembly or repairs by the user.
If damage results from improper maintenance or failure to follow the maintenance requirements outlined in the user manual.
If accidental water exposure or damage to the machine occurs.
If damage occurs due to natural disasters.
If the receipt or warranty card does not match the actual product or has been altered.
If damage is caused by accessories not related to this product.
If the warranty card, receipt, or proof of purchase is not available, or if the warranty period cannot be verified.
If damage occurs in environments that do not comply with the requirements specified in the user manual.

Warranty Coverage

Consumable parts, including blades, whisks, and dicing containers, are subject to normal wear and tear and are not covered under this warranty.

LIMITATION OF LIABILITY & DISCLAIMERS
HITRONS SOLUTIONS INC. WARRANTS THIS PRODUCT AGAINST DEFECTS IN MATERIALS OR WORKMANSHIP FOR THE TIME PERIODS SPECIFIED ABOVE. TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES, AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS, OR IMPLIED.
HITRONS SOLUTIONS INC. SPECIFICALLY DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IMPLIED WARRANTIES CANNOT BE LAWFULLY DISCLAIMED UNDER APPLICABLE LAW. THEN ALL SUCH WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.
HITRONS SOLUTIONS INC. IS NOT RESPONSIBLE OR LIABLE FOR DIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. THIS INCLUDES, BUT IS NOT LIMITED TO, LOSS OF USE, LOSS OF REVENUE, LOSS OF ACTUAL OR ANTICIPATED PROFITS, LOSS OF PROPERTY, OR DAMAGE TO PERSONAL PROPERTY (SUCH AS COUNTERTOPS, KITCHEN APPLIANCES, OR INGREDIENTS) RESULTING FROM THE USE OR MALFUNCTION OF THIS PRODUCT.
SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Customer Service Center

1- 866-760-3003

Email: Info@hitronsinc.com

Phone: 1-866-760-3003
(Mon~Fri 8:30 AM - 5:00 PM EST)

For a better experience using this product, please review the following information carefully.
You can watch the product operation video by scanning the Food Sitter QR code located on the right.

All parts of this product must be installed correctly according to the user manual. Improper installation may cause malfunction.
If you have any questions before installation, please contact customer service or refer to the video on the official website.



HiTRONS
SOLUTIONS INC

www.hitronsinc.com
www.kproduct4u.com



Food Sitter Quick Manual



Please Read Before Use:
Must-Read Information

How To Use?



- ① Before using the product for the first time, please fully charge it. After the product is fully charged, disconnect the charging cable before use.

*During charging, the charging LED will blink, and once fully charged, the blinking will stop.



- ② Press and hold the power button for 1 second to turn on the device. Press the button briefly once to operate at speed 1. Press it briefly again to switch to speed 2. While the device is running, press and hold the button for 1 second to turn it off.
- ③ Press and hold the power button for 3 seconds to activate the whisk-only mode.

! If you press the power button for too long when first operating the product, it will switch to whisk mode. When whisk mode is activated, both 1st and 2nd speed indicators will blink on the LCD screen.

Customer Service

Info@hitronsinc.com
1-866-760-3003

Food Sitter



Food Sitter




[Motor Overload Warning]

When using the slicer, operate it for 1 to 1.5 minutes, then allow a 30-second rest before continuing. During slicer operation, food may get stuck between the main body and the lid. In this case, stop the product, remove the lid, and carefully clear the blockage — the blades are sharp, so handle with caution. When used continuously, a beeping sound may occur, and the protection circuit may activate, cutting off power. If this happens, connect the charging cable to release the lock (LPCK) and resume operation.

Food Sitter

Before use, always insert the blade into the cap and secure it. Ensure that the "UP" mark on the blade is facing outward. Be sure to insert the blade into the chopping container before adding any ingredients. If food is placed on top of the blade, the upper cover may become damaged.

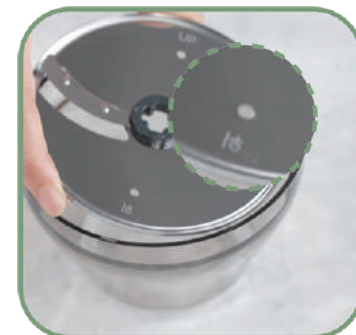

Food Sitter



IPX4 Water Resistant

Rinse gently under running water, avoiding the LCD screen and charging port. For the main body, it's better to wipe it with a dry cloth or kitchen towel rather than washing it frequently. Excessive washing may allow water to enter the product, so please handle with care.

 
Food Sitter



Food Sitter YouTube Channel



By scanning the QR code, you can watch product usage guides and stay updated on new releases through the Food Sitter YouTube channel!

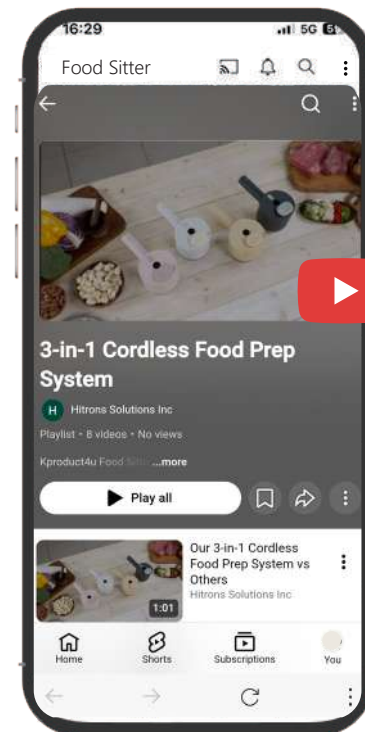

Subscribe and
Turn On Notifications!