


说明书 小册子单页尺寸为：11.5x17cm



SHARPER IMAGE®

NOVA FEEDER

 SMART 6-MEAL AUTO FEEDER

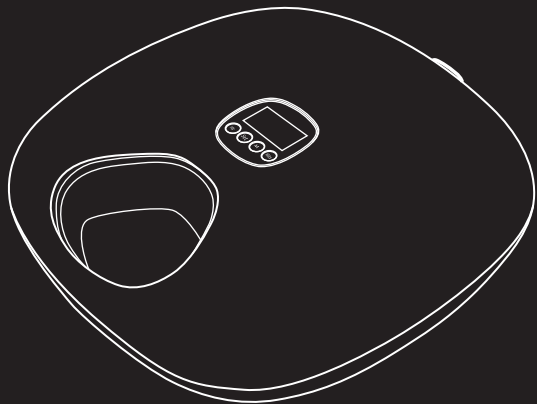

SPECIFICATIONS

Charging	DC 5V 1A
Rechargeable Battery	3600mAh
Timer Range	0-24 hours
Ice Pack	Keeps food fresh for 4-6 hours. Ice pack effectiveness may vary based on environmental conditions.
Capacity/Slot	Dry food 10fl oz; wet food 7fl oz
Suitable For	Cats and small dogs

 
SHARPER IMAGE®

BRANDS GROUP, LLC OR ITS AFFILIATES.
DISTRIBUTED BY AND © 2025 SINCERE USA INC.
CHILLICOTHE, OH 45601.
ALL RIGHTS RESERVED

Before use, read all warnings found in
the included instruction manual.


TURN ON / OFF

Power On: Flip the bottom switch to the ON position to activate the feeder.

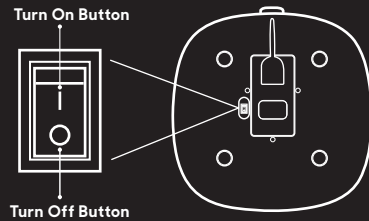

UNLOCKING THE DEVICE

- 1. Locked State:** Indicator light is off.
- 2. Unlocked State:** Indicator light glows blue.
- 3. Unlock/Lock Method:** Press and hold the "Hr" and "Min" buttons for 3 seconds to toggle between locked and unlocked states.
- 4. Auto-Lock:** The feeder defaults to unlocked mode upon startup. If no buttons are pressed for 10 minutes, the device locks automatically and the screen turns off. Press any button to display the current time; inactivity for 10 minutes will turn the screen off again.

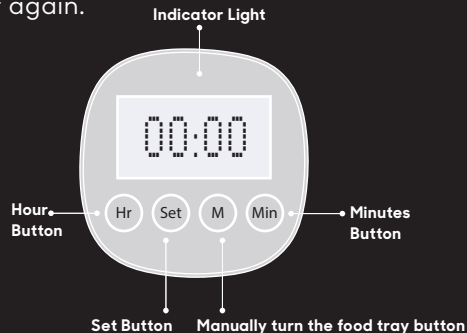

SETTING THE CURRENT TIME

- 1. In the unlocked state, press "Hr" to adjust the hour (0-23). Press and hold to cycle quickly. Save by pressing "Set" or waiting 3 seconds.**
- 2. Press "Min" to adjust the minutes (0-59). Save by pressing "Set" or waiting 3 seconds.**


SCHEDULING FEEDING TIMES

1. First Feeding Time:

- Press "Set." Indicator "1" and the hour digits will flash.
- Press "Hr" to set the hour (0-23). Save by pressing "Set" or waiting 8 seconds.
- Press "Min" to set the minutes (0-59). Save by pressing "Set" or waiting 8 seconds.
- Indicator "1" stays lit, confirming the first feeding time is set.

2. Subsequent Feeding Times:

- Press "Set" repeatedly to select the desired feeding slot (2-6).
- Follow the same steps for setting hours and minutes.

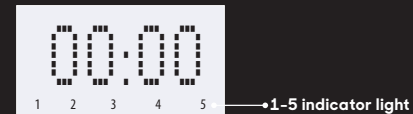

MANUAL FEEDING

Press the "M" button in the unlocked state to dispense one portion of food.

BATTERY & CHARGING

• Low Battery

The buzzer beeps (disabled from 8 PM to 8 AM), and the red light turns on.


• Charging:

1. Unlocked State: Blue light stays on, and the red light flashes during charging.

The device will auto-lock after 10 minutes of inactivity.

2. Locked State: Red light flashes.

3. Fully Charged: Green light turns on.

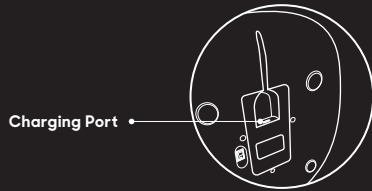


ADDING FOOD

1. Push the button to open the lid and separate it from the base.

2. Add dry or wet food.

3. Reattach the lid to the base.

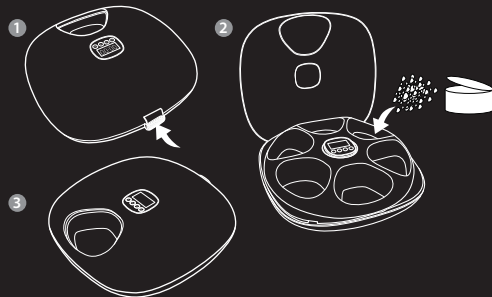


EASY TO CLEAN

1. Press the button to open and separate the lid.

2. Remove the food tray.

3. Take out the ice pack.

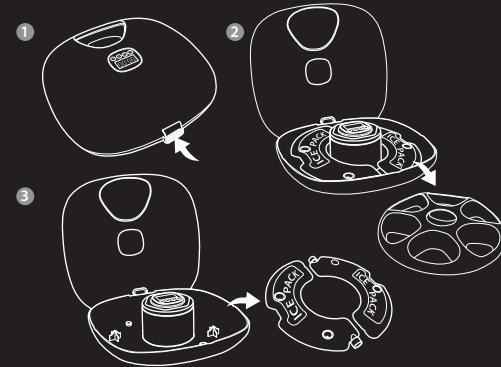

JAM PROTECTION


If the tray jams, it will reverse to release the obstruction. If the jam persists, the LCD displays "E01," and the tray will stop moving. Clear the blockage and press any button to resume normal operation.

TRAY REALIGNMENT

If the feeding tray does not align properly after cleaning:

1. Ensure the tray is securely placed in its compartment.

2. Press the "M" button to reset the tray to its proper position.

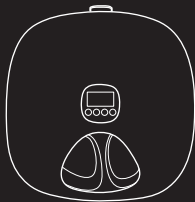

IMPORTANT TIPS

- Avoid overfilling the food trays. Clean the feeder thoroughly before use, ensuring the mechanism is clear of debris.
- Test the feeder without food to confirm proper operation.

TECHNICAL SPECIFICATIONS

- **Operating Voltage:** 3.7V Lithium Battery
- **Power Consumption:** 1W
- **Suitable For:** Cats and small dogs
- **Timer Range:** 0-24 hours
- **Ice Pack Usage:** Keeps food fresh for 6-8 hours

TECHNICAL SPECIFICATIONS


- **Indoor Use Only:** Place the feeder on a flat, stable surface with less than a 5° tilt. Maintain at least 10 cm of clearance from walls.
- **Environment:** Use in a cool, dry, and well-ventilated space. Avoid proximity to flammable materials or sensitive furniture.

WARNING

To ensure safe transportation, two foam pieces are placed between the food plate and the ice bag to prevent the ice bag from detaching during shipping.

Before Use:

Please remove the foam pieces promptly before using the product.

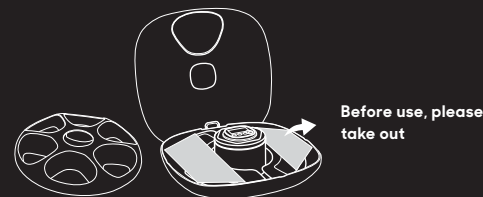

CONGRATULATIONS ON YOUR NEW NOVA FEEDER.

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

SHARPER IMAGE® AND THE 77 LOGO AND RELATED ELEMENTS © & ™ THREESIXTY BRANDS GROUP, LLC OR ITS AFFILIATES. DISTRIBUTED BY AND © 2025 SINCERE USA INC. CHILLICOTHE, OH 45601. ALL RIGHTS RESERVED

CUSTOMER SERVICE EMAIL: support@sincerepet.com

Printed in China.