



SHARPER IMAGE®
AURORAFLOW
CORDLESS PET WATER FOUNTAIN

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ BEFORE USE

- Not a children’s item. Adult supervision required during use.
- Use this product only for its intended purpose as described in these instructions.
- Empty, clean, and refill as needed to ensure freshness and safety.
- Do not expose to extreme temperatures above 104°F (40°C) or below -4°F (-20°C).
- Thoroughly inspect all parts before every use. If any parts appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- For indoor use only.


RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.

SAVE THESE INSTRUCTIONS


WHAT YOU GET

- a. AuroraFlow
- b. USB Charging Cable
- c. Filter & Sponge Replacements
- d. Silicone Pad

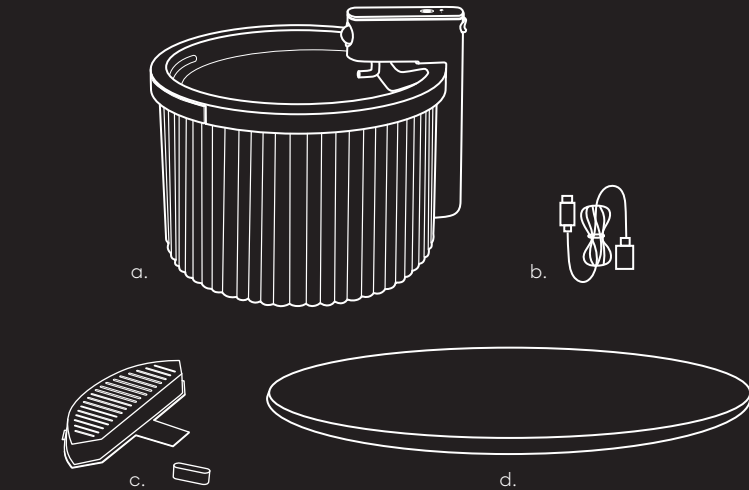

LAYOUT

- A. Drinking Cover
- B. Filter
- C. Water Tank
- D. Power Button
- E. USB Charging Port
- F. Water Pump/Rechargeable Battery
- G. Water Intake
- H. Sensor Mode
- I. Timer Mode

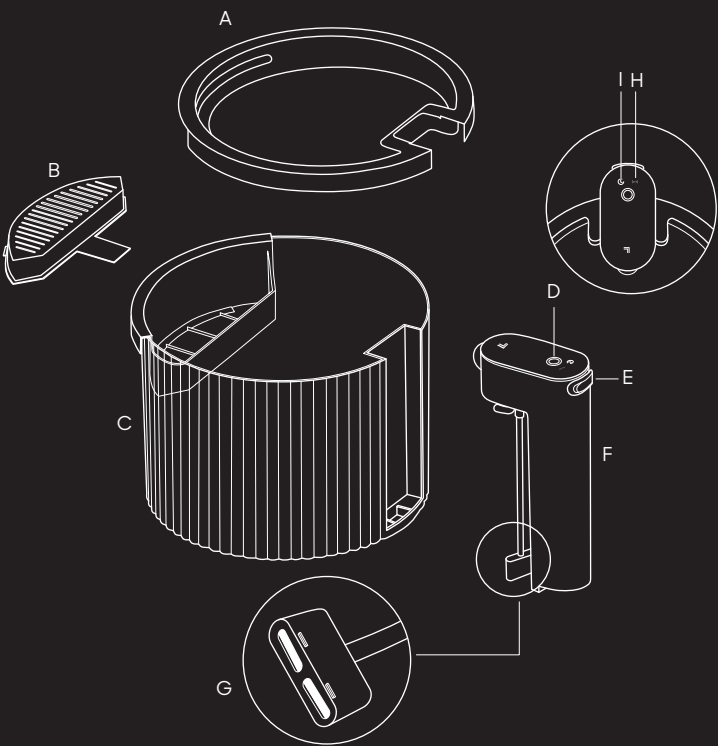

GETTING STARTED

1. Rinse the water tank, filter, and drinking cover thoroughly with water before first use.
2. Plug the USB charging cable into the USB charging port on the bottom of the pet water fountain.

3. Plug the other end of the USB power cable into a USB power source. A blue light will flash while charging and will remain solidly lit when fully charged.
4. Wait for the pet water fountain to finish charging and then unplug the USB charging cable.
5. Place the pet water fountain in an accessible area on the floor or a flat, stable, level, and waterproof surface.
6. Remove the drinking cover and fill the water tank with water up to the fill line.
7. Replace the drinking cover.

HOW TO USE

1. Press and hold the power button for 3 seconds to start the pet water fountain. A blue light will start glowing.
2. Quickly press the power button to switch from sensor mode (default) to timer mode. A blue light indicates the active mode and turns off when the pet water fountain is on standby.
 - **Sensor** – dispenses water for 10 seconds when proximity sensor is triggered
 - **Timer** – dispenses water for 10 seconds every 15 minutes
3. Press and hold the power button for 3 seconds again to turn off the pet water fountain.
4. Add more water as needed.
5. The light will glow red when the battery is low. Recharge the pet water fountain.

CARE INSTRUCTIONS

1. Always power off the pet water fountain before cleaning or maintenance.

2. Refill the water tank with fresh water daily. Rinse the debris filter and water tank when refilling and wipe the drinking cover with a damp cloth to clean it.
3. Replace the filter every 4 weeks.
4. If the pet water fountain will not be used for an extended period, clean and dry it thoroughly and then store it in a cool, dry space.

TROUBLESHOOTING

- Failure to power on – recharge the battery.
- Water flow limited or stops – check and refill the water tank, replace the filter, or clean the water intake as necessary.

CONGRATULATIONS ON YOUR NEW
AURORAFLOW

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

SHARPER IMAGE® AND THE 77 LOGO AND
RELATED ELEMENTS © & ™ THREESIXTY
BRANDS GROUP, LLC OR ITS AFFILIATES.
DISTRIBUTED BY AND © 2025 SINCERE USA INC.
CHILLICOTHE, OH 45601.
ALL RIGHTS RESERVED

CUSTOMER SERVICE EMAIL: support@sincerepet.com

Printed in China.

