



## Product Introduction

The NEX Smart Hair Dryer and Comb Machine effortlessly dries your pet's fur while simultaneously grooming and styling it. One step at a time, eliminating the hassle of bathing your pet at home.

## Product Structure

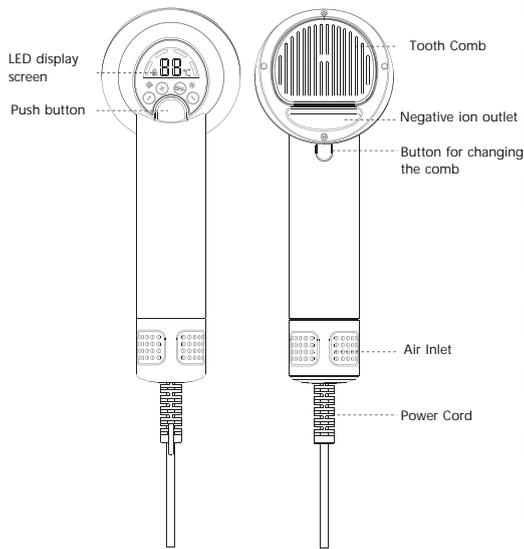


## LED Display Screen Structure

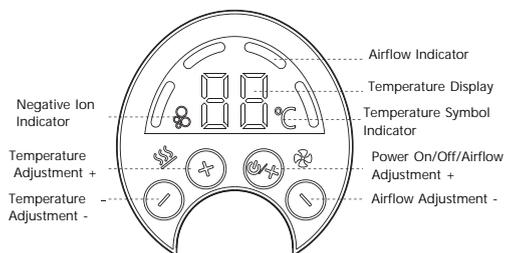


\*Please keep this instruction manual for future use.


## Product usage instructions

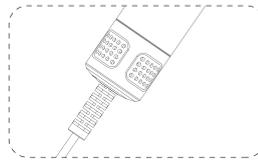


**1. Preparation Before Use.**  
Check the power cord for damage, the air inlet for obstructions, and ensure your pet's fur is completely dry (not dripping wet).

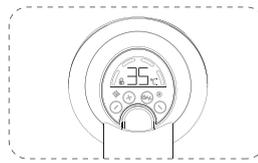


**2. Power On**  
Plug in the power outlet. The machine is now powered on.

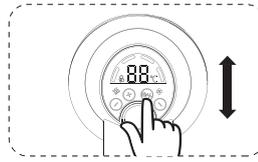


**3. Adjusting the Fan Speed**  
Press the "+" button on the right side. The fan speed will gradually increase. Adjust the fan speed according to your needs.

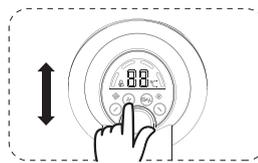

**4. Adjusting the Temperature**  
The "+" and "-" symbols for temperature adjustment are illuminated in white on the left side of the panel. Tap the "+" and "-" symbols to adjust the temperature by 1°C. Temperature Control Range: 35°C-60°C.

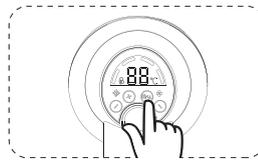


**5. Power Off**  
After use, press and hold the power button for 3 seconds to turn off the power. Then unplug the power cord. (To restart, press and hold the power button for 3 seconds until the machine is on.)

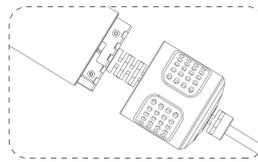


**6. Cleaning**  
Clean the loose hair from the comb head and filter.

## How to use

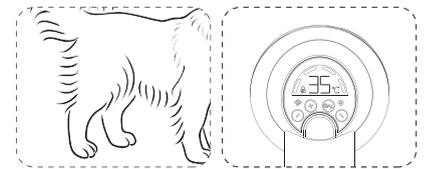

1. Dry your hair until it's no longer dripping wet. 2. Adjust the airflow and temperature of the blow dryer/comb comb.

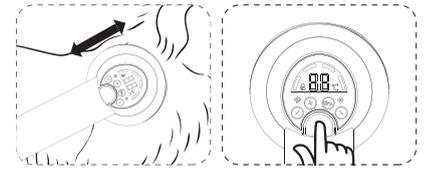

3. Blow-dry and comb along the hair's direction. 4. Press the one-button button. Remove loose hairs.

### \*Tips for replacing the comb head

1. Press and hold the "Replace Comb Head" button on the front.
2. Push the comb head upwards to remove it.

## Precautions for use

1. Before use, check the power cord for any looseness or damage. If the power cord is found to be loose or damaged, stop using it immediately.
2. This product cannot be washed or exposed to direct sunlight. After disconnecting the power cord, wipe it with a dry towel.
3. Do not use this product in excessively humid conditions or underwater to prevent electric shock.
4. Do not press or rub the air inlet and outlet with your fingernails or sharp objects to avoid damaging the product.
5. Keep this product out of reach of children.

## Daily maintenance

1. Do not leave the power on for extended periods when not in use.
2. After use, store the product in a cool, dry place.
3. Regularly clean the comb teeth, air inlet, and air outlet with a towel, cotton swab, or toothbrush.
4. After each use, disconnect the power and wipe the surface of the product with a dry towel.

## Frequently Asked Questions and Troubleshooting

### 1. The main unit cannot be turned on.

Check that the power outlet is plugged in properly. If the power cord is plugged in and the device is powered on, press and hold the power button on the product for 3-4 seconds. The product will restart. Then test if the device works normally.

### 2. What if the product is too noisy and scares my cat or dog?

This product has a rated power of only 300W. Although the noise level will increase with the airflow, it is still within an acceptable range. If it is the first time your pet uses it, please hold your pet. After several uses, your pet will get used to the sound of the product.

### 3. What if the product gets hot during use?

During use, the motor and heating module will dissipate some heat, which is normal and nothing to worry about. (This product should not be covered during use, as this will prevent heat dissipation.)

## MAKE LIFE BETTER FOR PETS

### Basic Parameters:

Product Name: Pet Hair Dryer  
Product Model: PT-CFJ-S1  
Rated Power Supply: 220V  
Rated Power: 300W  
Product Dimensions: 260X95X95mm

# NEX

## SMART PET HAIR DRYER

