

技术要求 说明书 骑马钉

尺寸：57\*85 mm

材质：105g哑粉纸

印刷要求：色相正确、印迹牢固、套印准确、各色套印、不露杂色

颜色及专色：Pantone cool gray 11C


封底

封面



Shanghai Qiaopusi Smart Sci-Tech Development Co., Ltd.  
Add: Room 103, 3th Bld, No.320 Donglan Rd, Minhang  
District, Shanghai, China  
**Made in China**

## ELECTRIC SHAVER




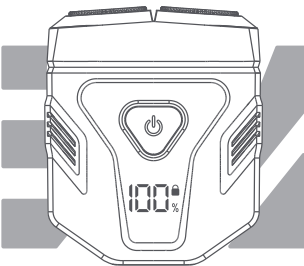


## ENCHEN

User Manual

\* For safety issue, the product's battery status remains low during transporting.  
Please fully charge the product before initial use!
 
### PROFILE OF PRODUCT

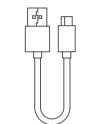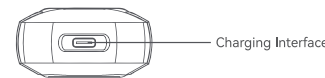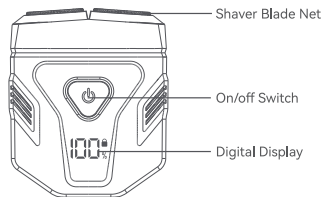

Charging Cable

Cleaning Brush

01

### IMPORTANT NOTES

Please read the following safety notes carefully and abide by all routine preventive measures for safety.

#### Warning

1. This Product is not intended for use by young children or infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of shaver to ensure that they can use it safely.
2. Do not immerse this Product in water to charge, and do not charge it in a humid environment. Keep the shaver dry after using it.
3. The Product contains a built-in rechargeable battery. Do not drop it into fire and never charge, use or place it at the place where temperature is high.
4. Do not drop or knock this Product. If this Product is damaged as a result of dropping or collision, do not use it again.

#### Notice

1. After using each time, please put the protective cover on properly to prevent damage to the shaver mesh. To avoid any injury caused to the human body, do not use this Product if the mesh or the inner blade is damaged.
2. The shaver blade is subject to certain service life. In order to maintain good effect, it is suggested to replace the blade on a regular basis.
3. If this Product does not operate properly, please submit it to the seller or the authorized service center for inspection.
4. Do not press this Product too hard on your lips or any other part of your face and do not directly contact your scar or damaged skin with the shaver blade net.

02

### STEPS FOR USING

Slight skin irritation is normal when you first shave with the Product. Regular use of the shaver (at least 3 times a week) for 3 weeks is recommended for quick adaptation.

#### Step 1

Turn shaver ON, Shave against the direction of beard growth using only circular movements.



#### Step 2

Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press shaver to skin so the shaver blade can follow the contours of your face.

\* DO NOT press too hard.



#### Notice

Improper use of the Product may cause damage to the blade, please confirm whether the blade is in good condition before using. If damaged, stop using the shaver.

03

### TRAVEL LOCK

1. The Product is equipped with a travel lock function to prevent it from accidentally powering on in the luggage.
2. To activate travel lock, press and hold the On/off Switch for three seconds, then indicator light will twinkle.
3. To deactivate the travel lock, press and hold On/off Switch for three seconds under locking status. Then the shaver is unlocked.
4. Charging can unlock the travel lock.

### CHARGE YOUR SHAVER

1. Before charging, be sure to turn off the shaver.
  2. Connect the Type-C charging cable to the shaver and the Adapter, then plug the adapter into the 100-240V AC power outlet.
- \* 5V/1A Adapter shall be used.
3. When charging, and the digital display of remaining battery gradually increases. The Product will be fully charged in approximately 1.5 hours. At the same time, the digital display indicates "100%".
  4. Alternatively, you can connect the charging cable to the shaver and the USB port for charging.

#### Notice

1. When battery status is low, the digital display will twinkle to remind you of charging.
2. If the shaver will not be used for a long time, please fully charge the shaver at least once every half a year.
3. It can provides 60 mins of cordless shaving time after 1.5 hours of charging.

04

### BATTERY DISPOSALINSTRUCTION

1. Please take the battery out from the appliance first before discarding it.
2. Please make sure that the appliance is powered off before taking out the battery.
3. The battery should be disposed safely.

### CLEANING AND MAINTENANCE

1. Before cleaning, be sure to turn off the shaver.
2. The shaver should be washed under running water (better if warm water is used).
3. Remove the shaver blade, and clean the beard collection place with a cleaning brush.
4. The beard collection place can also be directly washed under running water.
5. Carefully shake off excess water and let the shaving head holder air dry completely.

#### Notice

1. When cleaning, be sure to keep the charging interface dry.
2. Reinstall the shaver head properly after it is dry.

### PRODUCT PARAMETERS

Product name: Electric shaver  
Model: Mini X  
Input: 5V=1A  
Charging time: 1.5 hours



05

### PRODUCT WARRANTY CARD

|                                    |  |
|------------------------------------|--|
| Name :                             |  |
| Address :                          |  |
| Tel. No. :                         |  |
| Date of purchase :<br>(dd/mm/yyyy) |  |
| Store name :                       |  |
| Warranty period :                  |  |

1. All quality-related defects on items sold directly by ENCHEN or ENCHEN's authorized resellers are covered by an extensive warranty, starting from the date of purchase.
2. ENCHEN's limited warranty is restricted to the country of purchase. The limited warranty is void on items taken outside the country they were originally bought in or shipped to directly from an authorized online purchase.
3. This warranty covers only original ENCHEN products. It is not applicable to normal wear and tear, or any defects arising from damage caused by misuse of this product.
4. Warranty is for the primary product only nor transferable. Any free additional product(s) are not covered in this warranty.
5. If the product fails regardless of usage in compliance with the user manual and other written precaution, replacement will be provided free of charge.
6. To claim the warranty, contact the services team from the platform or store where you bought from.

✉ Email: export@enchen.cn

06