


PURSTEEL
BY PURSONIC

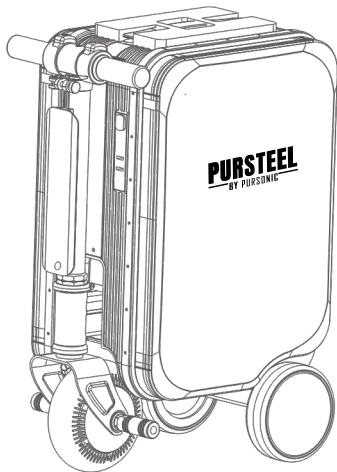

Electric
**LUGGAGE
SCOOTER**



PSEL23

instruction Manual

Products and accessories

Thank you for buying the Model PSEL23 Electric Luggage. Please read the product instructions carefully before using the Electric Luggage and follow all instructions, notes and warnings in this manual. Failure to do so will result in damage to the product and will not be covered by the warranty.

 Please keep the manual and warranty card in a safe place.

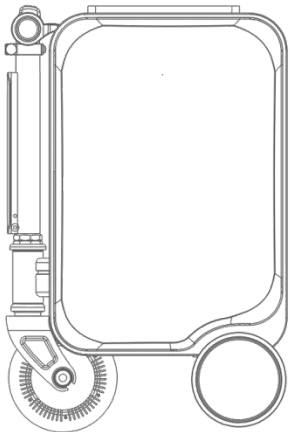

Charger



Battery pack
(Power bank)




Instruction manual

Packing List

Electric Luggage	1	Charger	1
Instruction manual	1	Battery pack(Power bank)	1

PSEL23 Diagram

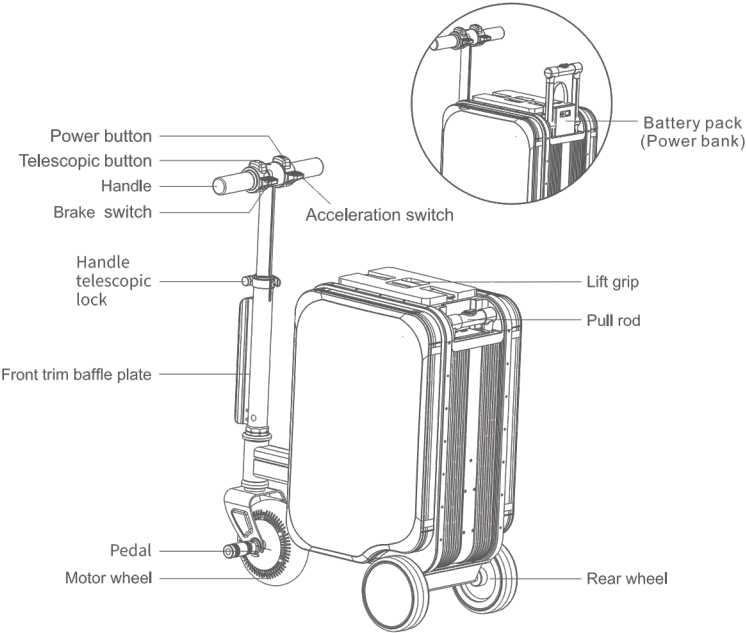

Specifications

Main specifications

Size	20.47x9.65x29.53IN	Vehicle weight	20.50LB
Volume	20L	Maximum load	242.51LB
Lock type	TSA coded lock	Maximum climbing angles	6°
Rear wheel	5 inchX2	Applicable temperature	-10° C~40° C
Front wheel	5.5 inch	Maximum speed	7.46 mph
Material	Shell PC Aluminum alloy frame	USB Output voltage	5V
color	silver/ Blue/purple/Green yellow/orange/Black/Grey		

Battery specifications

Battery capacity	93Wh	charging time	2h
Battery type	Lithium	Battery voltage	36V
Removable	yes	charging voltage	AC100-240V 50-60Hz


Motor specifications

Motor size	5.5 inch	Motor number	1
Motor power	250W		

Warning

please don't dispose of used batteries to avoid environmental pollution. The used lithium battery of this product is responsible for recycling by the company or distributors and government designated sites.

Use PSEL23

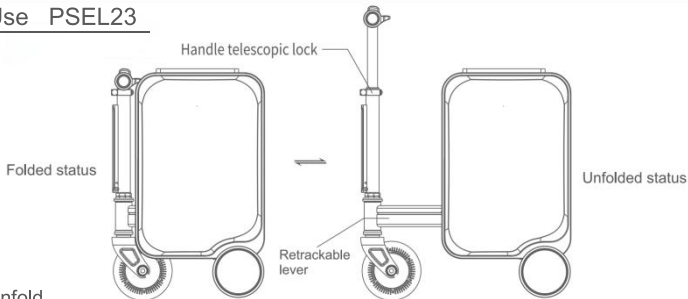

Unfold


1. Press and hold the Power button about 1.5s to turn on. Then press the Δ and the Retractable lever will automatically unfold.
2. Loosen the handle telescopic lock. After pulling the handlebar to a proper position, fasten the handle telescopic lock. Check that there is no loosening and the unfolding is complete.

Fold

1. Press the ∇ when it's in the power-on state. The Retractable lever will automatically fold.
2. Loosen the handle telescopic lock, make sure the handlebar shrinks to the maximum, and fasten the handle telescopic lock.


Warm reminder:

When retracting the handle, please straighten the handle firstly so that the handle is fully retracted.

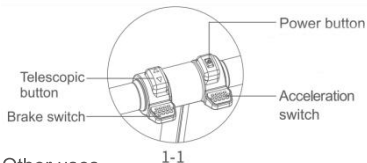


Other uses


1. Turn off the power, pull out the lever, you can drag (see Figure 1-2);
2. Pick up the "hands-on" and carry them (see figure 1-3)

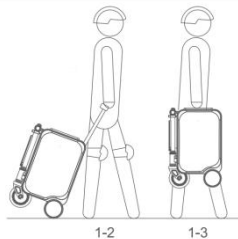


Riding PSEL23

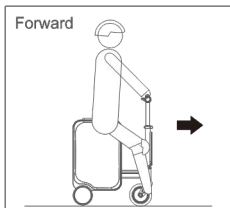

Turn on the power, unfold the Suitcase, sit on the suitcase body, put your feet on the pedals, and press the Acceleration switch to go forward.

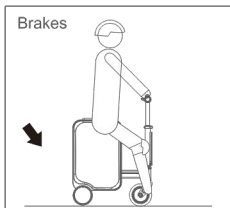

Press the Brake switch to stop it.

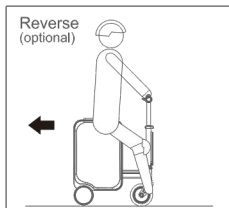

Press the Brake switch and the Acceleration switch together to reverse.

Riding precautions

1. Check if the power is sufficient and the brakes are in good condition before riding.
2. Before first use, it is recommended to charge to full power.
3. It is not recommended to brake or turn sharply during the ride to prevent side slip or rollover.
4. Please observe the traffic rules and various site management regulations during use.
5. Avoid using this product in bad weather such as rain, snow or ice.
6. When not in the riding mode, turn off the power.

Power bank use


Power bank installation

Pull up the pull rod and insert the power bank along the card slot.

Power bank disassembly


Turn off the power, pull up the pull rod, and pull the power bank out of the card slot.

Note: When installing the power bank, Please install it in the direction shown in Figure 1-4, with the front facing outward.

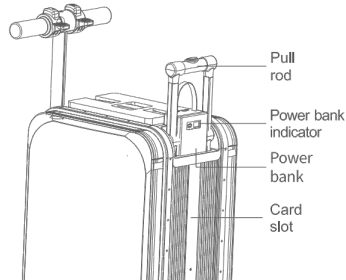

1-4

Power bank use

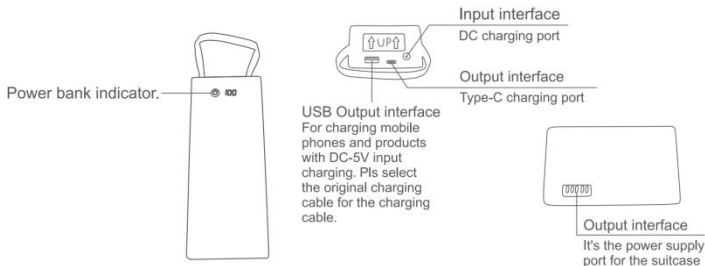

Charging Power Bank

To charge the Power Bank, you need to take out the Power Bank first, then insert the matching charger into the power bank input interface (DC charging port), and then connect the AC100-240V power supply (commercial power). During the charging process, the charger indicator light is red; after the Power Bank is fully charged, the charger indicator light is green.


Power Bank use precautions

1. If the factory time is short, the user can use the product directly. If the factory time is longer (more than 2 months), the power will be lost during storage and transportation. The battery should be recharged before use.
2. Do not charge with other brands of chargers.
3. The Power Bank contains high-voltage circuits inside, and the factory has been packaged intact. Do not disassemble or disassemble it.
4. Use and store to prevent liquid and metal particles from penetrating into the interior of the Power Bank.
5. Power Bank can not be close to open flame or high temperature heat source, but can not throw the power bank into the water, in the hot season, it is strictly forbidden to charge the power bank in the sun.
6. It is strictly forbidden to short-circuit the positive and negative poles of the Power bank with wires or conductors to avoid danger and damage the power bank.
7. Power bank need to be handled with care, to avoid collisions falling and falling, in order to prevent damage to the casing and accidents.
8. When charging, keep it in a safe place that children cannot touch.
9. It should not be used without full charge.
10. Do not cover anything when charging the battery.
11. In case of long-term use, it needs to be fully charged and placed. It can not be more than 3 months from the last charge, so it needs to be recharged and placed.

Custom coded lock instruction

The preset combination is 0-0-0 and can be personalized by following these simple steps:

1. Turn the dials to the current opening combination.
 2. Press down the Reset Button (a) with a pen or other tools, after then turn the Dials (b) to your desired combination.
 3. The lock is now set to the desired combination after you released the Reset Button (a) by pushing the Button (c).
- You may change your combination and reset your lock again by following the above steps.
Keep your personal combination in a safe place for future reference.

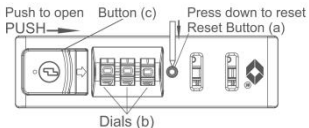

Power warning

When the power alarm sounds, check whether the battery is low. If the problem still cannot be solved please contact after-sales service personnel.



Maintaining

Appearance cleaning

1. Vehicles need to be cleaned at any time.
2. When cleaning dust, do not wipe the electrical parts and connectors with a damp cloth.

Other maintaining

1. Lubricate the front and rear axles once every six months.
2. Check and tighten contact of electrical connectors.
3. Whether the brake is workable.

Safety

For all the precautions in the Electric Luggage riding, please be sure to read and ride the Electric Luggage as required. Do not use this product until you have read the instructions carefully to understand the performance of Electric Luggage; do not lend to anyone who does not manipulate this product.

Very important

It is strictly forbidden to accelerate, decelerate and sharply turn. It is strictly forbidden to ride at speed (the speed is too fast); please keep at a low speed during the riding. If there is a risk of falling, please protect your personal safety and do not consider the Suitcase. The Electric Luggage may cause wear and tear during riding and parking, which may affect the performance of the product. Therefore, before you ride the Electric Luggage, you must do the following checks:

1. It is necessary to check whether the various components of the Electric Luggage are securely installed, without damage, and the brake function and tires are in good condition.
2. You need to fully understand the surrounding cycling environment: make sure you are not disturbed by cars, pedestrians, pets, bicycles and other obstacles.

Note:

1. Do not store cash or valuables in your suitcase.
2. The safety and reliability of brakes, boxes, wheels etc. must be confirmed before riding to avoid accidents.
3. Avoid riding on uneven, muddy, rocky roads, slippery roads, waterlogged roads and stairs to prevent rim deformation and danger.
4. The torch can not be hung on the ride, so as to avoid the operation of out of control accident.
5. This product is suitable for one person riding.
6. Overloading and crawling ramps greater than 6 degrees are strictly prohibited.
7. People who are still under the force of drugs or alcohol, have limited mobility and responsiveness are prohibited from riding.
8. Riding is prohibited in cases where it is not suitable for riding due to the cyclist's own reasons or other objective factors.
9. It's important to get the habit of charging in time every day, when you ride with a minimum allowed voltage before you can keep your battery in place for longer, so it's important to get into the habit of charging in time every day. Almost all kinds of batteries are affected by the environment, in general. The discharge performance of electricity is better when the temperature is higher, and when the temperature drops below 0 °C, the battery's power may drop by more than one-third.
10. Therefore, when winter comes or in cold areas, the reduction of the mileage after a single charge is normal, when the temperature rebounds to more than 20 degrees Celsius, its function naturally recovers. Remove dust from the power plug regularly.
11. Ash accumulation in humid environments such as may cause fire hazards. Do not damage, force bend, or bundle the power cord.
12. Do not place heavy objects on the power cord or expose them to places that emit excessive heat.
13. Do not insert foreign objects at USB ports, charge-discharge connectors, or other openings of the product.
14. Do not split the individual parts of the suitcase yourself.
15. Do not lift the suitcase with a lever handle. Lift the suitcase when crossing the steps or steps.
16. Pulling the suitcase over the steps or steps can cause the suitcase to tip over and damage.
17. In a moving car, uneven or sloping place, place the suitcase on the ground to prevent it from tipping over and damaging. Do not place the luggage in a damp and not ventilated and acid environment for long periods of time. If wet by the rain, please dry it in time.
18. Prohibit the placement of suitcases in high temperature, fireworks.
19. Do not wipe the suitcase with corrosive solvents such as banana water and petroleum concentrate.
20. Do not rinse directly with water and use it in rainy days.
21. When closing the suitcase, be aware that your body or clothes should not be caught in the case or locked.
22. Be careful of liquid leaks in the luggage, which may cause a short circuit in the inner compartment.
23. The Company is not responsible for prohibiting the use of charging cables and other accessories that are not exclusively designed by the Company and in the event of an accident.
24. Unauthorized removal or modification of this suitcase is prohibited, and the Company will not be liable for the resulting damage and may deprive you of your warranty commitment. In the event of an internal failure, contact the aftermarket personnel.

All rights reserved in this manual shall be the property of the company

90 days limited Warranty Parts and Labor
PLEASE READ BEFORE USING DEVICE

PURSONIC warrants this product to be free of defects in material and workmanship for a period of one year covering parts and labor from the date of original purchase. To obtain repair or replacement within the terms of this warranty, please return the product with proof of warranty coverage (copy of receipt), description of defect, transportation prepaid to:



PURSONIC®

160 West 28th St
NEW YORK, NY 10001

This warranty does not apply to any products that has been damaged through alteration, mishandling, misuse or negligence. The extent of PURSONIC's liability under this warranty is limited to the repair or replacement provided above and in no event shall the company's liability exceed the purchase price paid by the purchaser for the product. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

A minimum of \$10 will be charged for any repair service beyond 90 days from the date of original purchase. Also a \$10 money order made payable to PURSONIC must be included to cover return shipping and handling charges.

For customer service in the USA please call 212-414-1798 info@pursonicusa.com www.pursonicusa.com
Distributed by SAMSONIC, New York, NY 10001 USA