

Owner's Instruction Manual:

WARNING: Safe for indoor/household use. Not suitable for use in barns, stables and similar locations. To reduce risk of fire or electric shock, use mostly indoors and have discretion when outdoors. When using electric appliances, basic precautions should always be followed. Never touch the wire safety mesh grids. Electric current may be retained after the button has been released, which may cause shock. Do not touch the inner mesh as you will feel a light shock.

WARNINGS:

Touching the mesh with the red light on will result in a shock. Do not zap animals or people. Keep 1ft/30cm away from all sensitive electronic equipment including pacemakers. Keep away from combustibles, flammable gas or liquids. Always keep dry and keep metal objects away from mesh.

CAUTION: High Voltage. Risk of Electric Shock. Not a toy. Take out batteries before servicing.

CAUTION: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CAUTION: The appliance is not to be used in locations where flammable vapor or explosive dust is likely to exist.

OPERATING INSTRUCTIONS:

TO USE: Safely aim the mesh bolt grid surface at flying insects while switch is pushed up onto "ON" setting in center position while pressing and holding the bolt trigger button to activate the electrical grid and swing; see red LED light above working. When the bug connects with the PickleZapper™, a "zapping" sound will be heard and the bug will be "zapped," killing the insect on contact. Do not swing next to people or animals. To use Hands-free purple UV Light feature, push switch button all the way up to "UV". See red light above working and the UV light on.

CLEANING: As bugs make contact, particles may accumulate in the paddle face. Dead bugs can be brushed or shaken off. To clean, remove the batteries and use a vacuum or soft, dry, non-metallic brush/bristles to remove any debris. Do not use liquid. Frequent cleaning will ensure more efficient use. Brush or blow off with a blower.

DISPOSAL: The battery must be removed from the appliance before it is disposed. The battery is to be disposed of safely. No User Maintenance.

IMPORTANT SAFETY INSTRUCTIONS:

WARNING: When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

WARNING: To reduce the risk of injury, read instructions carefully before usage.

WARNING: Do not insert foreign objects into this product.

Store product indoors when not in use – Keep out of reach of children.

Do not clean this product with a water spray or similar method.

Any other servicing should be performed by a qualified service technician.

If the unit is malfunctioning, contact the manufacturer.

Do not place unit or use in an area where it can fall into water or near flammable materials.

Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes in contact with leaked battery acid. If a chemical burn occurs or if irritation persists, seek medical attention. Dispose according to Local, State, or Federal regulations. Keep away from toddler and pets.

WARNING:

Batteries are to be inserted following the polarity markings on the product. NEVER mix old and new batteries or different brands of batteries. Replace all batteries at the same time. NEVER mix alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium) batteries with this product. NEVER dispose of batteries into a fire, as they may leak and explode. Promptly. Remove exhausted batteries from product. Remove batteries before extended storage.

SWATTING TECHNIQUE

There are two main methods for zapping flying insects. First wait for insect to land on a flat surface and then slowly place the paddle face grid over the insect and as it flies up it will enter the grid and get Zapped. Secondly, practice your forehand and backhand swings as you would a fly swatter for flying insects that are not landing. This is slightly more challenging, but much more gratifying when you are successful. Maintain fresh batteries for best results with fruit flies, gnats and other small bugs. Crawling insects are easy to zap by either pressing it on them or letting them crawl on it and then zapping.

3-Layer Safe Operation: Consists of three mesh layers, the two outer layers providing protection against electrocution and granting you piece of mind around children. **NOTE: DO NOT TOUCH WITHIN 10 SECONDS OF SHUTTING THE PICKLEZAPPER™ OFF** as it retains a charge.

BUILT-IN LED ATTRACTANT: Hands-free function (Purple UV light) intended to attract insects; the zapper will automatically kill insects on contact in hands-free mode. Switch on the purple UV light built into the paddle head to lure airborne insects in the dark to the PickleZapper™. Perfect for enjoying a BBQ at dusk, sitting on your patio at night, picnicking, or camping.