

# Premium Arcade Navigation Manual

Welcome to your Premium Arcade navigation manual. This guide provides comprehensive, step-by-step instructions on how to power, navigate, and utilize the advanced system features using simplified and intuitive controls.

## 1. System Power Management

Properly handling the power cycle ensures system stability and optimal performance.

- **Powering On:** Simply tap the button located under the marquee and wait for the system to boot. *Do not hold the button.*
- **Powering Off:** Simply tap the same button located under the marquee to safely shut down the system.

## 2. Basic Menu and Game Navigation

The system software interface is engineered to use minimal inputs for a seamless user experience. System controls primarily rely on Player 1's joystick and the two dedicated administration buttons ("Select" and "Exit") situated on the top-left section of the control panel.

| Control Input      | Action / Function Description                                                                                               |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Select Button      | Acts as the primary action key. Press to enter a selected system from the main wheel or to launch an individual game title. |
| Exit Button        | Press to return back to a previous menu screen or to completely quit out of an active game.                                 |
| Joystick Up / Down | Vertical Scroll. Move vertically to browse through alphabetical libraries one title at a time.                              |

| Control Input               | Action / Function Description                                                                                                     |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Joystick Left / Right (Tap) | Quick Jump. Tap left or right to skip forward or backward through the library by one letter of the alphabet.                      |
| Joystick Right (Hold)       | Alphabetical Search. Hold right to fast-jump rapidly through letters. Press the <b>Select</b> key to lock in your desired letter. |

### 3. Audio Volume Adjustment

Audio levels can be managed instantly directly from the control panel layout via a hardware shortcut combination:

- **Adjusting Volume:** Press and hold the **Player One Coin** button, then move the **Player One Joystick Up** (to increase volume levels) or **Down** (to decrease volume levels).

### 4. Advanced Interface Features

The platform contains integrated tools designed to streamline searching, sorting, and organizing extensive retro software libraries.

#### A. Title Search System

To locate a particular title across the system ecosystem, use the following operational steps:

1. Press the physical **Search** button located on the control panel to open up the overlay user interface.
2. Utilize Player One's joystick to navigate and highlight individual characters, pressing the **Select** button to enter each letter.
3. Upon completely spelling out the search term, highlight the on-screen **Search** button item and press **Select**.
4. Browse through the generated results list with the joystick. You can press **Right** on the joystick to filter/sort results by system.

#### B. Genre and Category Filtering (The "X" Key)

When browsing extensive lists (most notably MAME / Arcade setups), users can segment the

library by functional gameplay types:

- Press the **X** button on the Player 1 control area to open up the **Genre** options menu.
- Use this menu to quickly narrow your view down to specific sub-categories, such as 4-Player games or dedicated Trackball games.

## C. Favorites Library Administration (The "Y" Key)

Every emulated console environment features a standalone custom list to bookmark specific high-priority titles:

- Press the **Y** button on the Player 1 panel layout to open the localized **Favorites** options submenu.
- **View Favorites:** Select this item to pull up and view your curated, personalized gameplay list.
- **Add/Remove Favorites:** Easily toggle titles in or out of your list by pressing **Y** while highlighting any software title and confirming the selection.