

WARNINGS:

- Wipe the product clean with a soft, dry cloth when needed.
- Store the product in a cool, dry place when not in use.
- Turn the product off when not in use to conserve battery life, if applicable.
- Keep the product away from heat sources, open flame, and direct prolonged sunlight.
- Do not use near water or in wet conditions unless specifically designed for water use.
- Do not modify, disassemble, or otherwise alter the product.
- Discontinue use if the product becomes damaged, overheats, or malfunctions.
- Keep fingers, hair, loose clothing, and small objects away from moving parts, where applicable.
- Adult supervision is recommended during setup, charging, and battery installation, where applicable.
- Never aim or fire darts at people, animals, faces, or eyes.
- Use only the included or recommended accessories and charging components, where applicable.
- Follow all operating instructions before use.
- Keep packaging materials away from children and dispose of properly.
- Not suitable for children under the recommended age listed on packaging.
- Installation of batteries & charging should always be supervised by an adult.
- Failure to insert batteries in the correct polarity may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- For best results, use alkaline batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Rechargeable batteries should only be charged under adult supervision.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit battery terminals.
- Do not dispose of batteries in fire.
- Recycle or dispose of batteries properly according to local regulations.

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group
613 First Street
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Dart Blaster RC Car



FOR AGES 5+ | Model: TOY-DARTCAR



Manufactured by Flipo Group Limited La Salle, IL
Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com
MADE IN CHINA


Instruction Manual

Please read this instruction manual carefully before using.

Contents:

1 x Dart Blaster RC Car	20 x Dart Cases
1 x 2.4GHz Remote Control	1 x USB-A to Battery Wire Connector Charging Cable
48 x Soft Foam Suction Tipped Darts	1 x 3.7V /500mAh Rechargeable Battery

Remote Control

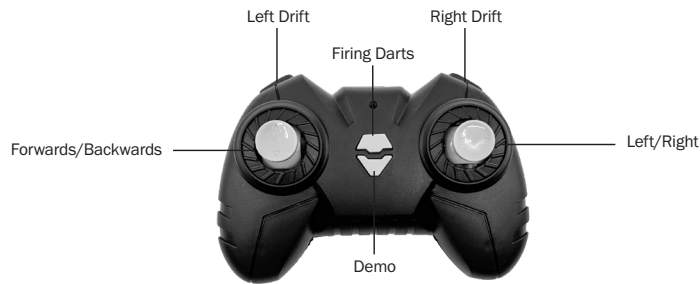

Battery Installation

Before first use

Fully charge your car's battery using ONLY the included USB-A to battery wire connector charging cable.

Dart Blaster Car Battery Installation & Charging

1. Locate the rechargeable battery in the accessories bag.
2. Plug the battery connector into the connector on the charging cable.
3. Plug the other end of the charging cable into a USB port or a USB power adapter connected to an AC outlet.
4. The red indicator light on the charging cable will light when charging.
5. When charging is complete, the red indicator light will turn off.
6. Disconnect the battery connector from charging cable connector.
7. Locate the battery compartment on the underside of the car.
8. Loosen the screw, remove the compartment cover using the two integrated release tabs.
9. Connect the battery connector to the connector inside the battery compartment.
10. Place the battery into the compartment.
11. Replace the compartment cover and tighten screw until snug.

Remote Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Loosen the screw and remove the battery compartment cover using the integrated release tab.
3. Insert 2 AA batteries according to the polarity graphic on the inside of the compartment.
4. Replace the battery compartment cover and tighten the screw until snug.

Assembly

Connecting Dart Belt Cases

1. Align the two short dart case belts end to end, ensuring that the open end of the dart cases are facing the same direction.
2. Align the pin on one dart case with the pin slot on the adjacent dart case, ensuring that the "C" clips below the pin align with the shaft of the adjacent case.
3. Press the two cases together evenly until the "C" clips snap onto the shaft and the pin is fully seated in the pin slot.
4. This will assemble all cases into a single belt.

Dart Case Connection



Installing Dart Belt Cases

1. With the open ends of the dart cases facing the front of the vehicle and firing barrel, insert one end of the dart belt into the left side of the belt feed mechanism.
2. Align the pins and circular rims on the dart cases with the corresponding slots in the belt feed and push the belt forward until the first dart case is fully seated.
3. Locate the power switch located on the underside of the vehicle, next to the right front wheel, and move it to the ON position.
Note: The remote control and the vehicle will automatically be paired when the vehicle is turned ON.
4. Press the fire button located at the center top of the remote control above the demonstration button two or three times to feed the belt through the belt feeder until the first case is completely through the belt feeder and protruding out the right side of the belt feeder.
5. Lift the trailing end of the dart case belt up and over the belt feeder and connect to the first case as instructed above to complete a circular belt.
Note: At this time, the pins will be facing out along the perimeter of the belt.

Belt Case Installation



Operation

1. The left thumb joystick on the remote control moves the vehicle forwards and backward when pushed in the corresponding direction.
2. The right thumb joystick on the remote control turns the vehicle left or right when pushed in the corresponding direction.
Note: The left thumb joystick can also be used during spins to add additional movement to the vehicle.
3. The sideways drift buttons located on the left and right front of the remote control move the vehicle sideways in the corresponding direction.
4. Use the sideways drift buttons in conjunction with the thumb joysticks to activate diagonal drift in all directions.
5. Different combinations of these controls can be used to perform a variety of driving tricks.

Loading & Firing Darts

Note: Darts must be loaded into the side of the dart belt that faces the firing barrel.

1. Insert the soft end of each dart into one dart case on the dart belt. Gently press the suction cup on the front of each dart to ensure they are fully seated in the belt.
2. Locate the fire button in the center top of the remote control.
3. Press once and the Dart Blaster will fire two darts in succession.
4. Press and hold the Fire button and the Dart Blaster will continue to fire darts in increments of two until the button is released.

Demo Mode

1. Locate the Demo button in the center of the remote control (lower center button).
2. Press the Demo button to automatically demonstrate the driving functions of the Dart Blaster.
Note: The Dart Blaster does not fire darts in the demo mode.
3. Press any other button or joystick at any time to exit the demo mode.