

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this product.

When using an electrical product, basic precautions should always be followed, including the following:

DANGER

To reduce the risk of shock, always unplug this product from the electrical outlet before handling or cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury:

1. Remove the lightset from the packaging before use. Do not connect the lightset to the electric system while it is still in the packaging.
2. This is an electric product – not a toy! To avoid risk of fire burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
3. Use this product only for its intended use as described in these instructions.
4. Never operate the product if it has a damaged cord or transformer, if it is not working properly, if it has been dropped or damaged or dropped into water.
5. Keep the cord away from heated surfaces.
6. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
7. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
8. To disconnect, remove the transformer from the outlet.
9. This seasonal product is not intended for permanent installation or use.
10. If the product is placed on a tree, the tree should be well secured and stable.
11. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily.

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

USER'S GUIDE

For household/residential indoor use only. The product has not been evaluated for flammability or cigarette ignition resistance.

INSTRUCTIONS

Avoid placing the product in a place where it could fall. Avoid overheating. Do not cover the power supply cord with any material. Uncoil the power cord and connect the transformer in any domestic outlet (120 VAC). Place the power supply cord where it will not be exposed to traffic. Do not run the power supply cord through doorways, holes in walls or floors. Do not drive, walk, drag, or place objects over power supply cord. Fully insert the transformer into the outlet. Do not remove, bend or modify any metal prongs or pins of power supply cord. Do not use excessive force to make connections.

USER MAINTENANCE

CARE AND CLEANING INSTRUCTIONS: Place product in a safe and dry place. Cleaning by the user should be done with the product disconnected from the power supply. Use a damp cloth to clean the product. Do not use solvents. Bulbs are not replaceable.

STORAGE: When product or components are not in use, store them in a safe dry place away from children. Always store indoors. Always unplug by pulling the transformer from the outlet. Do not unplug by pulling the cord. Coil the power supply cord and put the product inside its original packaging when not in use.