



## Over-Sized Inflatable RC Dino

### **FCC INFORMATION**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Instruction manual shall include,

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

FCC Radiation Exposure Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in the portable exposure condition without restriction.

### **30 DAYS LIMITED WARRANTY:**

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flippo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flippo Group  
613 First Street  
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



**FOR AGES 6+ | Model: TOY-INFLATEDINO**



Manufactured by Flippo Group Limited La Salle, IL  
Questions or Comments? Call: (815) 223-9942 • Email: info@flippo.com  
**MADE IN CHINA**

# Instuction Manual

Please read this instruction manual carefully before using.


## Contents:

- |                          |                                                        |
|--------------------------|--------------------------------------------------------|
| 1 Inflatable Dino        | 1 USB-A Charging Cable                                 |
| 1 2.4 GHz Remote Control | 1 1300mAh 7.4V Li-ion Rechargeable Battery (Installed) |

### Inflatable Dino



### Remote Control

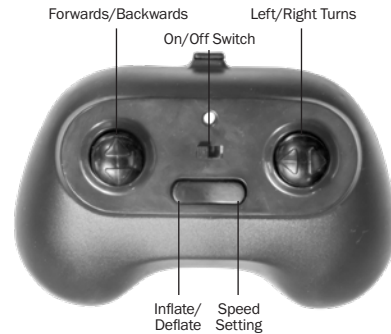

### Inflatable Dino - Base



### Charging Cable, Rechargeable Battery Pack



## Battery Installation & Charging

### Before first use

Fully charge your Dino rechargeable battery using ONLY the included USB-A charging cable.

### Charging the Inflatable Dino battery

1. Locate and open the battery compartment on the base of your Dino. Loosen the screw and remove the compartment cover.
2. Remove the battery from the compartment and connect the battery wire to the charging cable.  
**Note:** The red indicator light on the charging cable will light when charging.
3. When charging is complete the light will turn off.
4. Disconnect battery connector from charging cable connector.
5. Reconnect the battery connector to the wire connector in the battery compartment.
6. Place battery into the compartment. Replace the compartment cover and tighten screw until snug.

### Remote control

1. Loosen the screw and remove the compartment cover.
2. Insert 2 AA Batteries according to the polarity graphic inside compartment.
3. Return cover and tighten the screw until snug.

## Operation

### Inflating your Dino

1. Press and hold the power button located on the bottom of the base.
2. Release the power button and set the Dino upright in a clear/open area when it begins to inflate.
3. Move the power switch on the remote control to the ON (right) position.

### Using the remote control

1. The left toggle control will move your Dino forward or backward by pushing the control in the corresponding direction.
2. The right toggle control will turn or spin your Dino by pushing in the corresponding direction.

### Speed and Inflate/Deflate Control Button

The control button is located below the power switch on the remote.

1. Press the left side of the button to turn Dino OFF and deflate.
2. Press the left side again to turn Dino ON and reinflate.
3. Short press the right side to switch between fast and slow moving speeds,

**Note:** After approximately 2 minutes of inactivity, Dino will automatically power off to conserve battery. To use again, turn the power back ON and repeat the inflation process to reconnect the remote.

## ⚠ WARNINGS:

- Wipe the product clean with a soft, dry cloth when needed.
- Store the product in a cool, dry place when not in use.
- Turn the product off when not in use to conserve battery life, if applicable.
- Keep the product away from heat sources, open flame, and direct prolonged sunlight.
- Do not use near water or in wet conditions unless specifically designed for water use.
- Do not modify, disassemble, or otherwise alter the product.
- Discontinue use if the product becomes damaged, overheats, or malfunctions.
- Keep fingers, hair, loose clothing, and small objects away from moving parts, where applicable.
- Adult supervision is recommended during setup, charging, and battery installation, where applicable.
- Use only the included or recommended accessories and charging components, where applicable.
- Follow all operating instructions before use.
- Keep packaging materials away from children and dispose of properly.
- Not suitable for children under the recommended age listed on packaging.
- Do not sit, lean, or place heavy objects on the inflatable Santa.
- Use only on flat, stable surfaces to prevent tipping or damage.
- Avoid sharp objects, rough surfaces, or areas where punctures may occur.
- Insert batteries according to the correct polarity (+ / -).
- Do not mix old and new batteries.
- Do not mix different types of batteries (alkaline, standard carbon-zinc, or rechargeable).
- Use only the recommended battery type specified for the product.
- Remove exhausted batteries promptly.
- Remove batteries if the product will not be used for an extended period, where applicable.
- Rechargeable batteries should only be charged under adult supervision.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit battery terminals.
- Do not dispose of batteries in fire.
- Recycle or dispose of batteries properly according to local regulations.