



Night Mission Goggles™

See hands-free in the dark!

Ages 6 and up
10400
Requires three AAA
batteries (LR03), not included.

Important: Please save this instruction sheet. It contains valuable product information.

How to Play

- 1) swing forward both the sighting lens and 2x magnification lens (Fig 1)
 - 2) To turn on the Twin LED spy lights, activate the on/off switch in the rear of the battery pack. (Fig 2.)
 - 3) Now you can spy in the dark!
- Tip #1: To conserve battery life, turn off the lights on your goggles when you are not using them
- Tip #2: the Flip scope works best in daylight conditions so you can see things far-away

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS—TO REPLACE BATTERIES (Fig 2.)

- This product requires 3 AAA (LR03) batteries, not included.
1. Locate the battery compartment on the product. Use a small Phillips head screwdriver to loosen the screw, and remove the BATTERY COVER.
 2. Remove all old batteries.
 3. Place new batteries in compartment as shown
 4. Replace the battery cover and tighten screw.


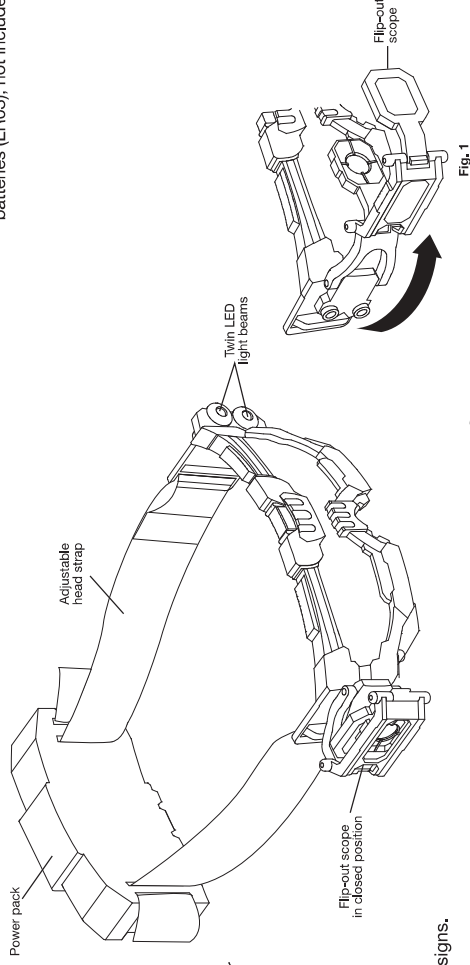 


Fig. 1

 

Power pack
Fig. 2

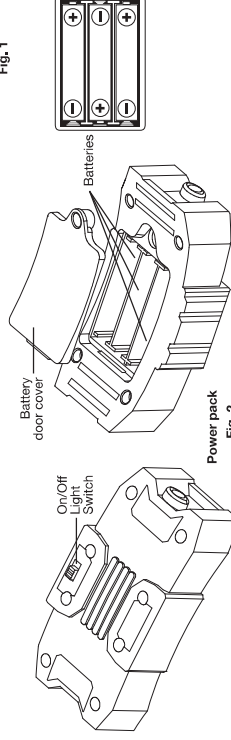

WARNING:
Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.



IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
www.atomickmonkeyproducts.com/help



Warning: This is a toy. Does not provide eye protection. Caution! Viewing the sun can cause permanent eye damage. Do not view the sun with this product or even the naked eye.

Product specifications subject to change.
NIGHT MISSION GOGGLES 10400-US R3



WALKIE TALKIES™

Spy Communications!

Ages 6 and up
10526
SpyX Walkie Talkies

Each walkie talkie requires
three (3) 1.5V AAA (LR03)
batteries, not included.

**Important: Please save this instruction sheet.
It contains valuable product information.**

Talk to fellow spies in secret!

1. Turn on each walkie talkie by pressing and holding POWER button for 2 seconds. The red indicator LED will be turned on. The walkie talkie is now ready to play with!

 
2. To speak to the other agent, push and hold down the PUSH TO TALK button. Release the button when you are not talking

Hint: Press the CALL button to alert the other agent with a "beep".

Tip: When finished playing with the SpyX walkie talkies, please press and hold power button for 2 seconds to turn off.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

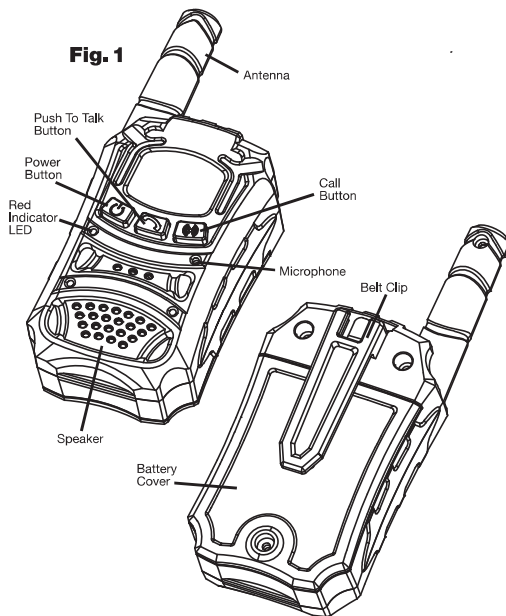

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

 
⚠ WARNING:

Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION ADULTS—TO INSTALL AND REPLACE BATTERIES

Each walkie talkie requires three (3) 1.5V AAA (LR03) batteries, not included.

- Use a small phillips head screwdriver to loosen the screw and remove the battery cover (Fig. 2).
- Remove all old batteries.
- Place new batteries in compartments as shown (Fig. 2).
- Replace the battery cover and tighten screw.

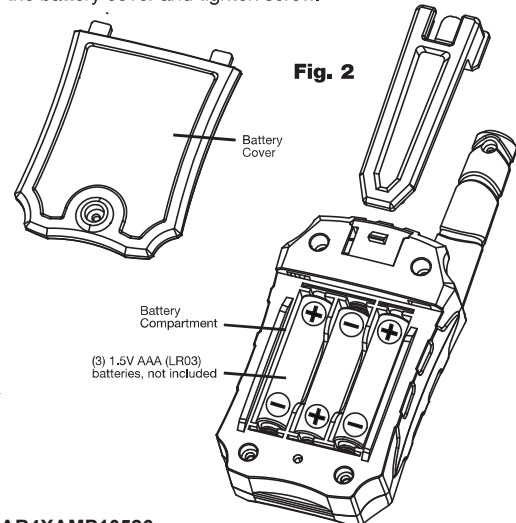

FCC ID:2AB4XAMP10526

GMRS LICENSE:

USE OF THIS RADIO WITHIN THE UNITED STATES REQUIRES AN FCC GMRS LICENSE. AN INDIVIDUAL 18 YEARS OF AGE OR OLDER, WHO IS NOT A REPRESENTATIVE OF A FOREIGN GOVERNMENT, IS ELIGIBLE TO APPLY FOR A GMRS SYSTEM LICENSE. YOU WILL NEED TWO FORMS FROM THE FCC: FCC FORM 159, AND FCC FORM 605 (MAIN FORM AND SCHEDULE F). YOU CAN FIND THE FORMS ONLINE AT: [HTTP://WWW.FCC.GOV/FORMPAGE.HTML](http://www.fcc.gov/formpage.html), OR CALL 1-800-418-3676.

SAFETY INFORMATION

Your wireless hand-held portable transceiver contains a low power transmitter. When the PTT button is pushed (or the VOX mode is enable) it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceeds 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important:

To maintain compliance with the FCC's RF exposure guidelines hold the transmitter at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away.

Do not use your transceiver with a damaged antenna. Unauthorized antennas, modifications or attachments could damage the transmitter and may violate FCC regulations.

This device is supplied by power source of (3) three 1.5V AAA (LR03) batteries. Please remove the batteries if the device is not used for a long time.

WARNING!

Do not hold close to the ear. Misuse may damage hearing.



IF YOU HAVE ANY QUESTIONS, PLEASE
CONTACT US AT
www.atomicmonkeyproducts.com/help

Product specifications subject to change.
SPYX WALKIE TALKIES
10526-IS-US R3

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.



Ages 6 and up

10401

Recon Watch™

 
 
 
 
8-in 1 Spy watch!

Requires one (CR2032)
button-cell battery, included.

Important: Please save this instruction sheet.
It contains valuable product information.

TO SET TIME, DATE, ALARM, 24 HOUR TIME

Press and hold <A> button for 2 seconds to enter setup mode.
Then press <A> to cycle through the settings. For each setting,
use <C> to advance the number, to decrease.
Press <A>: HOUR [1] will flash.
Press <A>: MINUTES [2] will flash.
Press <A>: SECONDS [3] will reset to zero.
(No advance/decrease)
Press <A>: YEAR [4] will flash.
Press <A>: MONTH [5] will flash.
Press <A>: DAY [6] will flash.
Press <A>: ALARM [7] screen appears. Press to toggle
alarm on and off (the icon appears/disappears).
Press <A>: ALARM HOUR [8] will flash.
Press <A>: ALARM MINUTES [9] will flash.
Press <A>: To select time hour mode.
Press : To select 12-hour or 24-hour time mode
(When in 12-hour mode, AM or PM will appear).

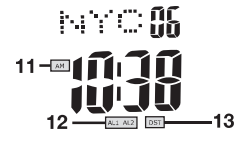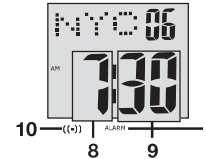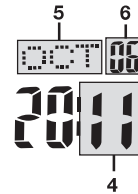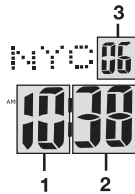

Press <A>: To quit set mode.

NOTE: The SpyX Recon Watch will return to normal time
mode after 5 seconds without input.

TO SET DAYLIGHT SAVING TIME

1. Press and hold for 2 seconds to activate Daylight Savings Time
function
2. Repeat to disable Daylight Savings Time.

TO SET MOTION ALARM

1. Press <C> and hold for 2 seconds will enable sensor mode and the sensor
icon will appears. (not flash)
2. Wait 5 seconds for sensor to activate.
3. Place watch around your doorknob, your backpack or bike--anything you
don't want messed with!
4. When disturbed, the alarm sounds and the sensor icon will flash for around
6 sec. The time of movement will store at AL1 or AL2 (new record will replace
oldest record). It can store maximum of two records in Hour & Minutes only.
5. Press <A> to access AL1 and AL2.
6. Press <C> and hold for 2 seconds will disable sensor mode and sensor icon
will disappear.

TO USE THE STOPWATCH

1. Press <A> and <C> together: STW icon appears.
2. Press <C> to start / stop the timer.
3. While stopped, press to reset to zero.
4. Press <A> to quit stopwatch mode.

DECODER SCREEN

The decoder screen can reveal secret messages written IN PENCIL on the
included secret paper.

Night VISION LED SPOTLIGHT

Press the LIGHT BUTTON to activate the night vision spotlight

SAFE-DROP CAPSULES

Hide tiny messages inside, then hide them to find later!

Only adults should install and replace batteries.

- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short-circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable
(nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS—TO REPLACE BATTERIES

1. The SpyX Recon Watch requires 1 (CR2032) 3V lithium button-cell
2. Loosen the Phillips-head screws on the **WATCH BACK** and remove.
3. Loosen the 2 **SCREWS** on the **BATTERY CLIP**. Remove the battery and
the clip together.
4. Unclip old battery. Install new battery + side up
5. Replace and screw the battery and clip assembly onto the circuit board.
6. Replace the watch back and tighten screws. Be careful not to
tighten it too much or you may damage it.
7. Reset The **SpyX Recon Watch** by inserting a bent wire such as a paper
clip thru the small slot on the back of the watch until it stops. Press firmly to
reset watch.


NOTE: The **SpyX Recon Watch** may experience memory loss if subjected to
a battery loss.

TO CHECK WORLD TIME: Press or <C> to change city.

CITY	CODE	CITY	CODE
Tokyo, Japan	TYO	Berlin, Germany	BER
Seoul, South Korea	SEL	Paris, France	PAR
Beijing, China	PEK	London, England	LON
Hong Kong	HKG	Rio de Janeiro, Brasil	RIO
Singapore	SIN	Toronto, Canada	YYZ
Bangkok, Thailand	BKK	New York City, America	NYC
Delhi, India	DEL	Chicago, America	CHI
Riyadh, Saudi Arabia	RUH	Denver, America	DEN
Moscow, Russia	MOW	Los Angeles, America	LAX
Cairo, Egypt	CAI	Anchorage, Alaska	ANC
Helsinki, Finland	HEL	Honolulu, Hawaii	HNL
Rome, Italy	ROM	Sydney, Australia	SYD

IMPORTANT:

 IF WATCH FUNCTIONS ARE NOT PROPERLY DISPLAYED,
PLEASE FOLLOW STEPS TO RESET THE **WATCH**

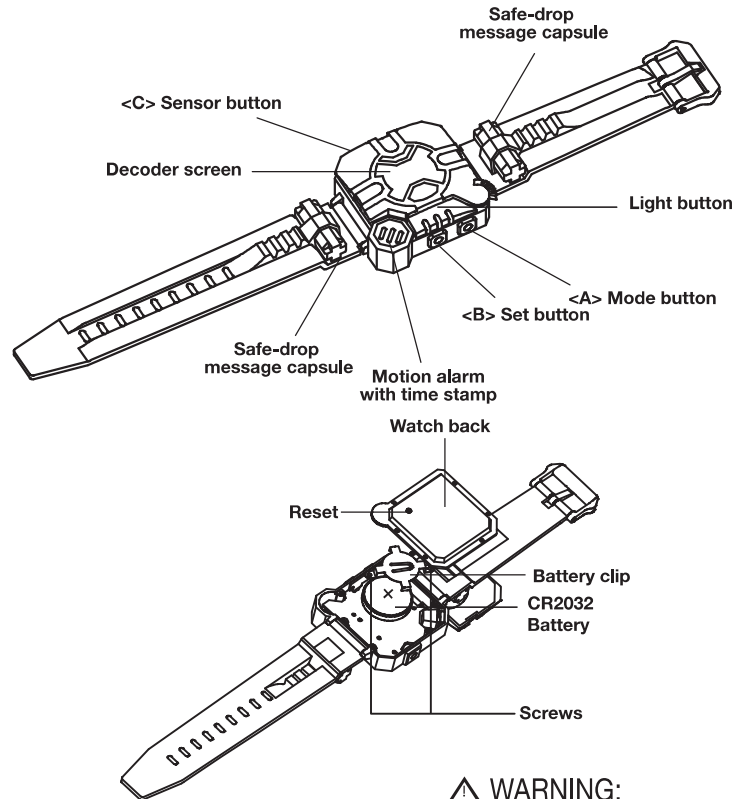

⚠ WARNING:

This product contains a coin battery.
A coin battery can cause
serious internal chemical burns if swallowed.

⚠ WARNING:

Changes or modifications to these units not
expressly approved by the party responsible for
compliance could void the user's authority to
operate the equipment.

⚠ WARNING:

Dispose of used batteries immediately.
Keep new and used batteries away from children.
If you think batteries might have been swallowed
or placed inside any part of the body, seek
immediate medical attention.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to
the following two conditions:(1)This device may not cause harmful
interference, and (2) this device must accept any interference received,
including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party
responsible for compliance could void the user's authority to operate the
equipment.
Note: This equipment has been tested and found to comply with the limits
for a Class B digital device, pursuant to part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful
interference in a residential installation. This equipment generates, uses and
can radiate radio frequency energy and, if not installed and used in
accordance with the instructions, may cause harmful interference to radio
communications. However, there is no guarantee that interference will not
occur in a particular installation.

If this equipment does cause harmful interference to radio or television
reception, which can be determined by turning the equipment off and on,
the user is encouraged to try to correct the interference by one or more of
the following measures:
· Reorient or relocate the receiving antenna.
· Increase the separation between the equipment and receiver.
· Connect the equipment into an outlet on a circuit different from that to
which the receiver is connected.
· Consult the dealer or an experienced radio/TV technician for help.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.



IF YOU HAVE ANY QUESTIONS, PLEASE
CONTACT US AT
www.atomicmonkeyproducts.com/help

Product specifications
subject to change.
RECON WATCH
10401-IS-US R3