


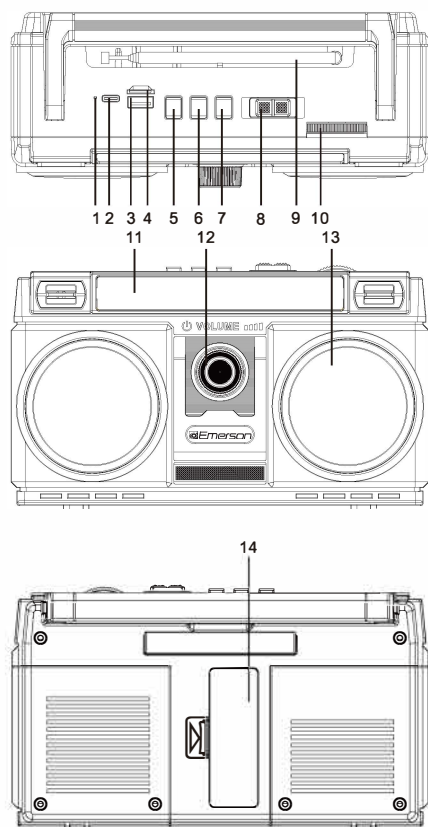

E-2

INDEX TO PARTS & CONTROLS:

- | | |
|-----------------------|---------------------------------|
| 1. CHARGE/POWER | 8. FUNCTION |
| 2. DC 5V IN | 9. ANTENNA |
| 3. USB PORT | 10. TUNING |
| 4. TF CARD SLOT | 11. FREQUENCY INDICATING WINDOW |
| 5. PREV/REW | 12. VOLUME/POWER |
| 6. PLAY/PAUSE/TWS/LED | 13. SPEAKER |
| 7. NEXT/FF.WD | 14. BATTERY DOOR |

The operating methods of various functions:

A. RADIO

1. Turn on the power by turning the volume knob.
2. Push the function button to select AM/FM/SW. When receiving the FM/SW channel, fully extend the antenna and adjust the console knob until you find a desired station. Rotate the unit to improve AM signal reception.
3. Adjust the tuning knob slowly for best reception.

B. PLAY USB/TF

1. Turn the volume knob to turn on the power and adjust the volume to a moderate position, press the FUNCTION button to select the BT/USB/TF mode.
2. After inserting a USB drive or TF card, the device will automatically play the music files on the USB/TF card. (Ensure the USB drive or TF card contains MP3, WMA, or WAV files.)
3. During playback, press the "◀▶" button to select the previous/next song. Long press the "◀▶" button to fast forward or rewind.
4. During playback, press the "⏸" button to pause the music playback and press again to continue the music playback.

C. BLUETOOTH

1. Turn the volume knob to turn on the power and adjust the volume to a moderate position. Push the function button to select the BT/USB/TF mode. When no USB/TF device is inserted, the unit will enter Bluetooth mode.
2. Search for and connect to "EAS-3011" on your device. When the Bluetooth connection is complete, you will hear a confirmation tone when pairing is successful.

E-3

3. When the Bluetooth connection is successful, you can play music from the mobile music APP.
4. During playback, press the "◀▶" button to select the previous/next song.
5. During playback, press the "⏸" button to pause the music. Press it again to resume playback.

TWS Function:

1. Turn on both units and set them to Bluetooth mode.
2. Press the TWS button on both units at the same time.
3. Within a few seconds, you will hear a confirmation tone indicating successful pairing.

To disconnect TWS:

Press and hold the "⏸" button on either unit for 2 seconds.

D. PC CONNECTION

- Turn the VOLUME knob to power on the unit and set it to a moderate level. Press the FUNCTION button to select BT/USB/TF mode.
- Use a USB male-to-male data cable (not included) to connect the unit to a computer. Plug one end of the cable into the computer's USB port and the other end into the unit's USB port.
- The unit can then be used as a computer multimedia speaker.

E. CHARGING

1. If the sound becomes weak or intermittent, the battery may be low. Use a USB power source to charge the unit.
2. Connect a standard USB Type-C cable to the DC 5V input of the unit, and connect the other end to a USB power source (not included). The charging indicator light will turn on during charging.
3. Charging time is approximately 4-6 hours.
Note: The indicator light will automatically turn off when the battery is fully charged.

F. BATTERIES

- Slide the battery cover in the direction marked "OPEN" to remove it.
- Insert one 18650 lithium-ion battery, ensuring the correct polarity as indicated inside the battery compartment.
- If the unit will not be used for an extended period, remove the battery to prevent leakage and possible damage to internal components.

E-4

G. SPECIFICATIONS

1. Frequency Range: AM: 530 - 1710KHz
FM: 88 - 108MHz
SW: 5.9 - 18.0MHz
2. Power Supply: Rechargeable 3.7V 1200mAh Button-top Lithium-ion Battery (Removable) **Caution:** Do not use alkaline or other battery types
3. Maximum output power: 2.2W+2.2W
4. USB/TF/BT playback format: MP3, WMA, WAV

H. LED LIGHT

- The LED light functions only in BT/USB/TF playback mode and does not operate in radio mode.
- Turn the VOLUME knob to power on the unit. Press the FUNCTION button to select BT/USB/TF mode.
- During music playback, press the PLAY/PAUSE button twice to turn the LED light

I. FCC NOTICE

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to protect reasonably against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

E-5

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING



1. To protect battery life, ensure the rechargeable battery is charged at least once every three months.
2. Keep the unit away from heat and humidity. Avoid exposure to extreme temperatures and direct sunlight.
3. AM radio reception may be affected while the unit is charging.
4. Cleaning: Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners that may damage the surface.
5. Handle with care. Do not drop, disassemble, deform, modify, or insert foreign objects into the unit.
6. Do not attempt to repair or service the unit yourself. Refer all servicing to qualified personnel.
7. Follow all posted signage requiring electronic devices to be turned off in designated areas. Disconnect the unit from the power source when not in use. CONTAINS LITHIUM-ION BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY IN ACCORDANCE WITH LOCAL REGULATIONS.

J. SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.emersonaudio.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Emerson Technical support.

EMERSON Technical Support
2320 East 49th Street
Vernon, CA 90058
Tel: (866) 411-6292
Email: support@emersonaudio.com


Made in China

E-6



Portable Retro Bluetooth® Speaker
with Radio and
Rechargeable Battery

EAS-3011

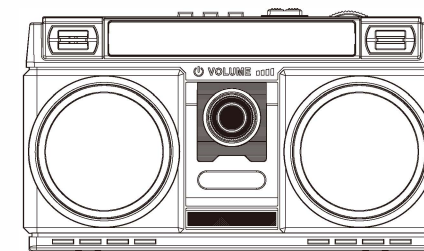

USER MANUAL

Please read carefully before use and keep for future reference.