


ALPHA DIGITAL

MAGNETIC WIRELESS POWER BANK USER MANUAL

MODEL: ZL014

Overview

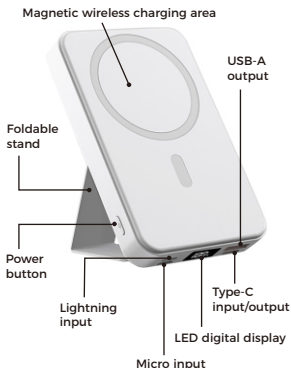

Charging Your Power Bank

1. Connect the included charging cable to the Type-C port of the power bank.
2. Use a charging adapter (not included) and plug the USB end of the cable into it.
3. Plug the adapter into a power outlet to begin charging.
4. The digital display will show the charging progress.
5. Once the power bank reaches 100%, disconnect the charging cable promptly to prevent overcharging.

Safety & Maintenance Instructions

1. Read the instructions carefully before using the power bank.
2. Disconnect all cables after use to prevent unnecessary power consumption.
3. Avoid exposure to extreme conditions:
 - Do not heat, burn, or dispose of the power bank in fire, water, or any liquid.
 - Keep away from heat sources, as high temperatures may cause an explosion.
 - Recommended storage temperature: -13°F to +95°F (-25°C to +35°C).
4. Do not store the power bank for extended periods without recharging.
5. Handle with care:
 - Do not drop, open, crush, or disassemble the power bank.
6. Use within the rated output:
 - Overloading may cause fire, damage, or injury.

Using Your Power Bank

1. Wired Charging

- Use your regular phone charging cable to connect the power bank's USB/Type-C port to your mobile device.
- Charging speed depends on your device's battery capacity.
- The digital display will flash the percentage while charging and show a solid 100% when fully charged.

2. Wireless Charging

- Place your mobile phone on the magnetic charging area.
- Press the switch, and the power bank will automatically detect your phone and start wireless charging.

3. Checking Battery Level

- Press the switch to check the remaining power on the digital display.



Dispose of rechargeable batteries carefully. Do not mix battery types.

