



IMPORTANT:

- ALWAYS MAKE SURE THERE IS NO OBSTACLES BLOCKING THE AIR INLET DURING INFLATION
- Please disconnect when not using for extended periods of time.
- 3. Do NOT drop or shake the unit.
- Please ensure that Inflatable is placed in temperatures

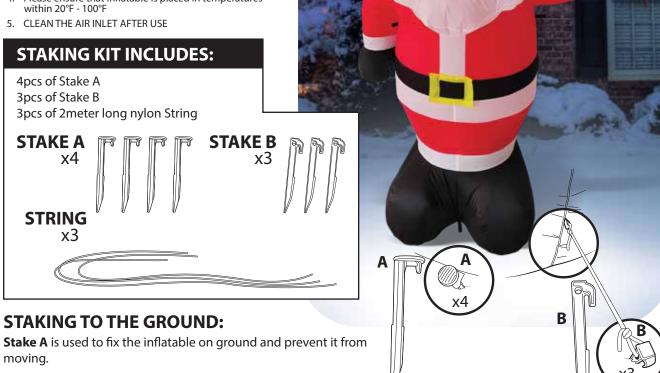


Height

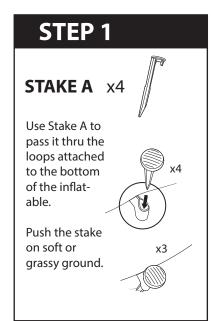

well in a mild wind.

Stake B is used to further stabilize the inflatable and help it hold up

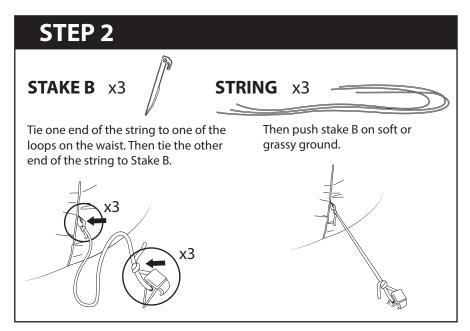


* NIGHT TIME SETTING IS RECOMMENDED FOR BEST VIDEO VIEWING EXPERIENCE




TO USE:


1. Be sure inflatable is zipped up.

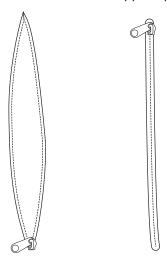

- 2. To turn on plug into outlet.
- **3.** To turn off un plug and un-zip the inflatable to let air out.

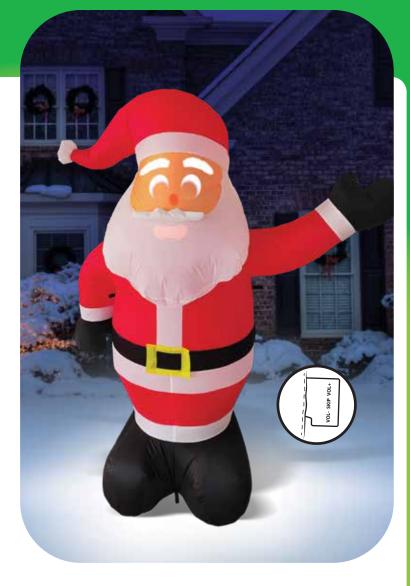

CONTROLS:

 

Still Mode:

Give Inflatable SanTek a decorative look by entering into still mode. SanTek will not run any animation but instead will maintain a still face. Press and hold the + & -buttons simultaneously for 3 seconds to enter into still mode. To exit press any button to resume animations.

*Note: Video will replay on loop until unplugged, there is no timer on Inflatable.

CARE INSTRUCTIONS:

Wipe clean with a damp cloth and allow to dry before storing away.



PO BOX 9525 GLENDALE, CA 91226 WWW.MINDSCOPEPRODUCTS.COM WWW.ANIMAT3D.COM

