




3SY177/8GR188 Indoor/Outdoor Halloween Maple Branch and Garland with Purple and Orange Light - Battery Operated

ALL MODES ARE OPERATED WITH TIMER
(6H ON / 18H OFF)

TOUS LES MODES SONT FONCTIONNÉS
AVEC MINUTERIE (6H SUR / 18H DÉACTIVÉ)

TODOS LOS MODOS FUNCIONAN CON
TEMPORIZADOR (6H ENCENDID / 18H APAGADO)

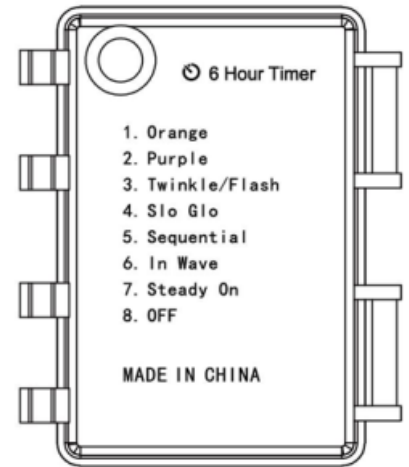

PRESS TIMES / HORAIRES DE PRESSE / TIEMPOS DE PRENSA	MODE / MODE / MODO
1	ORANGE / ORANGE / NARANJA
2	PURPLE / VIOLETTE / PÚRPURA
3	TWINKLE/FLASH / SCINTILLEMENT/FLASH / BRILLO/FLASH
4	SLOW GLOW / LUMIÈRE LENTE / BRILLO LENTO
5	SEQUENTIAL / LUMIÈRE LENTE / BRILLO LENTO
6	IN WAVE / EN VAGUE / EN ONDA
7	STEADY ON / CONSTANT / ESTABLE ENCENDIDO
8	OFF / DÉACTIVÉ / APAGADO

Uses 3 AA 1.5v Alkaline batteries, not included.

Insert batteries following the polarity markings in the battery compartment. Do not mix old and new batteries, or Alkaline and rechargeable batteries. Do not dispose of waste batteries in a fire, as they may explode. Dispose of batteries as per state and local guidelines.

Utilise 3 piles alcalines AA 1,5 V, non incluses.

Ne pas mélanger des piles anciennes et neuves, ou des piles alcalines et rechargeables. Ne pas jeter les piles usagées dans un feu, car elles peuvent exploser. Éliminer les piles conformément aux directives nationales et locales.

Utiliza 3 pilas alcalinas AA de 1,5v, no incluidas.

Inserte las baterías siguiendo las marcas de polaridad en el compartimiento de las baterías. No mezcle pilas viejas y nuevas, ni pilas alcalinas y recargables. No arroje las baterías usadas al fuego, ya que pueden explotar. Deseche las baterías según las pautas estatales y locales.