10 IN ONE STEAM MOP

Instruction Manual

STEAM MOP

Product Components



1 Hand Sheath
2 Cord Hold
3 Handle
4 Lock Catch
5 Water tank Cap
6 Water tank Button
7 Water tank
8 Steam control Knob
9 Steam head Spindle
10 Power Cord
11 Water Inlet
12 Indicate light
13 Main body steam button
14 Handle tube button

Function and specification

Function

- Adjustable steam amount;
- folding holder;
- The split-type design;
- removable water tank;
- the handle bracket is configuration of steam button;
- continuous steam output(up to 5 minutes continuously working , the steam averages(g): 20-35g/ min;
- Steam output time: 20 minutes
- With a warm and dry indicator when the appliance is connected to power supply, and when the water tank is empty , the indicator is in red light;
- pressure relief protection, keeping the pressure in the heating unit constant;
- the angle of the rotation axis in the cleaner is greater;
- Comprehensive accessories configuration;

Specification

- Rated Voltage: 100-120V, 60Hz
- or 220-240V, 50/60Hz
- Output power: 1300W (+5%,-10%)
- water tank capacity: 350ML
- Waterproof level: IPX4

Children should be supervised to ensure that they do not play with the appliance.

The sign means have steam spurt

WARNING DANGER OF SCALDING

HOUSEHOLD USE ONLY

ACCESSORIES CHAR:

!CAUTION! Before cleaning any electrical appliance,check and follow appliance manufacture's cleaning guidelines.		
ACCESSORY	REQUIRED ACCESSORIES THAT MUST BE CONNECTED TO THE ACCESSORY ADAPTOR	SUGGESTED USE
Window Squeegee Garment Steaming Tool		Shower glass doors,mirrors,glass,removing soap scum and grime. Garment tool for taking wrinkles out of garments, steaming draperies,tablecloths,and more.
Small and Medium Scrub brushes		Oven,microwaves,stove tops,showers,bathtubs,fixture fixtures,tile,grout,toys,refrigerator,etc.
Angle Nozzle		Stove tops,around faucet edges,grout,microwaves,sinks,hard to reach areas,etc.
Gusset cleaning Tool		Cleaning all grout lines,sanded or non-sanded.
Scraping Tool		Scraping baked on food,grime,and grease. Removing residue or other difficult substances from surfaces such as stove tops and ovens
Garment Steamer Cloth		For use when steaming garments,draperies,tablecloths, etc.
Microfiber Pad		For general cleaning of hard floors and refreshing carpets

CLEANING AND MAINTENANCE

BE SURE THAT THE UNIT IS DISCONNECTED FROM THE POWER OUTLET WHEN PERFORMING CLEANING

Drain the remaining water in the tank and clean the tank after every use.

Please use detergent to clean the accessories (Jet Nozzle and Round Brushs when they are dirty then wash with cleaning water and air dry.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Reduced steam or no steam	Water tank may be empty	Fill water into the water tank
	Steam nozzle may be blocked	Clean steam nozzle
	There is no power to the unit	Make sure unit is plugged in
	Didn't press steam button	Press steam button
	Steam control Knob is to MIN	Turn steam control knob clockwise
Unit will not turn on	Blown fuse or breaker	Replace fuse or reset breaker at home
	Power cord not plugged in	Plug cord into a working circuit
	Internal fuse is blown	Contact with customer service

Special remark:

Used material for parts and packing all comply with RoHs requirement

Heavy metal limited data: Pb+Cd+Hg+Cr6+<100ppm

Bromic oxidize burning limited data: PBBs+PBDEs<1000ppm

Environment

Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

Safety instructions

WARNING: Read all safety warnings and all instructions.Failure to follow the warnings and instructions listed below may result in electric shock,fire and/or serious injury.

Warning When using electrical appliances,basics safety precautions,including the following,should always be followed to reduce the risk of fire,electric shock,personal injury and material damage.

- Read all of this manual carefully before using the appliance.
- The intended use is described in this manual.The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- Return this manual for future reference.

Using your appliance

- Do not direct steam at people,animals,electrical appliances or electrical outlets.
- Do not expose to rain.
- Do not immerse the appliance in the water.
- Do not leave the appliance unattended.Keep children away from unit while in use.
- Do not leave the appliance connected to an electrical outlet when not in use.
- Never pull the power cord to disconnect the appliance from the socket.Keep the appliance cord away from heat,oil and sharp edges.
- Do not handle steam cleaner with wet hands.
- Do not pull or carry by cord,use cord as a handle,close door on cord,pull cord around sharp corners or expose cord to heated surfaces.
- Do not use appliance in an enclosed space filled with vapor given off by oil-base paint,(some) moth proofing substances,flammable dust,or other explosive or toxic vapors.
- do not use on leather,wax polished furniture or floors,synthetic fabrics,velvet or other delicate,steam-sensitive materials.
- Do not use on any uncoded hard floor surfaces.Additionally,on surfaces that have been treated with wax or some no-wax floors,the steam may be removed by the heat and steam action.It is always recommended to test an isolated area of the surface to be cleaned before proceeding.We also recommend that you check the use and care instructions from the floor manufacturer.
- Never put de-scaling,aromatic,alcoholic or detergent products into the steam mop,as this may damage it or make it unsafe for use.
- If the circuit breaker activates while using the steam function,discontinue product use immediately and contact the customer support center.(Beware of the risk of electrical shock.)
- The appliance emits very hot steam to sanitize the area of use.This means that the steam head and cleaning pads get very hot during use.

! **Caution:**Always wear suitable shoes when using your steam mop and when changing the accessories on your steam mop.Co not wear slippers or open-toed footwear.

- The lid may become hot during use.
- Care should be taken when using this appliance.DO NOT touch any parts which may become hot during use.
- Do not use when micro-fiber cleaning pad not install correct.

Safety of others:

- This appliance is not intended for use by persons,including children,with reduced

ASSEMBLY

NOTE: Each steam mop is 100% tested in the factory to ensure product performance and safety.When assembling your new steam mop for the first time you may notice water residue inside of the unit.

!WARNING: Before attempting any of the following operations,make sure that the appliance is switched off and unplugged and that the appliance is cold and contains minimal or no water.

Attaching the handle

- Slide the handle tube B into the handle C until it clicks into place.
- Slide the handle tube B with handle installed to the main body A,until it clicks into place
- The handle can be removed from the steam mop body for easy storage by pressing the Handle tube button 14.

Attaching the steam head

- Slide the bottom end of main body onto the steam head N until Steam head Spindle 9 clicks into place
- The steam head N can be removed from the Main body by pressing salient point on the Steam head Spindle.



Attaching a cleaning pad

- Because of barb design at the bottom of steam head N,just place a micro-fiber cleaning pad L to steam had,they can bond hard.
- Place the front of your shoe onto the cleaning pad removal tab And press down firmly.

Attaching Carpet Gilder

- Press the micro-fiber cleaning pad L with main body to Carpet gilder O by vertical pressure, until it auto place.
- Place the front of your shoe onto the cleaning pad removal tab And press down firmly,carpet gilder will remove form steam head.



How to decalcify the Water Tank interior

To clean calcium deposits that build up inside the Water Tank , add one or two tablespoons of white vinegar to a full Water Tank close the Water Tank Cap and then shake the contents. DO NOT TURN THE STEAMER ON.

Cleaning procedure to remove lime scale

If your steam mop begins to produce steam more slowly than usual or stops producing steam , you may need to remove lime scale. Lime scale can develop over time on the metal parts and greatly affect mop performance.

It is necessary to remove lime scale on regular basis every 25-50 times you use a full tank of water or at least once a month, especially in areas with hard water.

The frequency of lime scale removal depends upon the hardness of you tap water and how often you use the steam mop.

By using cleaning solution

1. Prepare a solution of 1/3 white vinegar and 2/3 tap water and add to the water tank.

2. Secure and position the unit to ensure steam released is aimed away from the floor or surrounding objects and surface. Plug the unit in , turn the unit ON by pressing the power swith, and allow the unit to produce steam until the vinegar/water solution in used up.

3. Repeat the above procedure as many times as necessary until a normal steam flow rate is achieved.

4. Fill the water tank with fresh water and rinse out.

5. Fill the water tank with fresh water, attach to the unit and release steam through the system until the water tank is empty.

WARNING

Don't leave the steamer unattended during the lime scale removal process and/or while in use

NOTICE:

Perform a test cleaning on a suitable isolated area after each lime scale removal to ensure that there is no debris left in the system.

Cleaning hocked steamer accessories

Due to the high mineral content of water in some areas, you may notice that less steam comes out form the Hand-Held steamer accessories

This may be caused by calcium buildup inside the tip of the nozzle

physical,sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

SAFETY GUIDELINES-DEFINITIONS

It is important for you to read and understand this manual.The information it contains relates to protecting YOUR SAFETY and PREVENTING PROBLEMS.The symbols below are used to help you recognize this information.

! **DANGER:** Indicates an imminently hazardous situation which,if not avoided,will result in death or serious injury.

! **WARNING:** Indicates a potentially hazardous situation which, if not avoided,could result in death or serious injury.

! **CAUTION:** Indicates a potentially hazardous situation which, if not avoided may result in minor or moderate injury.

NOTICE: Used without the safety alert symbol indicates a potentially hazardous situation which if not avoided,may result in property damage.

Residual risks:

Additional residual risks may arise when using the tool which may not be included in the enclosed safety warnings.These risks can arise from misuse,prolonged use etc.

Even with the application of the relevant safety regulations and the implementation of safety devices,certain residual risks can not be avoided.These include:

- Injuries caused by touching any moving parts.
- Injuries caused by touching any hot parts.
- Injuries caused when changing any parts or accessories.
- Injuries caused by prolonged use of the appliance.When using any appliance for prolonged periods,ensure you take regular breaks.

STANDARD FEATURES

A Main Body
B Handle tube
C Handle
D Window Squeegee
E Small Scrub Brush
F Medium Scrub Brush
G Accessory Adapter
H Angle Nozzle
I Hard Cleaning Tool
J Scraping Tool
K Measuring cup
L Microfiber Pad
M Garment Steamer Cloth
N Steam head
O Carpet Gilder

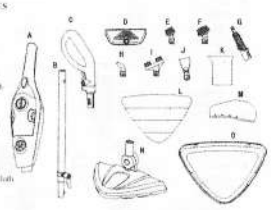

OPERATION

1. 1.Filling the water tank

Method one:

Open the water tank cap 5 by counterclockwise rotation,fill 360ML water use Measuring cup, and then clockwise rotation to close water tank cap 5.

Method two:

Remove the water tank from main body,open the water tank cap 5 by counterclockwise rotation,fill the water tank from water faucet ,and then clockwise rotation to close water tank cap 5.

Install the water tank 7to main body until it clicks into place.



2. Plug in the appliance to a grounded outlet.

3. When switch the appliance on,the indicator lights will turn red at the each side of water tank,it indicate preheating.If the lights does not illuminate,please check the "trouble shooting" section for more details.

4.It will takes approximately 25 seconds for preheating.Once the steam mop is ready to use the water tank will glow blue.

5.When the water tank full fill with water it can work approximately 20 minutes.If the water tank 7 without water,the indicator lights 12 will glow red,and the lights will flash to point out need to add water.

NOTICE: If power off during preheating or after preheating,then power again,the appliance will repeat above preheating action.

6.Press the steam button 4 and steam button13 the steam on.

7.Add control volume by turn steam control knob 8 clockwise and counterclockwise to reduce. User can adjust steam volume according different objects.

NOTICE: Steam volume control by PCB,it will takes 3 seconds adaptation time when you adjust steam volume .It is normal phenomenon.

When normal cleaning,the steam head has big rotary angle,can clean corners and also can clean low space.



USE AS A STEAM CLEANER IN HAND

- Press handle tube button,remove the handle from main body A
- Install the accessory adaptor at the top of main body A,until it auto place.
- Press salient point at the accessory adaptor to remove the accessory adaptor from main body A.
- Choose the appropriate accessories(check accessories our list),according to steam indicator to adapt and install to accessory adaptor.Gilder turn anticlockwise until it auto close.
- When using the handheld steam cleaner ,the first step detach the handle, second press the button 8 ,when the light turn blue, pls press the button 13.

How to cleaning calcium buildup

We recommend using a spray lubricant. Spray a small burst or two of the lubricant inside the tip of the Jet Nozzle. After spraying lubricant inside the component, till the steamer with water according to the directions and run a continuous jet of steam through the affected accessory for several minutes to remove the deposit once the steam pathway is clear , unit the steamer at a neutral surface or cleaning cloth to make sure no debris is emitted.

This product contains no serviceable parts.Do not try to repair it yourself.Any servicing that requires disassembly other than cleaning must be performed by a qualified appliance repair technician.

ALL servicing should be done by an authorized service representative.

CLEANING MICROFIBER PAD

- Machine washable on "warm" setting.Always use a mild detergent.
- For best care results,lay flat to dry.
- **IMPORTANT:** Allow the steamer to fully cool down before performing any maintenance or troubleshooting checks.
- **IMPORTANT:** Never use bleach or fabric softener when washing the microfiber cleaning pad.

STORAGE

- After the steamer is used,turn power off and then unplug the power cord.
- Take out the water tank,and empty the residual water in the tank and clean the external surface with a dry cloth.Until the steam mop cools down,clean appliances.
- Remove the cleaning pad,and wash it so that it will be ready for next use.
- Store product in a protected,dry area.Keep water funnel and measuring cup for future use.
- Keep out of reach of children.

NOTICE: After cleaning,take out the water tank before cut off the power,and then let the product work for a while,until there is no steam.It can make pipe without water,good to store.

TROUBLESHOOTING

USE TROUBLESHOOTING GUIDE AS A FIRST STEP TO RESOLVE ANY PROBLEMS YOU MAY BE EXPERIENCING.

All servicing should be done by an authorized service representative.

!WARNING!: TO REDUCE RISK OF PERSONAL INJURY, UNPLUG STEAMER BEFORE SERVICING AND ALLOW TO COOL.