



How To Use

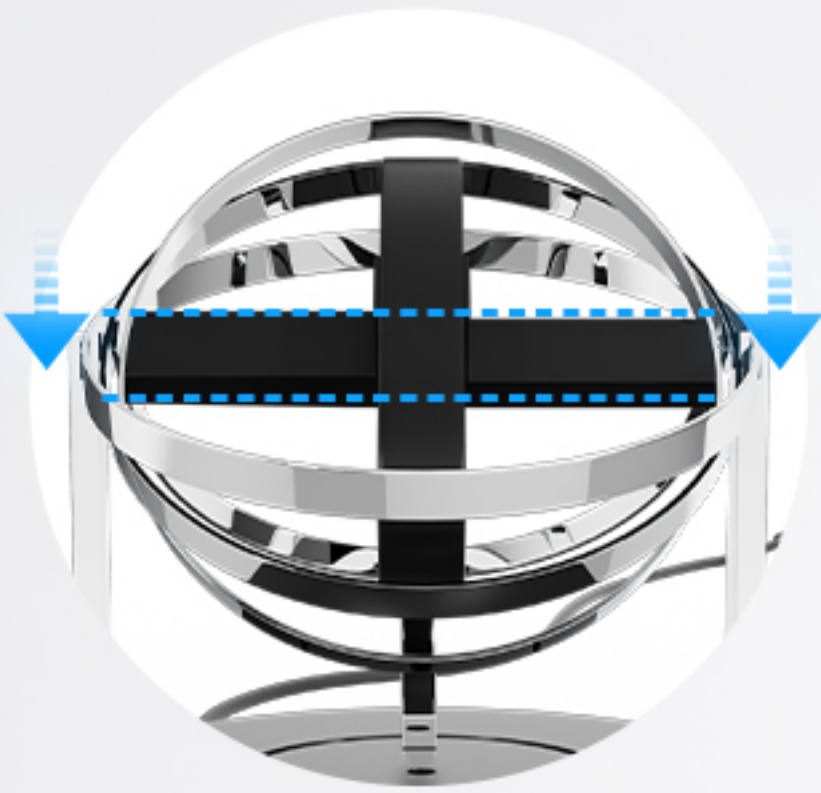

Align T-bracket to the EXACT CENTER of the inner Orbit Ring, then push firmly on both sides to pop the T-bracket in place

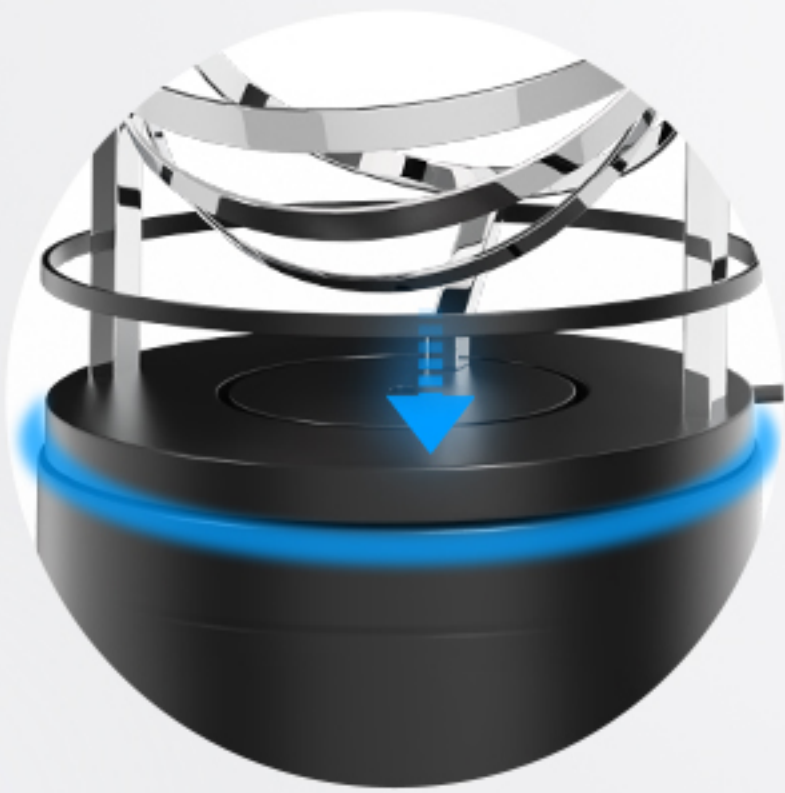

Install the Black Rubber O-ring on the base of the watch Winder with the Black Rubber O-ring's opening slit facing downwards.



Keep the winder plugged in to operate, there is no battery in the winder.



Switch between the clockwise & counter-clockwise modes to adjust the Orbit Rings to an open position to install the T-bracket more easily.