



Step 1: Marking the Mounting Position

Use a pencil or a marker to mark the desired location on the wall where you want to install the wall lamp. Make sure it's at the desired height and is centered properly.

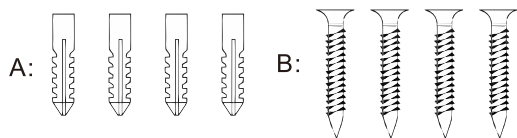


Step 2: Wooden Wall Installation

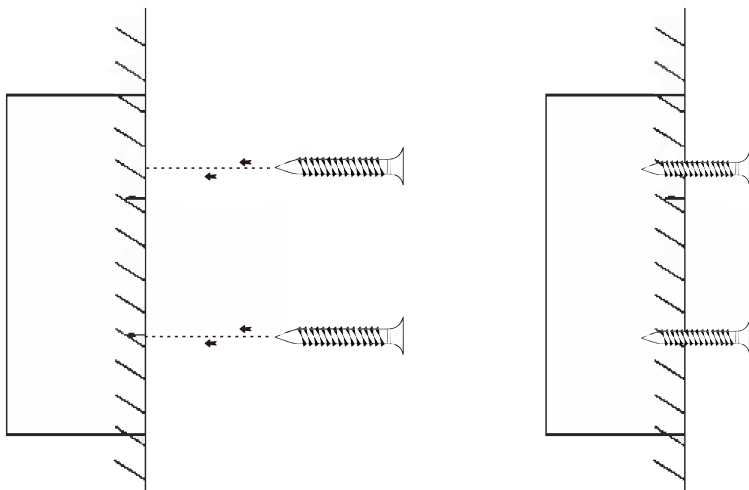

If you have a wooden wall, follow these steps:

- 2.1. Use a screwdriver to insert the provided screws directly into the wooden wall. Leave approximately 1/2 inch (1.27 cm) of the screw exposed from the wall.
- 2.2. Ensure that the screws are securely fastened to the wall.
- 2.3. Hang the wall lamp onto the exposed screws, ensuring it's level and secure.

Step 2: Cement Wall Installation:

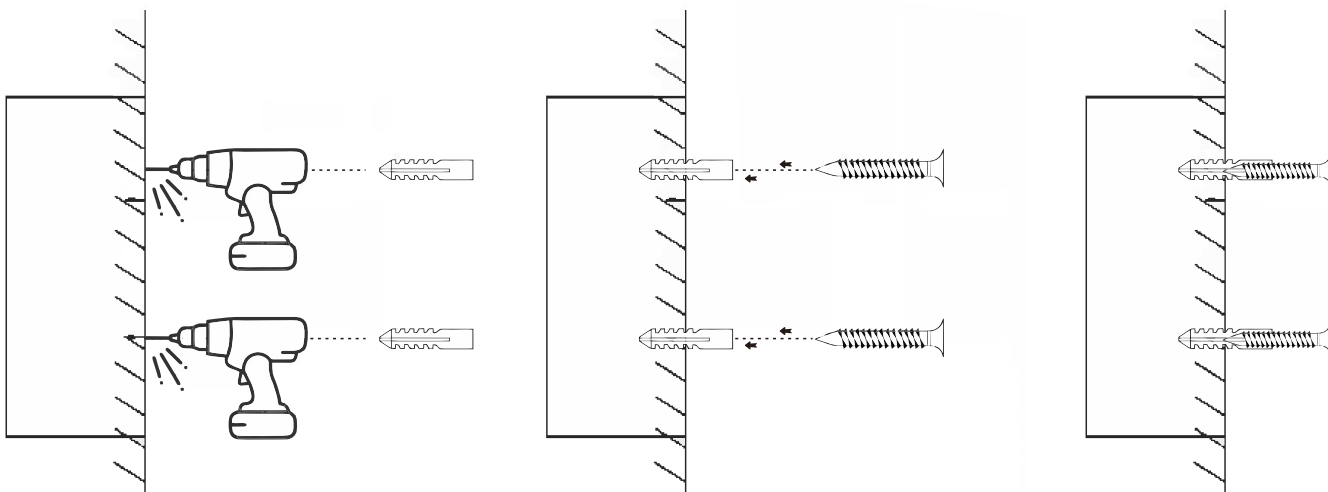

For cement or concrete walls, follow these steps:

1. Use a drill with the appropriate masonry bit to create holes at the marked positions on the cement wall.
2. Insert wall anchors into the holes you've drilled. Make sure they are flush with the wall surface.
3. Using a screwdriver, screw the provided screws into the wall anchors, leaving approximately 1/2 inch (1.27 cm) of the screw exposed from the wall.

Step 3: Hanging the Wall Lamp:

Carefully hang the wall lamp onto the exposed screws or wall anchors. Ensure it's level and securely attached to the wall.