


## SmartCurtain Installation



This guide will help you install the SmartCurtain to your rod. To fully complete the setup, please click the icon  on the dashboard after completing this tutorial.

Next →2

## SmartCurtain Installation



Lift the plastic latch at the bottom of the device and swing the BatteryPack out to 90 degrees. Then, gently pull the BatteryPack free from its compartment.

Next →3

## Insert Batteries



Align the batteries with the plus and minus labels on the BatteryPack before inserting them into place.

Next →4

## Close Battery Compartment



Insert the BatteryPack into the compartment at a 90 degree angle and swing it back into place till you hear it click.

Next →5

## SmartCurtain Parts



Next →6

## Secure Rod



Make sure that your rod is secured to the wall. If needed, tighten any loose screws.

Next →7

## Pull Carabiners Up



Lift the right carabiner up till the carabiner lock clicks firmly into place and can be seen through the gap on the right side of the SmartCurtain. Repeat for the left carabiner.

Next →8

## Open Carabiner Arms



With the front of the device facing you, press the top of the right carabiner. Then, push the arm forward and swing it open. Repeat this with the left carabiner arm.

Next →9

## Open Pleat



Move your curtain to its fully open position. Then, open the first outer pleat of the curtain.

Next →10

## SmartCurtain Install Location

How would you like to install your SmartCurtain?



In Front of Pleats

Install SmartCurtain in front of your curtains.





**Behind Pleats**

Install SmartCurtain behind your curtains, so it is not visible from the front.



Front Pleat →11

Behind pleats →12

## Attach SmartCurtain to Rod



Align your device with the space between the first two pleats, with the front of the device facing you. Hook the carabiners around the rod till they are resting firmly on it and the device is upright. Close each carabiner arm till you hear it click into place.

Next →13

## Behind Pleat

Installing your SmartCurtain device behind the pleat:

- Can provide a cleaner aesthetic by hiding the device.
- Can prevent your curtain from bunching if your pleats don't have sufficient spacing between them.
- Will prevent you from seeing any LED indicators.
- Will require you to go behind the curtain for installation, battery replacement and factory resetting your device.
- May require you to remove and reinstall your curtains in the opposite direction to prevent any gaps when fully closed.

[Back →10](#)

[Next →15](#)

## Secure SmartCurtain to Rod



Hold the SmartCurtain device firmly with a hand on each side and pull down till you feel tension. Then firmly press both the right and left carabiner locks at the same time and gently guide the device upwards till it hits the rod.

Next →14

## Curtain Rod Lip



Does your curtain rod have a lip?

No →19

Yes →18



## Space Behind Rod



Please check that you have enough space between the curtain rod and the wall, so the device can be placed onto the rod comfortably.

Next →16

## Attach SmartCurtain to Rod



Lift your curtain slightly so you can reach the rod behind. Align your device with the space between the first two pleats, with the back of the device facing you. Hook the carabiners around the rod till they are resting firmly on it and the device is upright. Close each carabiner arm till you hear it click into place.

Next →17

## Secure SmartCurtain to Rod



Hold the SmartCurtain device firmly with a hand on each side and pull down till you feel tension. Then firmly press both the right and left carabiner locks at the same time and gently guide the device upwards till it hits the rod.

Next →14

## Install Tape over Rod Lip



If your rod is dusty, please wipe it clean before continuing. Peel the backing from the tape provided. Carefully align the tape with the lip in your rod. Place the tape on the lip and press firmly to secure it in place.


Next →20

## Window Configuration


How would you like to setup your device?



Curtain closes to the left  
1 SmartCurtain device

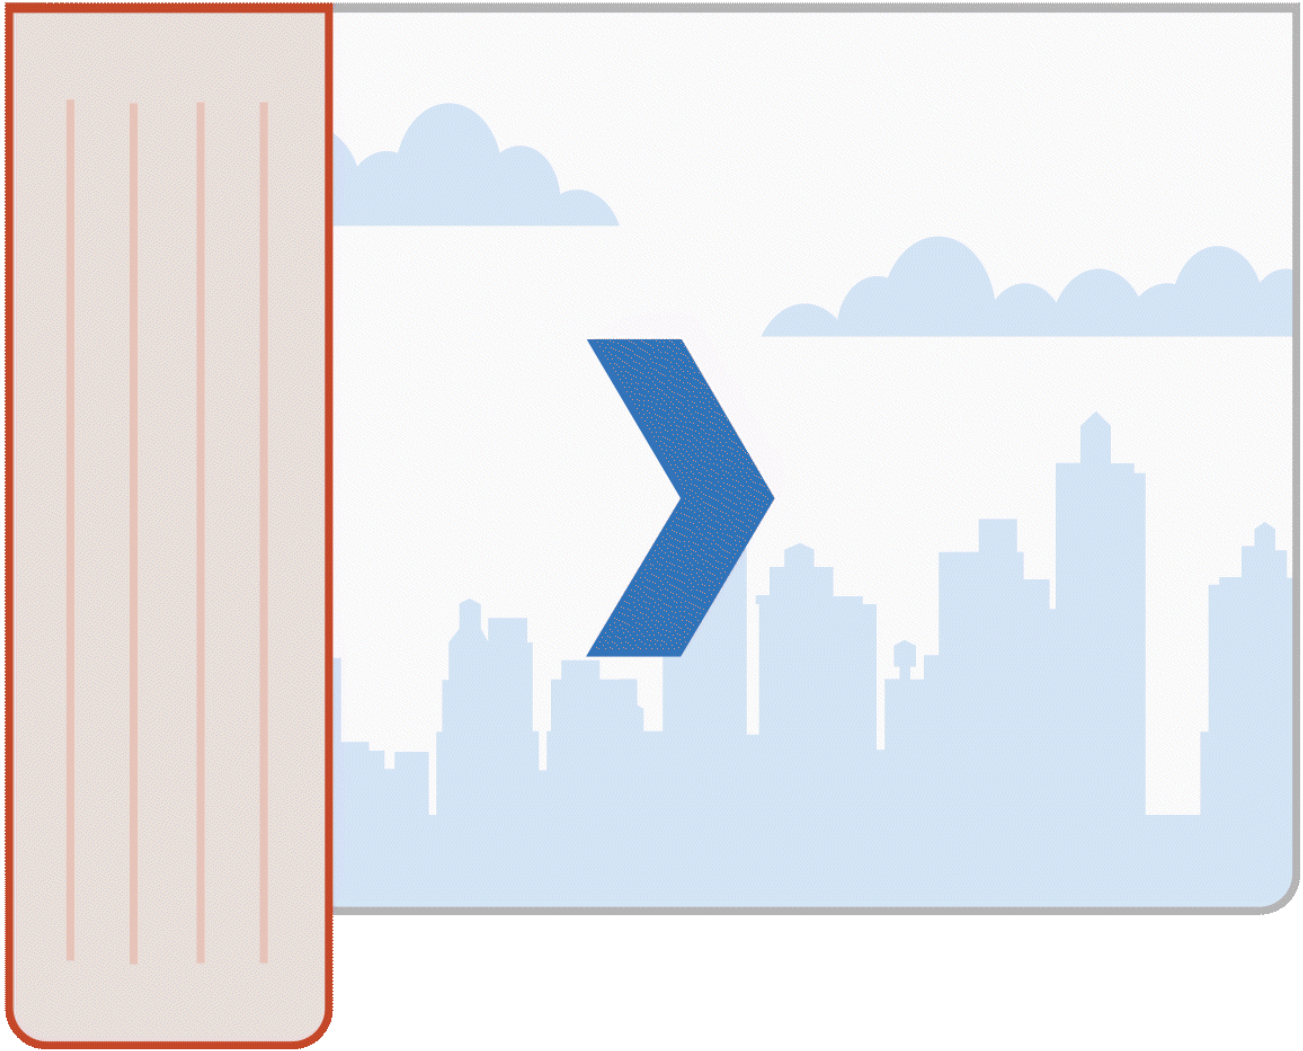

**Curtain closes to the right**  
**1 SmartCurtain device**

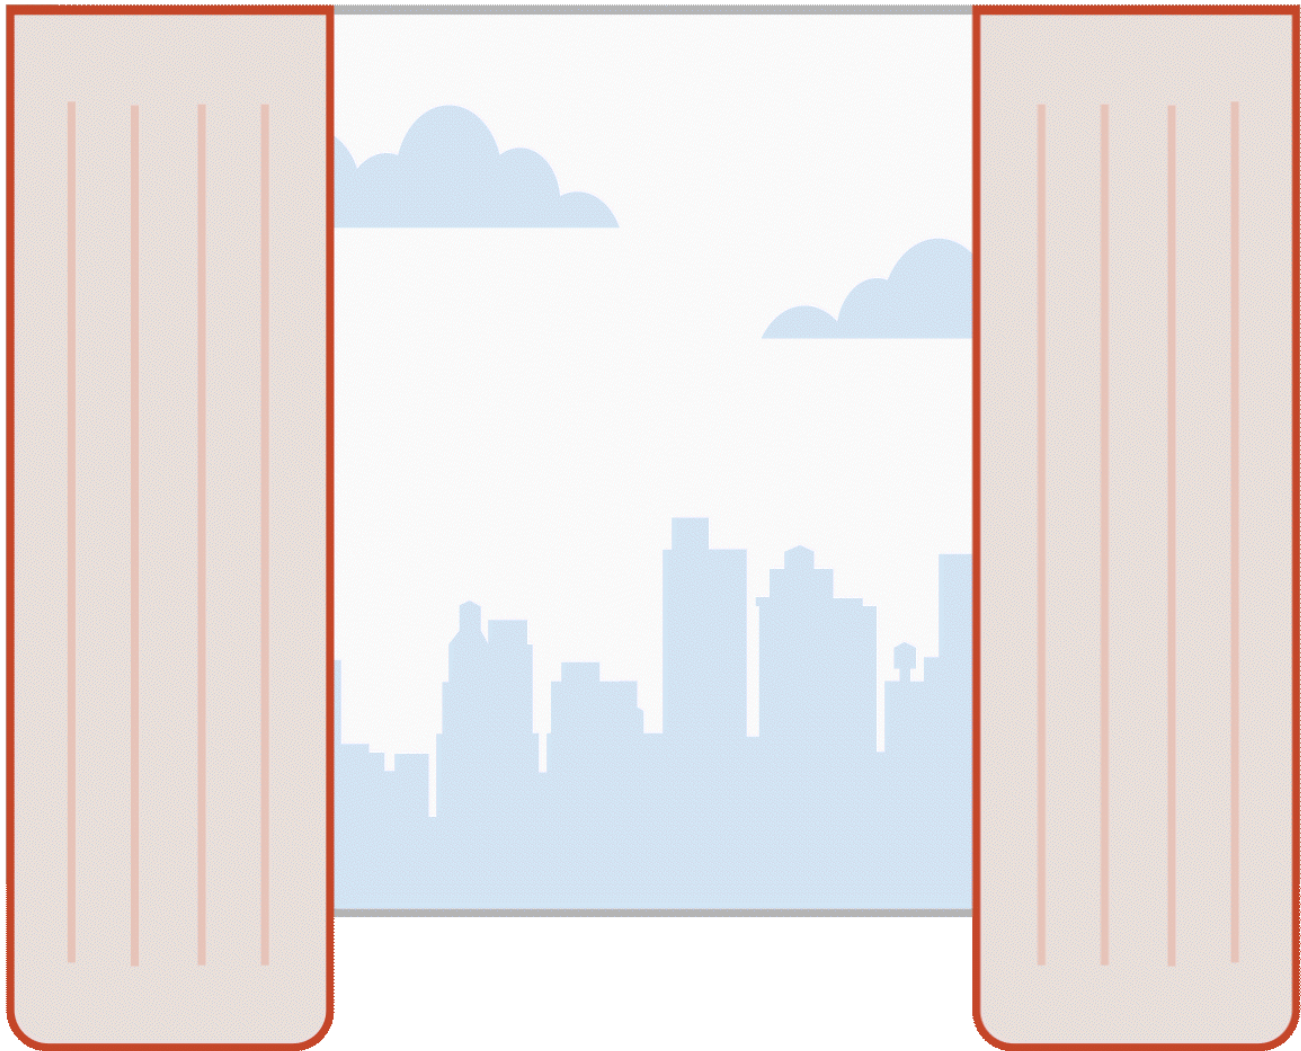

Curains open / close down the middle  
2 SmartCurtain devices

Curtain closes to the left →26

Curtain closes to the right →24


Curains open / close down the middle →23

## RYSE SmartCurtain Setup


How would you like to setup your device?



Curtain closes to the left  
1 SmartCurtain device

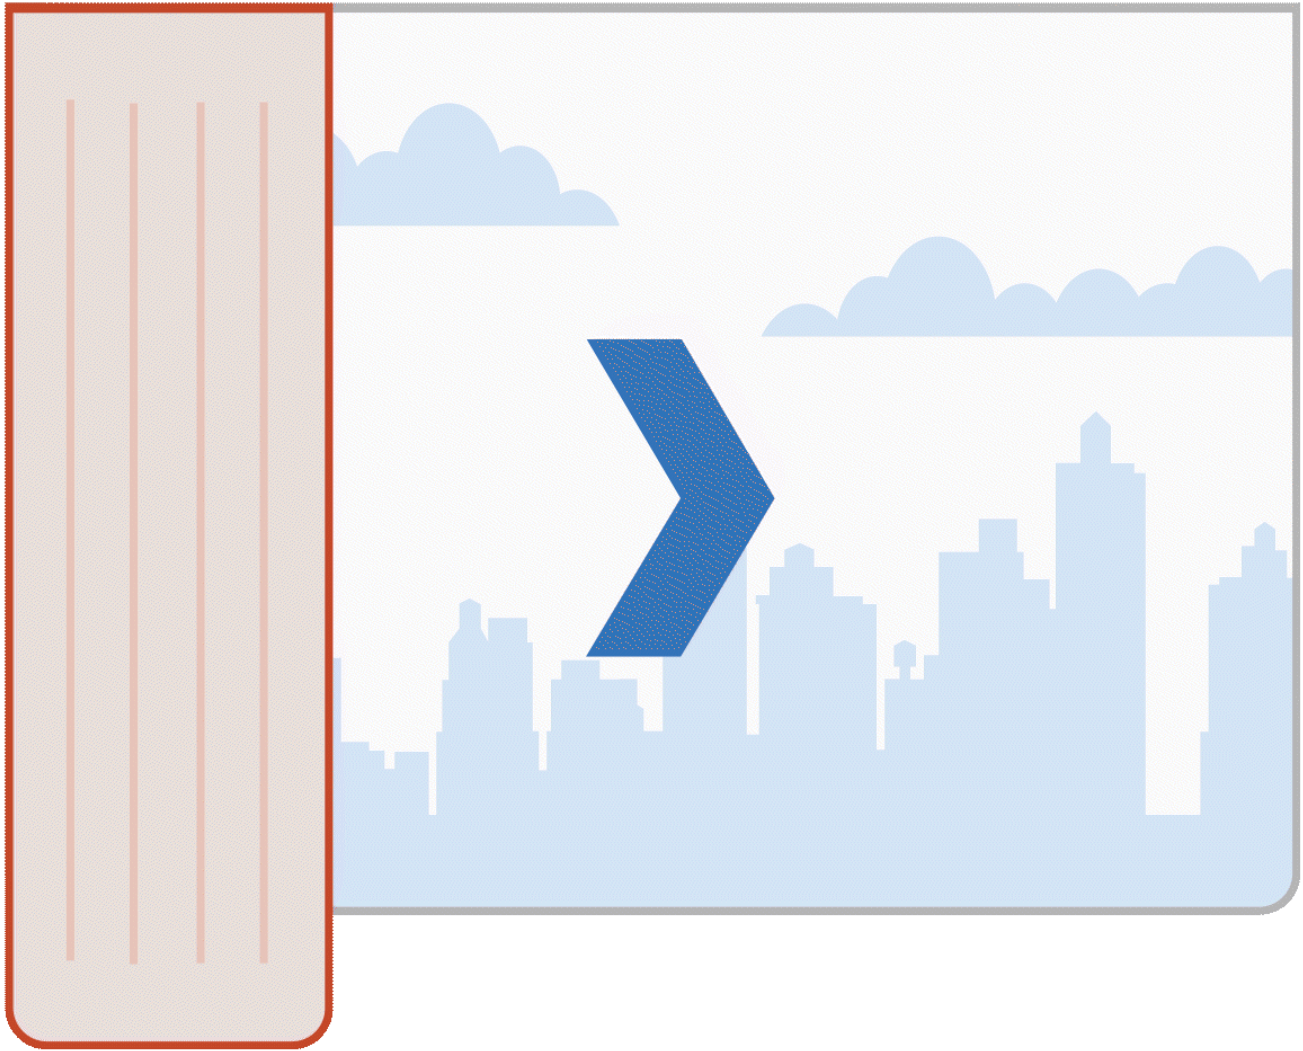

**Curtain closes to the right**  
**1 SmartCurtain device**

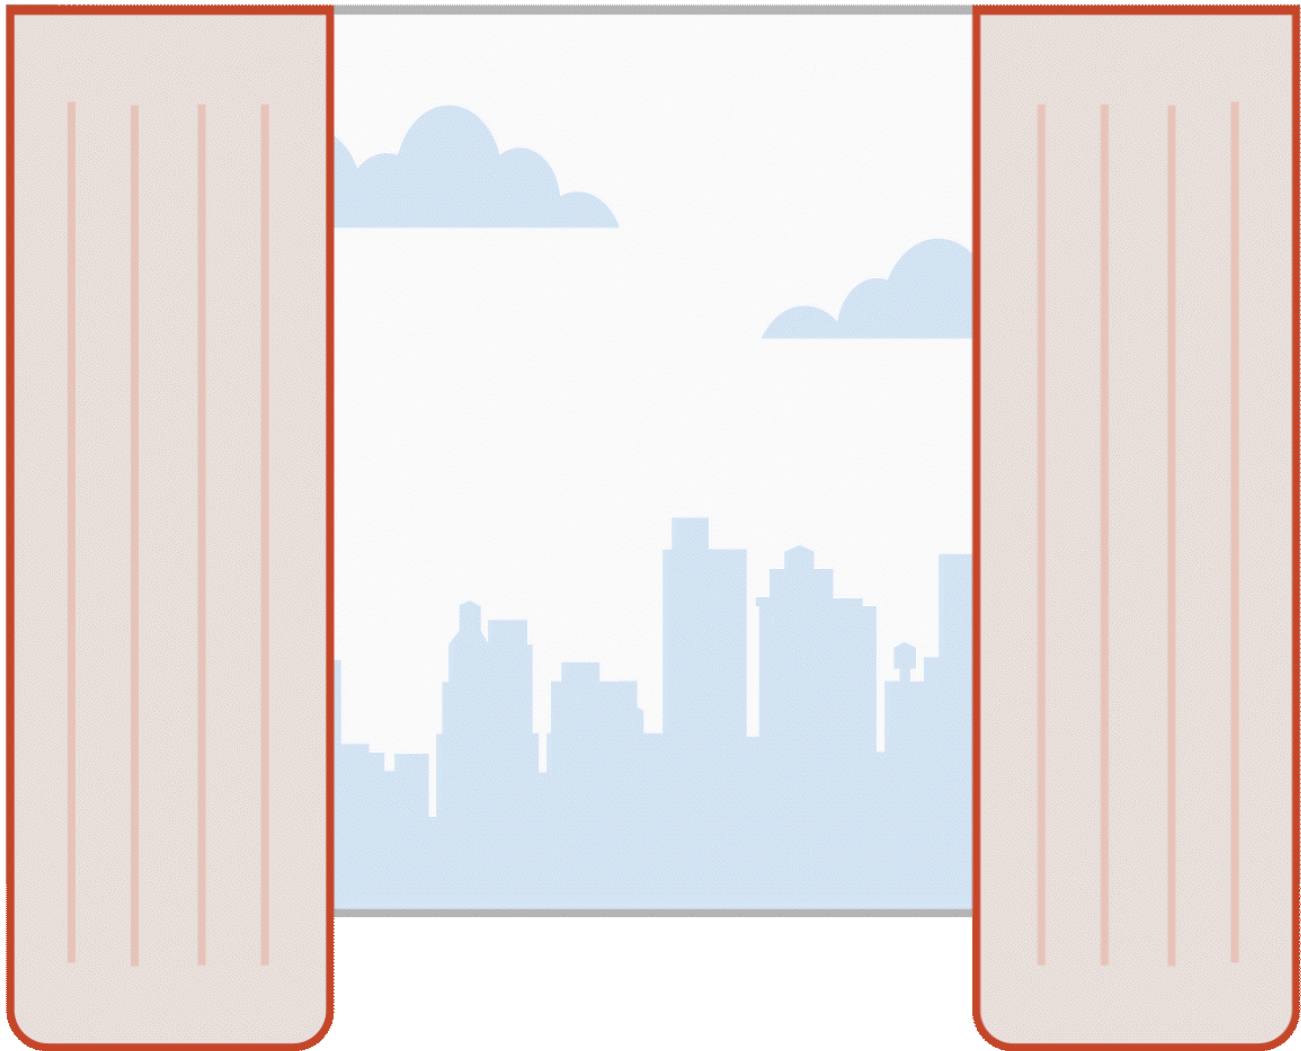


Curains open / close down the middle  
2 SmartCurtain devices

Curtain closes to the left →21

Curtain closes to the right →21

Curains open / close down the middle →22

## Installation Complete

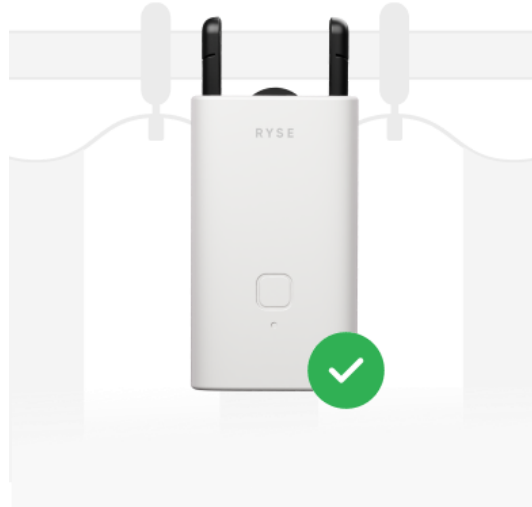

**Your SmartCurtain has been successfully installed onto your curtain rod!**

Please click the "x" icon in the top right corner of the screen to exit this tutorial.

## Curtain Rod Lip




Is the lip in the center of your curtain rod?

No →21

Yes →27



## Install Tape in device path

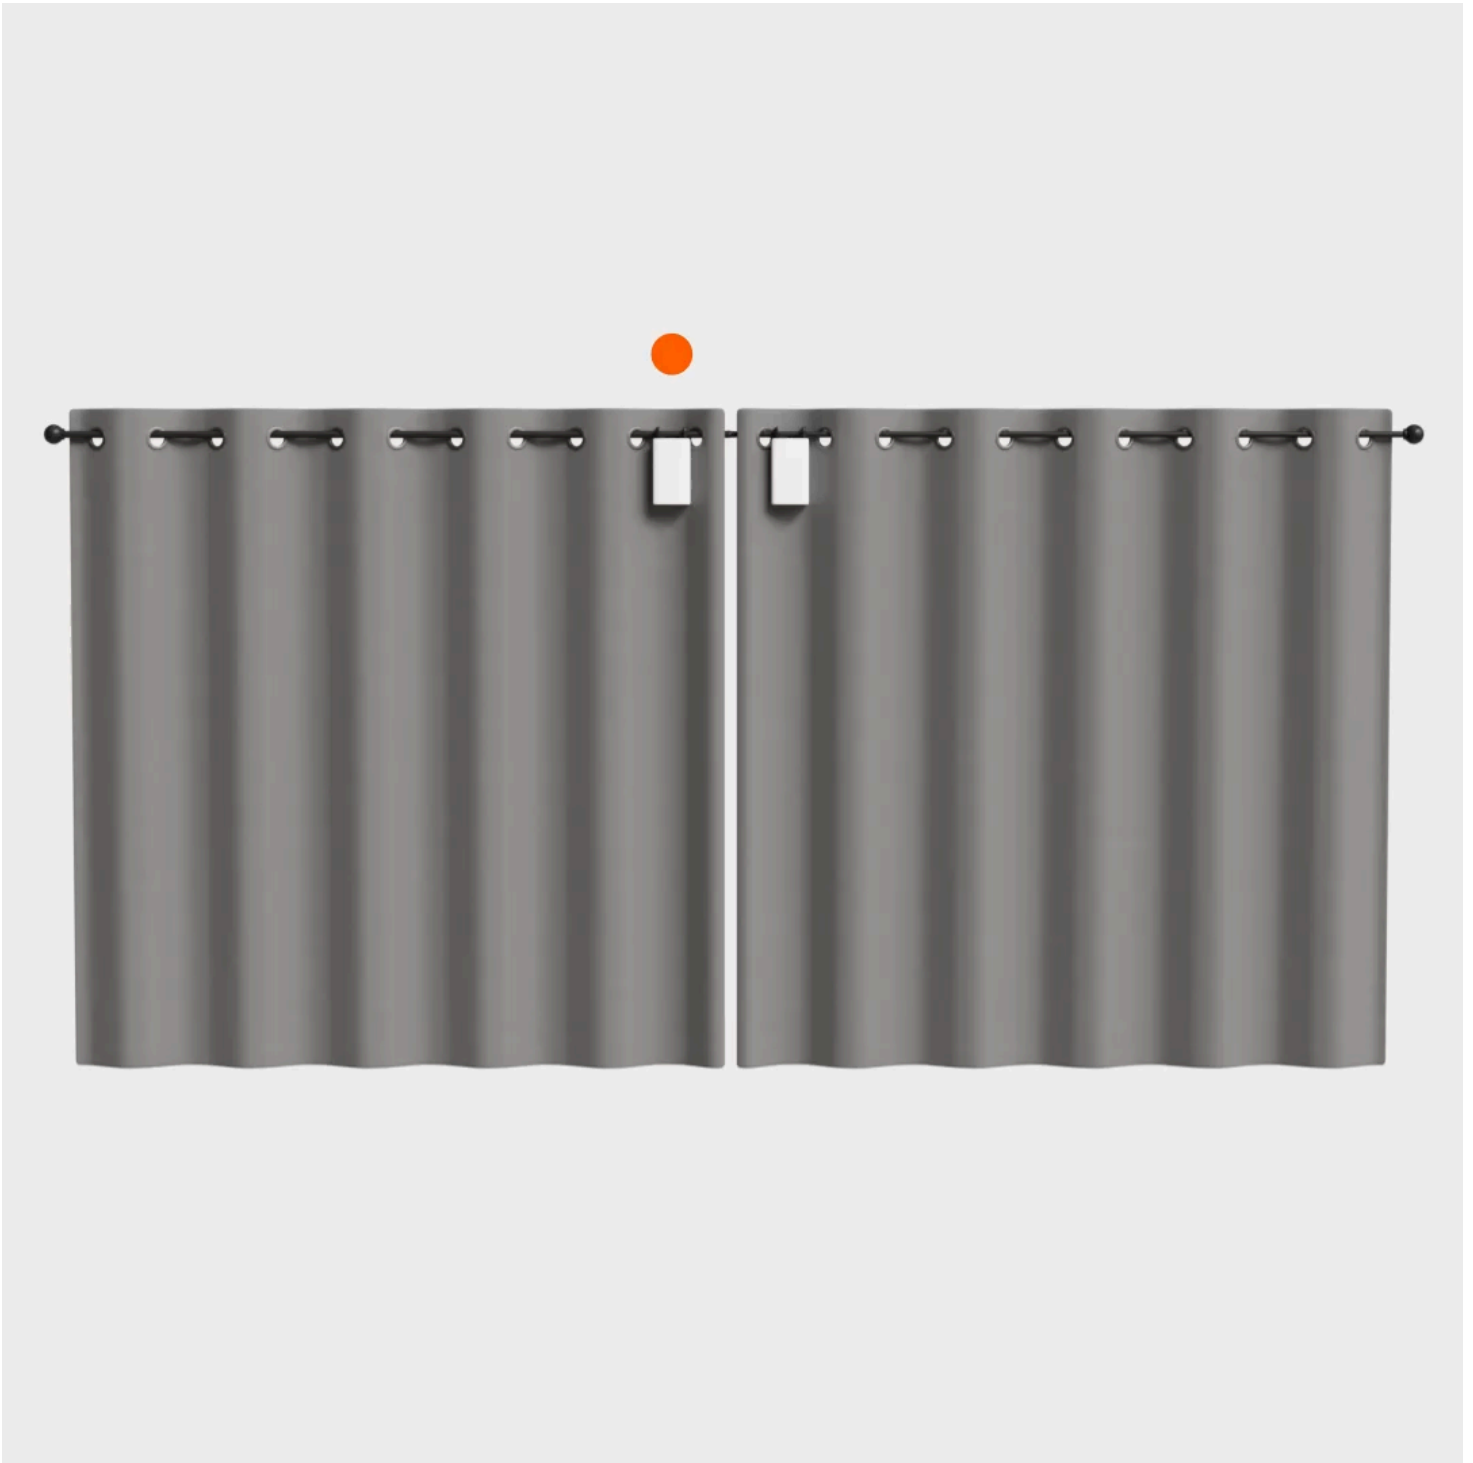

You will be installing the tape at the halfway mark of your SmartCurtain's travel path.

Got it →25



## Install Tape in device path



You will be installing the tape at the halfway mark on your curtain rod.

Got it →25



## Install Tape in device path



If your rod is dusty, please wipe it clean before continuing. Peel the backing from the tape provided. Carefully align the tape with the top of your curtain rod. Place the tape and press firmly to secure it in place.

Next →21

## Install Tape in device path



You will be installing the tape at the halfway mark on your curtain rod.

Got it →25



## Install Tape in device path



You will be installing another tape at the halfway mark of your SmartCurtain's travel path.

Got it →25

