


USER MANUAL



Thank you for purchasing this product.
Please read user manual carefully before using.

PRED
TECHNOLOGIES™

◆ OVERVIEW

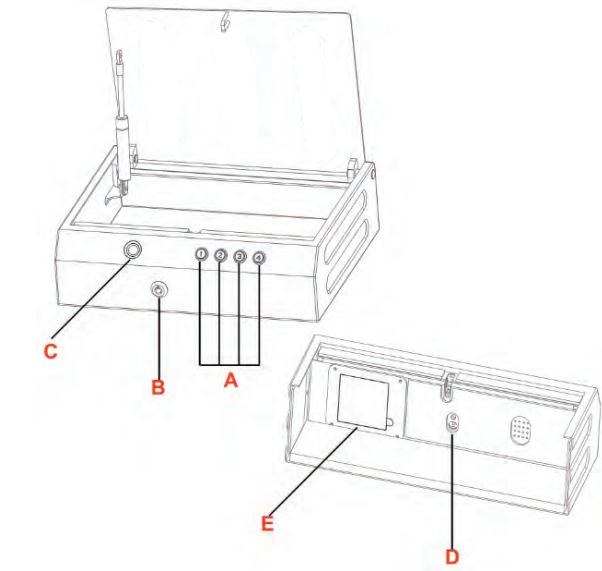

A: Digital Button (1 2 3 4)
B: Keyhole
C: Fingerprint Biometric Reader
D: Setting/Resetting Button
E: Battery Compartment

◆ Warm Tips:

- 1) For the key, please make sure it 's kept with you and do not place it inside the safe box.
- 2) After successful setting password later, even if you are replacing the batteries, this device does not have a voice reminder to setting as it has been stored.
- 3) During setting , we suggest all process should to be operating continuous and not interrupt .otherwise , setting should be started from scratch again.
- 4) It will be effective when we press the digit button accompanied by it beeps sound ,so it should be slow and power enough to press the button.

◆ Low power warning

If the battery power is low, it will automatically remind the low power warning ,which mean we need to replace new batteries in time.

◆ Specification

Power source: 4 AA 1.5V batteries (excluded)
Accessories: 1 safe box ,screws, 2 anchors,
1 user manual,2 Keys
Materials: Stainless steel
Safe entry: Key unlock, 6 digit PIN code and fingerprint input
Dimensions: 34cm*27.5cm*9.8cm

◆ Q&A:


1. Why the lid of safe box can not be closed?
because the key do not have pull out, what you need to do is to pull out.the key or rotate its place towards counterclockwise

2. Can the safe box be opened by Random 6 digit passwords or fingerprint before setting?
- Yes, Enter Random 6 digit passwords or fingerprint can open it.
3. Why the safe box can NOT be opened by the fingerprint & 6 digit passwords after setting?
1) It's possible your setting is NOT successful & must be setting again.
2) If you make sure your setting is completely correct, pls try to open the safe box by the KEY.
(If it's still failure to open by the key, It's most likely for the safe box comes with something wrong, pls reach us by e-mail in time)
4. Why the safe box can NOT be opened by the fingerprint or 6 digit passwords after you donot use it for a long time later?
-1) It should be without an power for battery ,you need to open by the key and replace the battery in time.
-2) If the safe box still can not be opened by the key, It's most likely.
for it comes with something wrong,pls reach us by e-mail in time.
- 5.How to mount the safe box ?
Take out the screws and Anchors , install and place the safe box in to in which you want to mount.
- 6.How to turn on/ turn off the alarm sound ?
Please long press the Digit 4 button for 5 seconds, it can be switched between turn on and turn off the alarm sound (Note: Default for the alarm sound is opened) . Also once the alarm is sound , we have to wait for 4 minutes later, it will automatically disappear .


◆ How to Setting Password (6 digit PIN code)?



1. Use the enclosed Key to Open the safe box
(Note: Keep the key outside the safe box)

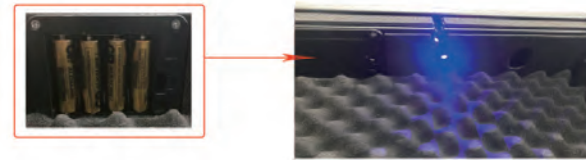

- 2.Load the 4 AA 1.5V batteries (Not included) into the safe box ,we can hear the 1st voice prompt: please Long press <<Setting Button>>, please set up Six digit password.

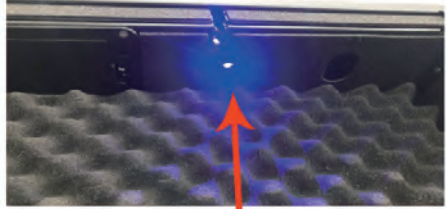

3. Long press the <<Setting Button >> for 5 seconds please we can hear the 2nd voice prompt "please setup Six digit password" .



4. Enter a 6 digit password, then we can hear the 3rd voice prompt "please repeat input six digit password" .



5. Re-enter a same 6 digit password
6-1) if the both input digit password is same, we can hear "Successful setting"

- 6-2) if the both input passwords is not same later, we can hear "Unsuccessful setting "
(if now we hear Unsuccessful setting, All process need to come back to step 3)

◆ Please note :


If you need to setup a new password , please long press <<setting button>> for 5 seconds , then repeat above same steps to setting.

◆ How to Setting Fingerprint?

- 1)Six digit code must be setup firstly and ensure it's successful setting.



- 2)Place fingertip on biometric reader we can hear a voice prompt: please setup fingerprint ,please short press digit "1" button, then long press Setting button.

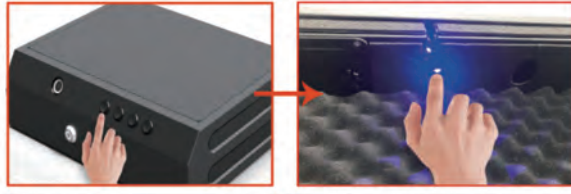

- 3)Short press digit "1" button, then follow by long press Setting button until hear a voice prompt "please setup fingerprint" to release button.



- 4) Place fingertip on reader (First Time), until hear a voice prompt "please input fingerprint again" to release.



- 5)Again place the fingertip on reader , this same process must be repeat for 5 times normally until hear successful setting.

- 6)We should hear a voice prompt "successful setting" .

- 7)Close the lid and test fingerprint.

◆ Please Note :

- 1.After first fingerprint, you will not get the initial voice prompt to setup fingerprint immediately after you put your finger on the reader. Because you already have a fingerprint in the system. So you have to short press digit " 1 " and then long press the setting button to engage the fingerprint setup moving forward.

- 2.If you need to remove the fingerprint, please long press <<setting button>> for 5 seconds, then priority setting password (6 digit PIN code) . later follow by setting fingerprint according to the steps of setting fingerprint.

- 3.If you need to add more one group of fingerprint (at most add 20 groups of fingerprint): please short press <<digit 1 button>>, then long press <<setting button>> until hear the sound reminder : please setup fingerprint , to release button, then go into next few steps according to above step 4 until successful setting fingerprint.

Pred Technologies USA Inc Customer Service

Thank you for your purchase. We hope you will enjoy your new TOKK SAFE.

If you encounter any issues setting it up and/or using your new Safe, please do not hesitate to call us and we will be very happy to help you. You can also watch our step by step demo video on our website: www.tokktech.com

Our customer service email is contact@predtechnologies.com
Our customer service phone number is +1 858 999 2114 ext. 1

Pred Limited Warranty

Pred Technologies USA Inc. warrants this product against defects in material or workmanship as follows:

1. Labor and Parts: For a period of 90 days from the date of purchase, if this product is determined to be defective, Pred Technologies will repair or replace the product, at its option, at no charge.
2. Proof of purchase in the form of a bill of sales or receipted invoice which is evidence that the unit is within the Warranty period must presented to obtain warranty service.
3. To obtain warranty service, please contact our customer support center: Via email contact@tokktech.com or call 1 858 999 2114 ext. 1

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Thanks

Pred Technologies USA Inc.

© 2022 PRED Technologies USA Inc. All Rights Reserved.
Features, specifications and appearance are subject to change without notice.
Distributed by: PRED Technologies USA Incorporated,
7855 Fay Avenue, La Jolla, CA 92037
www.predtechnologies.com

Quick set up guide:

TOKK™ SAFE PL15

PRED
TECHNOLOGIES™



Thank you for your order. We hope you will
Enjoy your new TOKK SAFE KB15.

Below is our quick set up guide.

If you want more details please refer
to the complete instruction manual.

If you encounter any issues setting
up your new Safe do not hesitate
to call us and we will be very happy to help you.

Our customer service phone number is
+1 858 999 2114 ext 1.

Step-by-step guide

1. To start: Use the black key ① to open the safe. Once the safe is open, locate the battery holder ② (Inside Safe) Insert 4 AA batteries into the battery holder ②.

2. You are now ready to set up a 6-digit PIN code!

Long press the Setting/Reset Button ③ located on the inside of the safe to the left of the battery holder ②.

After the voice prompt "Please setup Six digit password", insert your desired 6-digit PIN code ④.

Once you have inserted your desired 6-digit PIN code, a voice prompt "please repeat input Six-digit password" will play. Re-insert the same 6-digit PIN code ④.

You have successfully set up your 6-digit pin code if you hear a last voice prompt "Successful setting"

*If voice prompt "Unsuccessful setting" plays, please restart from step 3.1 and try again.

A new password can be set at any time by repeating these steps.

To ensure you have setup your 6-digit PIN code successfully, close your safe and attempt to open it using your 6-digit PIN code.

3. You are now ready to set up a fingerprint! While the safe is open, place your fingerprint on the biometric fingerprint reader ⑤. Voice prompt "please setup fingerprint" will play. Short press the digit button "1" ④, then long-press the Setting/Reset button ③. Voice prompt "please setup fingerprint" will play.

Place fingerprint on biometric fingerprint reader ⑤ until a voice prompt "please input fingerprint again".

Release your fingerprint and repeat the process until the voice prompt "successful setting" plays.

*if voice prompt "unsuccessful setting" plays, restart from step 3

To ensure you have setup successfully, close your safe and attempt to open it using your fingerprint scan.

4. In order to add a new fingerprint, open the safe and short press the digit button "1" ④ and long press the Setting/Reset button ③. Repeat step 3.

5. In order to delete all fingerprints from your safe, ensure your safe is open.

Once open, long press Setting/Reset button ③ for 5 seconds. A voice prompt "please setup 6-digit PIN code"

"Follow steps 2. To insure the fingerprints have been deleted, close the safe and tap the biometric fingerprint scanner.

PRED Technologies USA Inc.
7855 Fay Avenue
La Jolla, CA 92037

1-858-999-2114
contact@predtechnologies.com
www.predtechnologies.com

PRED
TECHNOLOGIES™