

105 mm



Penguin™ Slim Massager Operating manual



Introduction

Relax and rejuvenate anytime with the handheld Slim Massager. Designed for effortless, full-body relief, it delivers soothing vibrations that melt away tension. Compact and rechargeable, it's perfect for busy lifestyles, providing a spa-like massage at home. Comfortable, safe, and versatile, it transforms everyday moments into a pampering experience.

Product Specifications

- Strength: 5
- Dimensions: 7.6" x 3" x 3"
- Weight: 1.27 lbs
- Rated power: 25W
- Rated voltage: 5V
- Motor: 2900r/min±5%
- Noise Level: <65 dB (at 30cm)
- Applicable for Full-Body Use
- Working voltage: 3.7V
- Charging: 5V/2A
- Rechargeable battery: 1,500mAh
- Charging time: ≈2hrs
- Using time: ≈40 minutes
- Item weight: 1.27 lbs
- Main unit: 7.58"x 2.98"x 2.98"
- Auto-off: 15 minutes
- USB Charging (Type-C)
- UPC 850073782132

Content

CONTENTS	Safety Warnings.....	4
	Product Illustration.....	4
	Operating the Product.....	5
	Consumer Warranty.....	6
	Warranty Card.....	6


136 mm

Safety Warnings

Consult your doctor before using this product if you have any lesions, skin conditions, heart issues, pacemakers, or other health-related concerns.

1. This product is intended for adult use only.
2. Do not let babies and children play with the product.
3. Do not use the product on an infant.
4. If you experience discomfort, stop using the product immediately.
5. Do not wash the unit using organic solvent such as thinner to prevent damage.


Product Illustration

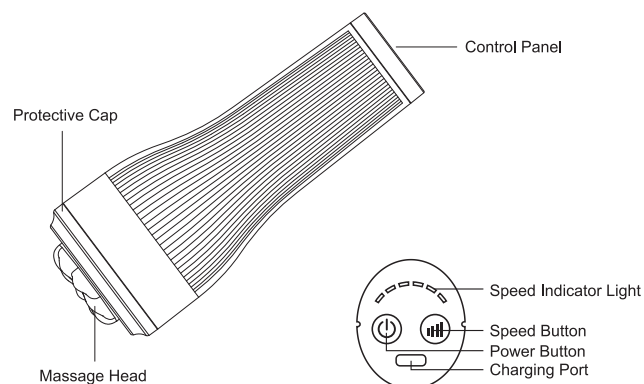

Operating the Product

1. Press and hold the Power Button to turn on the device.
2. The default speed level is Level 1 when powered on. Six speed levels for adjustment.
3. Press the Speed Button to adjust the speed. After operation stops, the device will enter a 15-minute countdown mode.
4. After use, press the Power Button to turn off the device.
5. If the protective cap becomes dirty, it can be removed and cleaned.

CHARGING INSTRUCTIONS

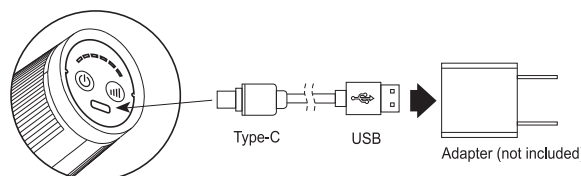

1. Before charging, make sure the protective cap and bottom cover are securely closed.
2. Connect the USB cable to the charging port on the control panel.
3. Connect the cable to a 5V--- 2A adapter and plug it into a power source.
4. During charging, the battery indicator lights will flash sequentially, indicating the device is charging. When fully charged, the battery indicator lights remain solid.

Notes:

- The device cannot be operated while charging;
- The charger and device may become slightly warm during charging, which is normal.
- If the device is not used for an extended period, fully charge the battery at least once a month.

Recommend usage: daily
To order a new health and beauty product, please visit www.prosperacorp.com.

Use coupon code: PROS\$5 for \$5 off any product above \$30.

Consumer Warranty

Prospera offers a 90-day standard warranty on massage products. Labor and parts are included during the warranty period. Please provide the model number and dated proof of purchase (sales receipt) when contacting Prospera for warranty service.

Non-warranty service is provided on a "per incident" basis. The consumer will verify that the product has failed and provide information for servicing the unit. All applicable repairs, parts, shipping, handling, local tax and "per incident" fees will be charged for non-warranty repairs and support calls.

Warranty Card

prospera

Warranty Registration Form

Product Name: _____

Product Model: _____ Purchase Price: _____

Date of Purchase: _____ Retailer: _____

First Name: _____ Last Name: _____

Address: _____

City: _____ State: _____ Zip: _____

Phone: _____ Email: _____

Signature and date: _____

Please mail to: _____ Tel: (925)292-5978

Prospera Corporation _____ Email: sales@prosperacorp.com

392 West Larch Rd Suite 31

Tracy, CA 95304-1644