



Name of each part of the product

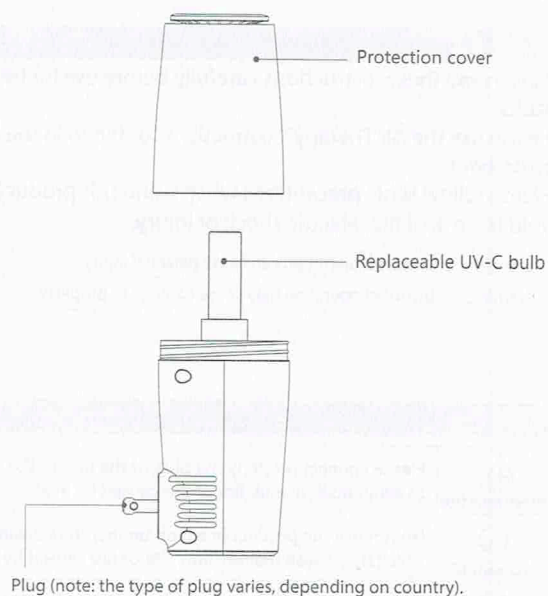

Accessories

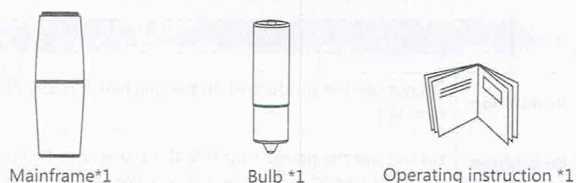

03

Operating mode

1. Insert the machine into the socket of 120V~ 60Hz alternating current, and the product will start working automatically.
2. For best results, use product in a regular 10-square-meter room.
3. When changing rooms, please pay attention to the safety of plugging and unplugging.
4. Please refer to the above steps and methods when changing the bulb.

Usage tip


The life of a UV-C bulb is typically 5,000 hours. It is suggested that UV-C bulbs be replaced approximately every 6 months (depending on usage). If a significant decrease in brightness or change in color happens, you should change the bulb.

Troubleshooting guide

Issue	Solution
Not Working	Check the connection of the power and socket.
	Call customer service.
Flashing lights	The bulb burned out. Refer to the "replace UV-C bulb" section of the manual.
The fan is on without light.	

05

Steps for replacing UV-C bulb

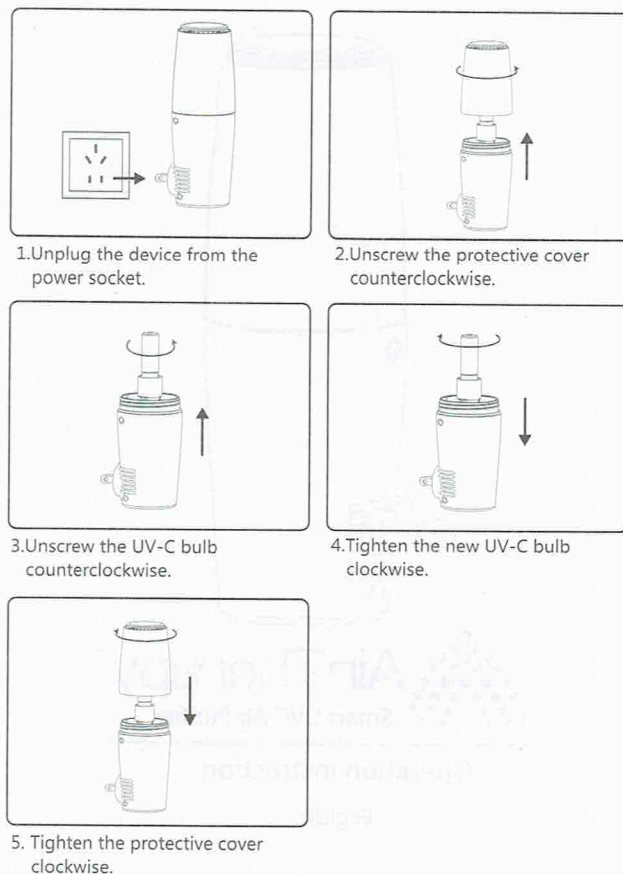

04

Product standard

Name of product	Portable UV Air Purifier
Model of product	H04
Operating voltage	120V~ 60Hz
Rated power	4.5W
Operating noise	≤ 60DB
UV illuminant	253 nm UV - C bulb

Note: In order to better serve our customers, the relevant parameters of the product may be optimized or changed without prior notice. Please understand.

WARRANTY

1. Damage caused by failure to follow the instructions, human factors, force majeure, etc., is not covered by warranty. Maintenance cost will be charged for product out of warranty. You can register for your warranty at www.IGIA.com. In order for this free warranty to be valid and to allow us to meet your requirements, please register your purchase(s) with IGIA.com. Please visit www.IGIA.com and complete all details. You must have a valid email address to register. Please retain original receipt to validate your purchase.

DISCLAIMER:

In the process of preparation of this manual, we have sought to make the content correct and complete. However there is no guarantee that there are no errors or omissions in the manual. We reserve the right to change specifications of the products mentioned in this manual at any time without prior declaration. No part of this manual shall be reproduced, transmitted, transcribed, or stored in a searchable system or translated into any other languages without the written authorization of our company. The company is not responsible for the loss caused by non-standard or wrong operation.

The Air Therapy™ system does not guarantee specific results for individuals who use Air Therapy™ due to many factors that can influence health & environment. Air Therapy™ is not intended to diagnose, treat, cure or prevent any disease, illness or medical condition. Individual results may vary. We make no warranties or guarantees. No individual results should be considered typical or guaranteed. The results of Air Therapy™ may be temporary. The appearance of the product may vary. Customer Service Phone: 516-723-9947 Email: Sales.IGIA@gmail.com www.IGIA.com.

06