


## Product description (Windows)

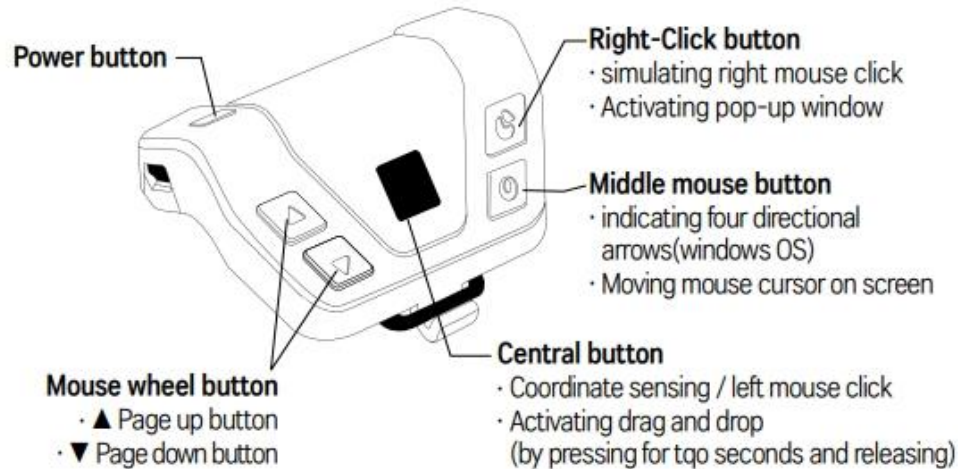

• Mouse wheel buttons work in the opposite direction in Apple products

## Product Composition



Body



2 silicone rings



Product manual

## Basic Product information

### 1. Compatible Specification

Windows 8 and 10 or higher, Mac iOS, Android, iOS 5.0 or higher

### 2. Connection via Bluetooth V4.1

Use the dongle for desktops or laptops that does not support Bluetooth

### 3. How to recharge

- Micro 5-pin charger cable
- When LED on body's upper side turns blue, the device is fully charged

### 4. ON / OFF

- The LED lights will be lighted when you press the button to turn the device on
- Press the power button for two seconds to turn it off

### 5. Sleep mode

- The cursor in a device vanishes if you do not use your product in 1~3 minutes it may vary depending on your device.

## Applications

This is a wearable mouse can applicable to your Smartphone, Tablet PC, Laptop, Smart TV and etc. You can use as a remote control for selfie / camera / e-Book / YouTube / Netflix for your smartphone, tablet and mouse for laptop in your comfortable position. Also, You can use it a Presentation pointer for your lecture.

You don't have to install application or program, just connect to Bluetooth.

## Button functions and Pointer Settings

### ► Button action in mobile

- Right-Click button : 'Back key' function
- Mouse wheel button : 'Home key' function
- ※ 'Home key' function works in Samsung / Apple Smartphone, Tablet.

### ► How to adjust Pointer speed & size (Android)

- Pointer speed : Settings > General management > Language and input > Adjust the sensitivity at 'Pointer Speed'
- Pointer size : Settings > Accessibility > Visibility enhancements(Vision) > Activate 'Large mouse / touchpad pointer(cursor)'

### ► Applying Assistant menu :

Functions such as volume control and screenshot can be used remotely

### ► Reading mouse function :

it reads all the text where the cursor moves on.

※ Refer to a back page 'How to Connect & Apply to Android 5.0 or higher device(smartphone/tablet)'

## Safety Precautions

Please read the following information carefully before using this product.

### ■ Accidents may be caused by fire and explosion.

- Do not cause shock or damage to the product.
- Be careful that conductive materials (metal, liquid, etc.) get contacted on charger connector or connection terminal.
- Do not touch the product with wet hands or use it in a humid environment (toilet, swimming pool, water-shore, etc.).

### ■ The product may be damaged or the human body may be injured.

- Be careful that infants and pets suck or bite the product.
- Proper usage and storage temperature of our product is 10 - 35 degrees (Celsius) and the use under other temperature range may damage the product or shorten the battery life.
- Do not use the product in the following environment.  
(Microwave oven, fireplace, sauna, electric pad, inside the vehicle in the summer, etc.)
- Place the product in a dry place free from moisture or humidity.
- Do not use the product outdoors when thunder or lightning strike.
- While driving, comply with the relevant laws or road safety regulations regarding the use of the product.

### ■ Using the product may cause damage to peripheral devices and equipment.

- Do not use the product near vehicles, aircraft, hospital or medical device which may be affected by Bluetooth communication frequency.  
Electromagnetic waves from the product may affect medical devices or electronic navigation equipment.
- Do not use the product within 15 cm from the pacemaker because electromagnetic waves from the product may affect the pacemaker when connecting to other devices using the Bluetooth function. Be sure to keep 15cm distance from the pacemaker if a product must be used.

### ■ Cleaning and Maintenance Precautions

- Do not use strong chemicals or detergents to clean the product.  
(The outside of the product may be discolored or corroded.)
- Gently clean the product with a soft cloth and be careful not to scratch it.
- If a user modifies, disassembles, or repairs the product arbitrarily, the warranty will be void.
- If the product is damaged, do not use the product in a damaged condition.  
(Be sure to use the product after consulting with Hitron's Customer Service Center, for it may cause hand or face injury.)
- Do not discard the product in a fire or place the product near heat source (fireplace, microwave, etc.), heating cooker, and high-pressure vessel.
- Do not puncture the product (it may stop functioning or damage the human body).

In case of failure to comply with above precautions, the warranty service shall not be applied.

## Warranty & Policy

Product Name	Wireless Wearable Finger Mouse	Agency Name	Hitrons Solutions Inc.
Model Name	GMT-001BP	Agency E-Mail	cs@hitronsinc.com
Color	Black Pearl	Agency Tel	1-800-515-3430 (Mon - Fri 9am-5pm EST)
		Agency Address	88 Portland Avenue Suite M Bergenfield, NJ 07621

# Specifications

Product Name	Wireless Wearable Finger Mouse
Size	46 (W) x 45(D) x 25(H) mm
Weight	17g
Sensor Method	Optical Sensor
Wireless Specifications	Bluetooth V 4.1 Low Energy / Frequency Range 2,402 MHz ~ 2,480 MHz ~ / Output Power -1.5 dBm +_ 1 dB
Battery Type	Lithium Polymer 3.7 V / 80mA
Charging Time	15~40 min
Charging Method	Micro-USB 5PIN (5V) / 1A
Connection Method	Bluetooth V4.1 over
Receive Distance	5 ~10 Meters
Operating Systems	Windows 10 Mac OS, Chrome OS, Android 5.0 over iOS 13 iPad OS over