
SHARPER IMAGE®

ROLLING TOOLBOX STOOL

Item No. 206680

User Guide

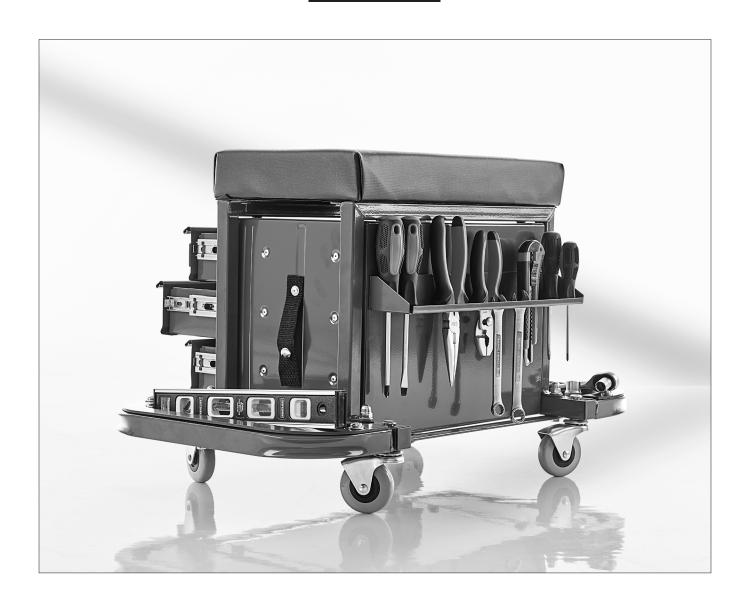

Thank you for purchasing the Sharper Image Rolling Toolbox Stool. Please take a moment to read these instructions and store them for future reference.

INTRODUCTION

The Rolling Toolbox Stool is the perfect seat for projects and auto repair. It supports up to 300 lbs. to hold you and your favorite tools.

FEATURES

- · Combination rolling stool and toolbox
- · Heavy-duty steel frame
- · Supports up to 300 lbs.
- · PVC swivel casters
- · Three padded drawers to protect tools and small parts
- · Rear tool/screwdriver holder
- · Two foldable easy-access magnetic tool trays
- · Comfortable seat cushion


UNPACKING

WARNING! Do not operate this device if any parts are missing. Contact Sharper Image Customer Service immediately for assistance.

- Remove the parts and accessories from the packaging and inspect for damage.
- · Make sure that all items in the parts list are included. Failure to do so could result in a malfunction and personal injury.

PARTS LIST

Part No.	Description	Qty
1	Stool Pad	1
2	Body	1
3	Drawer	3
4	Side Tray Frame	2
5	Tool Holder Shelf	1
6	Side Tray	2
7	Caster	4
8	Tube Cap	4
9	Buckle	2
10	Sleeve Nut	4
11	Bolt M 8x12	4
12	Bolt M 6x40	4
13	Bolt M 8x65	4
14	Bolt M 6x12	2
15	Washer M 8xD16	4
16	Washer M 8xD22	4
17	Washer M 10	4

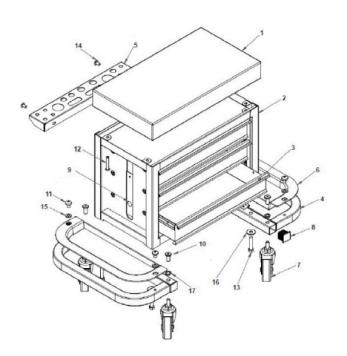

ASSEMBLY INSTRUCTIONS

- 1. Assemble Casters (7) through the holes on the Side Tray Frame (4) and secure in place using Sleeve Nuts (10). Tighten securely using a hex key.
- 2. To assemble the magnetic Side Trays, inset Bolt (13) through Washer (16) and Side Tray Frame and into the Body Frame (2).
- 3. To assemble the Tool Holder Shelf (5), screw the Bolt (14) through the holes in the Shelf and into back side of the body. **Note:** The Side Tray Frames can fold up and be secured to the seat body using the Buckles (9).

SPECIFICATIONS

Load Capacity 300 lbs.

Frame Material Steel Construction

Caster Size 2.5 in.
Number of Casters 4

SAFETY INFORMATION

WARNING! Please read and understand all instructions before using this tool. The operator must follow basic precautions to reduce the risk of personal injury and/or damage to the device.

- · Use this device for its intended purpose only.
- · Do not modify this device. Follow the instructions carefully.
- Do not operate this or any tool under the influence of drugs or alcohol.
- · Always wear eye protection when using tools.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.